

Ship Structure Detail Design



Overview

- Conventions

What's New?

Getting Started

- Opening the Product to Work On
- Adding Plating
- Adding Stiffening
- Adding Slots & Trimming Stiffening
- Adding Openings

User Tasks

- Splitting Design into Blocks
 - Building the Block Scheme
 - Generating Detail Design Blocks
 - Starting Detail Design from Scratch
- Creating Structural Systems
 - Creating Plating Systems
 - Creating Plating with Free Edge
 - Creating Stiffening Systems
 - Creating Stiffening on Free Edge
 - Creating Inserting Systems
 - Creating Openings
 - Creating Beaming Systems
 - Mitering
 - System Split
 - Straking
 - Merging
 - Generating Plates & Shapes
- Connecting Structural Elements
 - Automatically Connecting Structural Elements
 - Manually Connecting Structural Elements
 - Refining or Modifying Connections
- Creating Physical Plates & Shapes
 - Creating Plates
 - Creating Shapes
 - Creating Small Assemblies
 - Placing Cutouts
 - Removing & Modifying Cutouts
 - Placing Standard End Cuts
 - Placing Contextual End Cuts

- Placing and Modifying Standard Slots
- Placing Contextual Slots
- Defining Cutback
- Coping Plates & Shapes
- Splitting Plates & Shapes
- Merging Plates & Shapes
- About Section Catalogs
- Customizing Standard Views
- Design Assistant
- Drawing Production
 - Using Generative View Styles
- Managing Your Project
 - Managing Project Resources
 - Using the PRM Command
 - Understanding Project Resource Management
 - About the Feature Dictionary
 - About Object Naming Rules
 - About Molded Conventions
 - About Project Parameters
- Naming Section Characteristics
- More About Catalog Slots, Endcuts & Small Assemblies
 - Creating Catalog Slots
 - Creating Catalog Endcuts
 - Creating Catalog Small Assemblies
 - Storing Slots, Endcuts & Small Assemblies in a Catalog
 - Rules and Recommendations
- More About Openings
 - Defining Positioning Strategies for Openings
 - Defining Parametric Contours for Openings
 - Openings Catalog
- Structure Detail Design Package in Knowledge Expert

Interoperability with ENOVIA LCA

- Optimal CATIA PLM Usability
- Recommended Methodology

Workbench Description

- Menu Bar
- Block Toolbar
- Structural Systems Toolbar
- System Interactions Toolbar
- Physical Plates & Shapes Toolbar
- Tools Toolbar
- Keyboard Shortcuts

Reference Information

- User Features
- Catalog Slots, Endcuts and Small Assemblies
 - T-Shape Endcuts
 - L-Shape Endcuts
 - Bulb-Shaped Endcuts

T-Shape Slots
L-Shape Slots
Bulb-Shape Slots

Glossary

Index

Overview

Welcome to the *Ship Structure Detail Design User's Guide*. This guide is intended for users who need to become quickly familiar with the Ship Structure Detail Design Version 5 product.

This overview provides the following information:

- [Ship Structure Detail Design in a nutshell](#)
- [Before reading this guide](#)
- [Getting the most out of this guide](#)
- [Accessing sample documents](#)
- [Conventions used in this guide](#)

Ship Structure Detail Design in a Nutshell



Version 5 Ship Structure Detail Design provides a set of tools for structure designers who must complete their functional design and carry out their detailed design.

The overall ship design project goes through a number of different phases from conceptual design through functional and detail design to extraction of deliverables. This product addresses detail design requirements for the shipbuilding industry. In particular, it lets you:

- Split your functional design into blocks
- Add secondary structures
- Capture functional connectivity and physically implement connections by means of piece parts and joints
- Create design features such as endcuts, slots, cutouts, etc.
- Capture weld joint locations and efficiency
- Generate plates and shapes to initiate the manufacturing view.

Ship Structure Detail Design makes wide-scale use of knowledgeware capabilities to implement connections and create design features. It includes tools that speed up the design process, such as the ability to rapidly copy small repetitive assemblies or to quickly subdivide a large part into the separate plates from which it would be fabricated as well as sample catalogs of slots, endcuts and small assemblies.

All Ship Structure Detail Design commands share a consistent Windows graphical interface which reduces training time and greatly increases ease of use.

As a scalable product, Ship Structure Detail Design can be used with other Version 5 products such as Generative Shape Design, Generative Drafting and knowledgeware products.

Before Reading this Guide



Before reading this book, you should be familiar with basic Version 5 concepts such as document windows, standard and view toolbars. We therefore recommend that you read the *Infrastructure User's Guide* that describes generic capabilities common to all Version 5 products.

You may also like to read the following complementary product guides, for which the appropriate license is required:

- *Generative Shape Design User's Guide*
- *Generative Drafting User's Guide*.

Getting the Most Out of this Guide



To get the most out of this guide, we suggest that you start reading and performing the step-by-step tutorial [Getting Started](#). This tutorial will let you get acquainted with the product.

Once you have finished, you should move on to the [User Task](#) section of this guide. This steps you through basic procedures and includes useful tips for getting the most out of the product.

The [Workbench Description](#), which describes the Ship Structure Detail Design-dedicated toolbar will also certainly prove useful. A [Glossary](#) of terms specific to Ship Structure Detail Design and a [Reference Information](#) section for administrators have also been included in this guide.

Navigating in the Split View mode is recommended. This mode offers a framed layout allowing direct access from the table of contents to the information.

Accessing Sample Documents



A sample document is provided for the Getting Started tutorial. It is located in the **online/sddug/samples** folder. This sample document can profitably be used as a basis for other scenarios in this guide.

Conventions

Certain conventions are used in CATIA, ENOVIA & DELMIA documentation to help you recognize and understand important concepts and specifications.

Graphic Conventions

The three categories of graphic conventions used are as follows:

- [Graphic conventions structuring the tasks](#)
- [Graphic conventions indicating the configuration required](#)
- [Graphic conventions used in the table of contents](#)

Graphic Conventions Structuring the Tasks

Graphic conventions structuring the tasks are denoted as follows:

This icon...



Identifies...

estimated time to accomplish a task

a target of a task

the prerequisites

the start of the scenario

a tip

a warning

information

basic concepts

methodology

reference information

information regarding settings, customization, etc.

the end of a task



functionalities that are new or enhanced with this release

allows you to switch back to the full-window viewing mode

Graphic Conventions Indicating the Configuration Required

Graphic conventions indicating the configuration required are denoted as follows:

| This icon... | Indicates functions that are... |
|--------------|----------------------------------|
| | specific to the P1 configuration |
| | specific to the P2 configuration |
| | specific to the P3 configuration |

Graphic Conventions Used in the Table of Contents

Graphic conventions used in the table of contents are denoted as follows:

| This icon... | Gives access to... |
|--------------|------------------------------|
| | Site Map |
| | Split View Mode |
| | What's New? |
| | Overview |
| | Getting Started |
| | Basic Tasks |
| | User Tasks or Advanced Tasks |
| | Interoperability |
| | Workbench Description |
| | Customizing |
| | Administration Tasks |
| | Reference |



Methodology

Frequently Asked Questions

Glossary

Index

Text Conventions

The following text conventions are used:

- The titles of CATIA, ENOVIA and DELMIA documents *appear in this manner* throughout the text.
- **File** -> **New** identifies the commands to be used.
- Enhancements are identified by a blue-colored background on the text.

How to Use the Mouse

The use of the mouse differs according to the type of action you need to perform.

Use this mouse button... Whenever you read...



- Select (menus, commands, geometry in graphics area, ...)
- Click (icons, dialog box buttons, tabs, selection of a location in the document window, ...)
- Double-click
- Shift-click
- Ctrl-click
- Check (check boxes)
- Drag
- Drag and drop (icons onto objects, objects onto objects)



- Drag
- Move



- Right-click (to select contextual menu)

What's New?

No enhancements in this release

Getting Started



This tutorial will guide you step-by-step through your first Ship Structure Detail Design session, allowing you to get acquainted with the product.



You will need a CATIA Version 5 session and should be familiar with basic concepts such as document windows, standard and view toolbars.



You should be able to complete this tutorial in about 20 to 30 minutes.

[Opening the Product to Work On](#)

[Adding Plating](#)

[Adding Stiffening](#)

[Adding Slots & Trimming Stiffening](#)

[Adding Openings](#)

Opening the Product to Work On




This first task shows you how to open a CATProduct, enter the Structure Detail Design workbench and customize your settings.



1. Select **Equipment & Systems** -> **Ship Structure Detail Design** from the **Start** menu.

The Ship Structure Detail Design workbench is loaded and an empty CATProduct document is opened.


2. Select **File** -> **Open** then select the [GettingStarted.CATProduct](#) document.

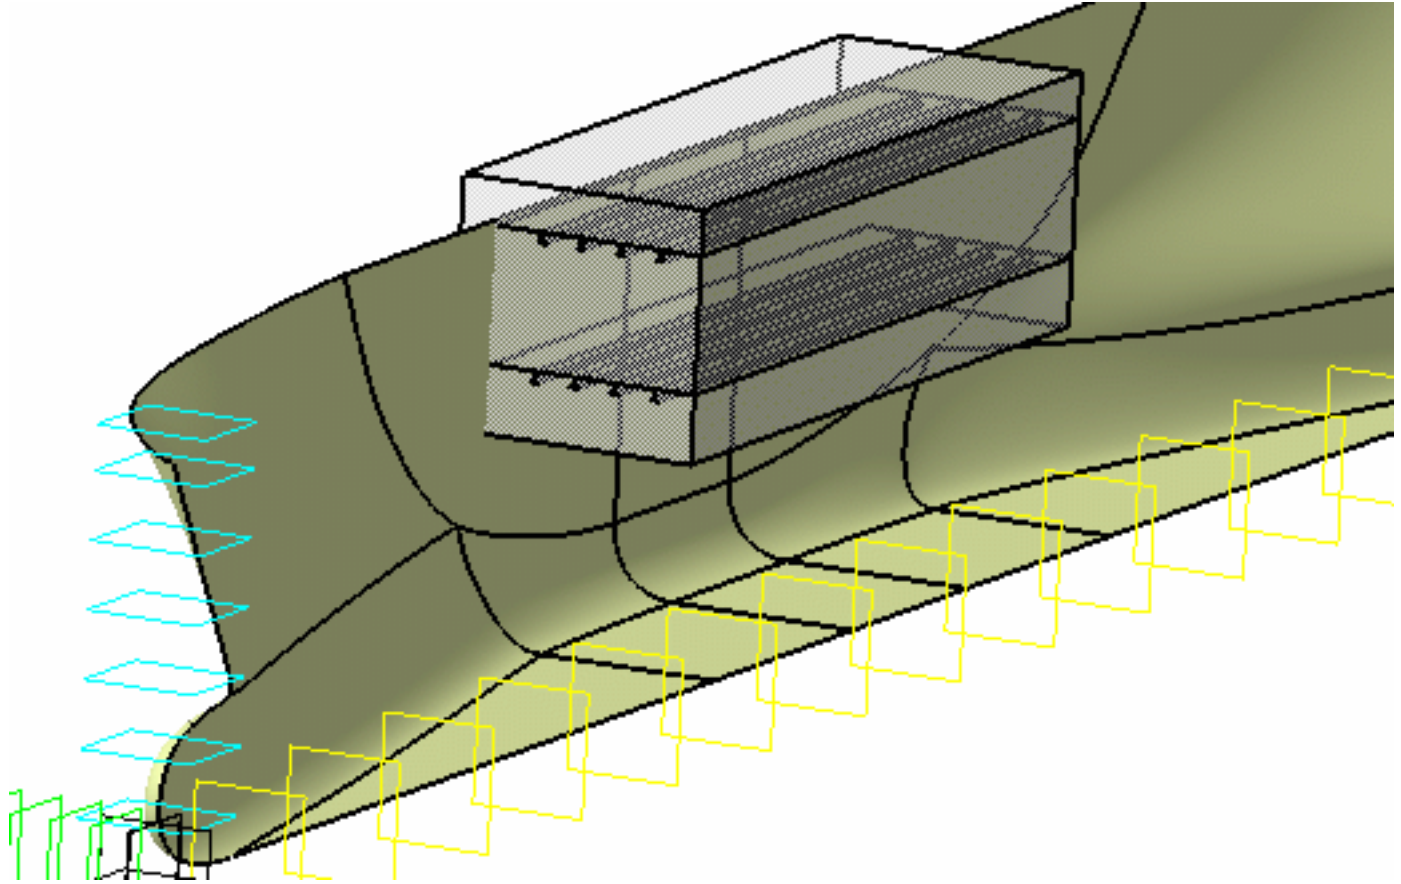

The document shows the detail design block in which you will be working. A certain number of functional design items have been processed using Block Scheme, Block and Split by Block commands to create equivalent detail design items.

Note: In building this document, the Keep link with selected objects option was checked. Any detailed design items you now create will therefore be associated to entities used to create them.

3. Customize settings to display parameters and relations in the specification tree:
 - Select **Tools -> Options -> Infrastructure -> Product Structure, Tree Customization** tab
 - Set both Parameters and Relations options to Yes to visualize parameters and relations in products
 - Select **Part Infrastructure** in the **Infrastructure** category, then the **Display** tab
 - Check Parameters to visualize parameters in parts
 - Select **Parameters and Measure** in the **General** category, then the **Knowledge** tab
 - Check With value to display parameters with values.
4. [Customize standard CATIA views](#) to suit shipbuilding conventions.
5. If desired, hide the block to lighten the document and make your selections easier.

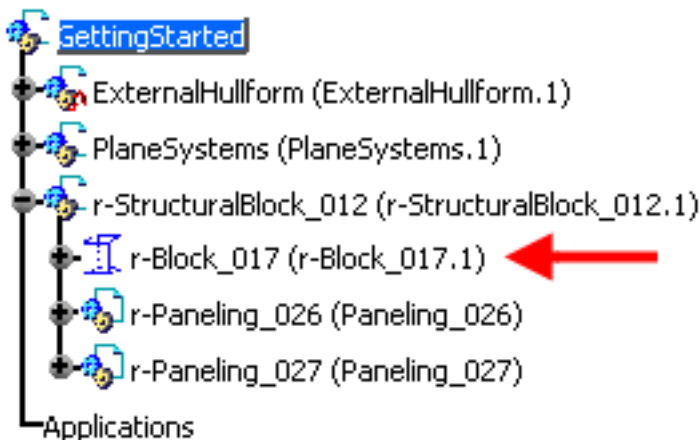

You are now ready to start. Your first task will be to create a new floor plate.



Adding Plating




This task shows you how to add a new floor plate.



1. Click the Plating  icon.


The Plating dialog box is displayed.

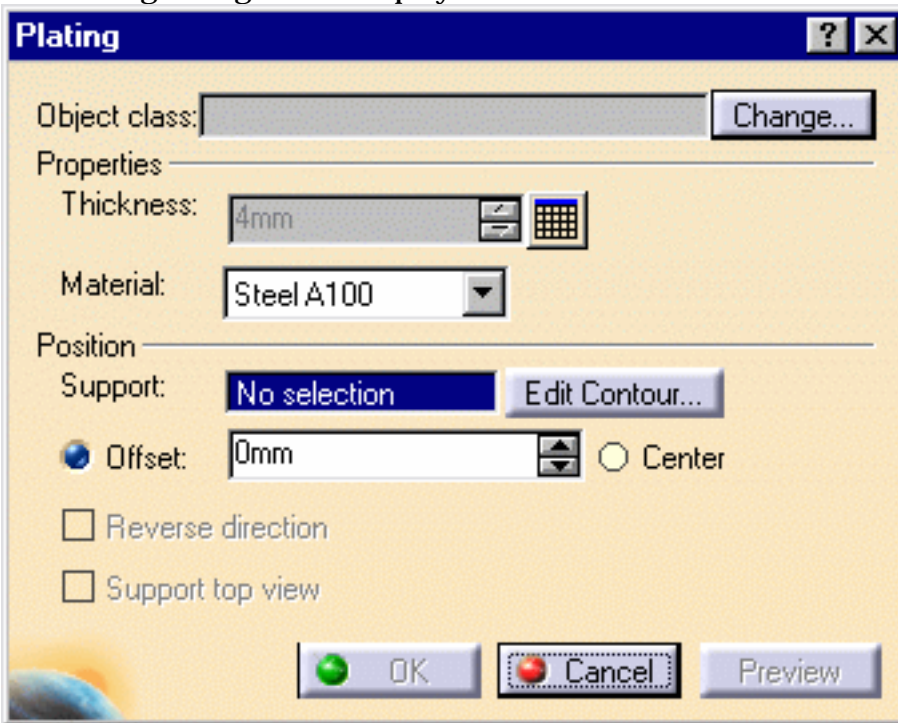

2. Define the associated class:
 - Click Change... opposite Object class.


The Class Browser opens.

- Expand the Class Browser tree and select Transverse Bulkhead, then click **OK** in the Class Browser.

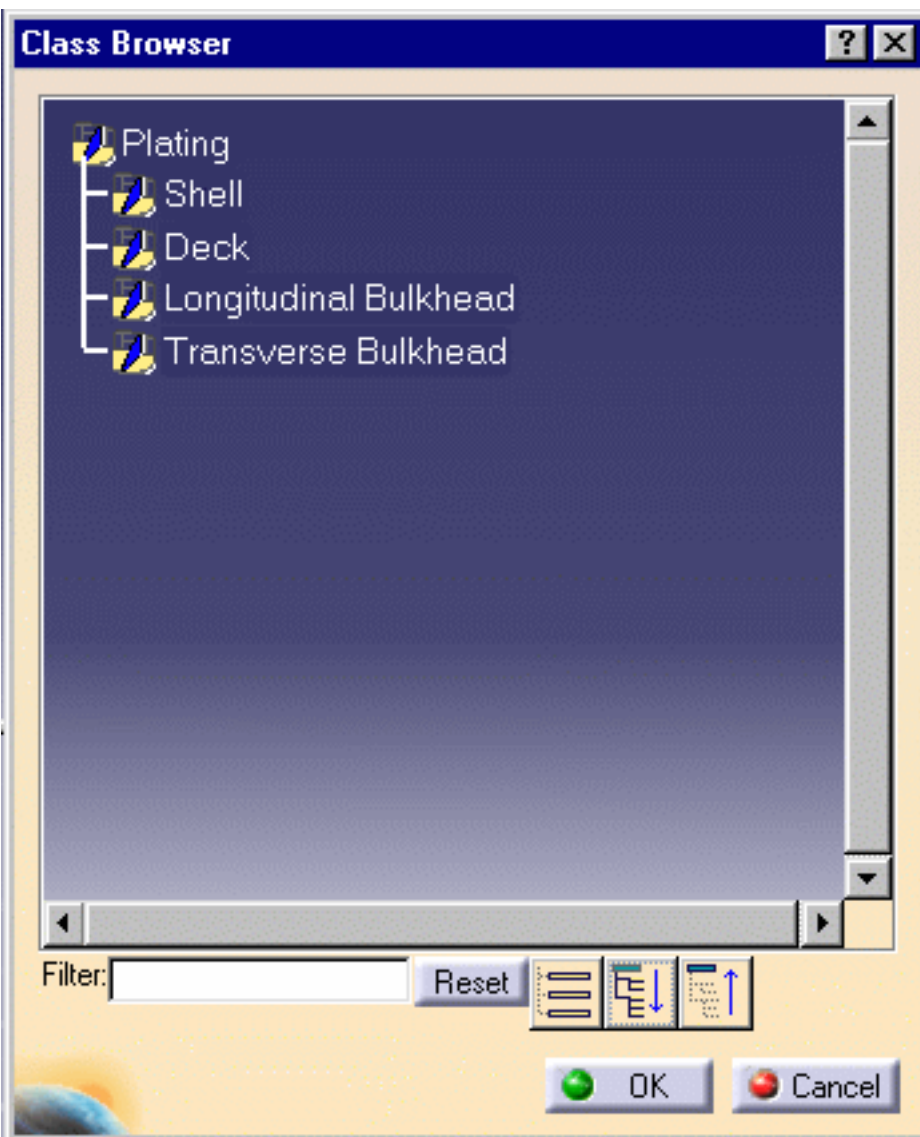

3. Define the properties of the new floor plate:
 - Click the Design table icon:
The Design Table dialog box appears.
 - Select the desired thickness, for example 15mm.
 - Click **OK**.
 - Set the material to Steel A36 in the Material drop-down list.
4. Specify the molded surface support of the new floor plate: Select cross plane Plane.9 for example.


The Paneling Molded Surface dialog box opens.

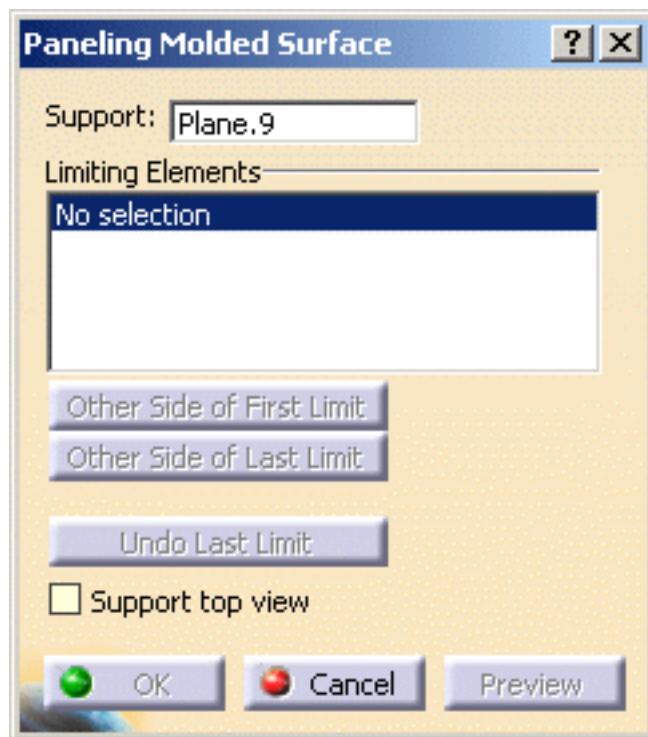


5. Select limits to define the contour and watch your molded surface being built.

Note: It is important to select limits in a certain order.

- Select the top deck
- Select the hull form
- Click Other Side of First Limit to define the contour in the downward direction
- Select the bottom deck
- Click Other Side of Last Limit
- Select a zx plane.

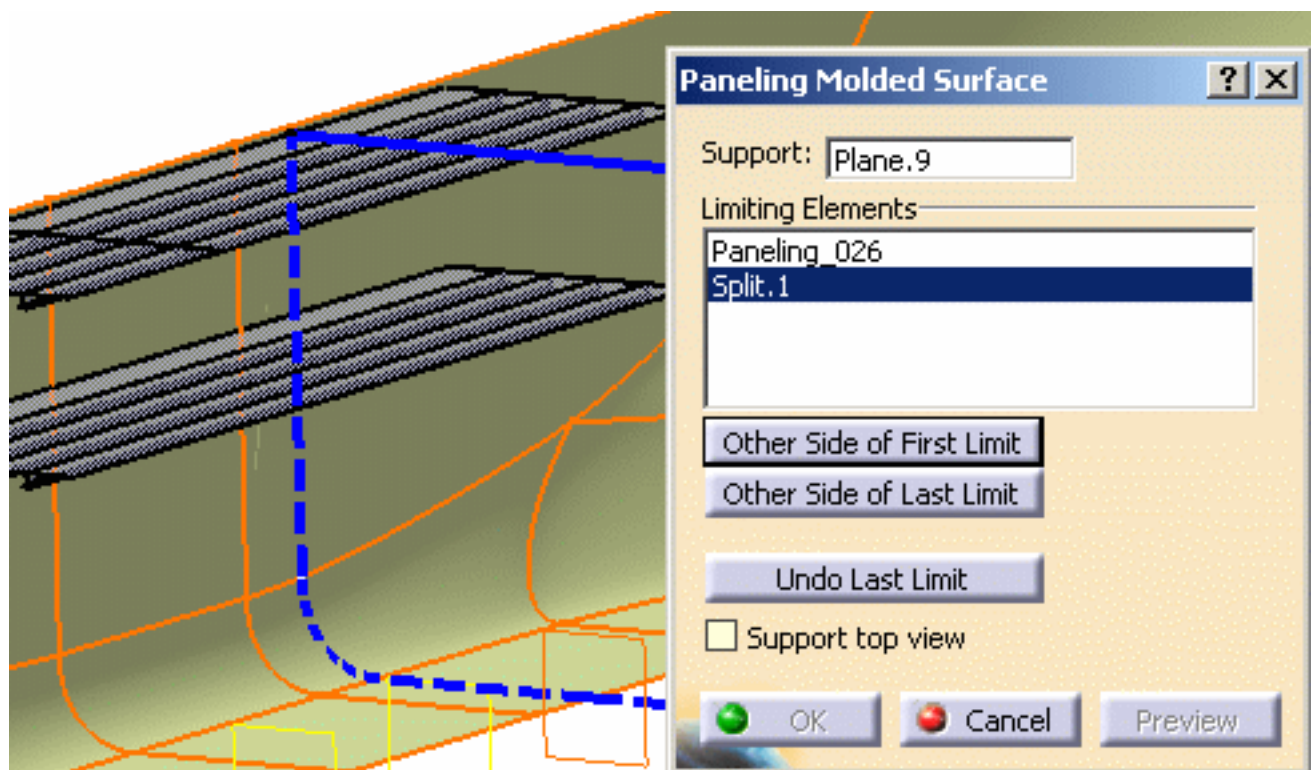


The contour of the floor plate is green indicating that it is correct.

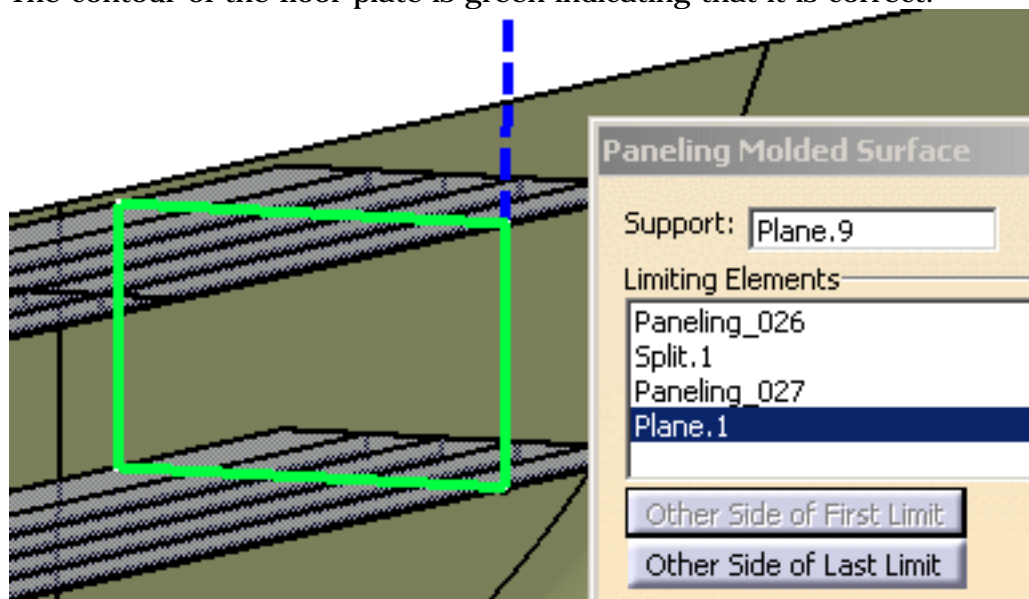


6. Click **OK** in the Paneling Molded Surface dialog box.

The floor plate is visualized in the geometry area with an arrow indicating the direction of plate thickness.

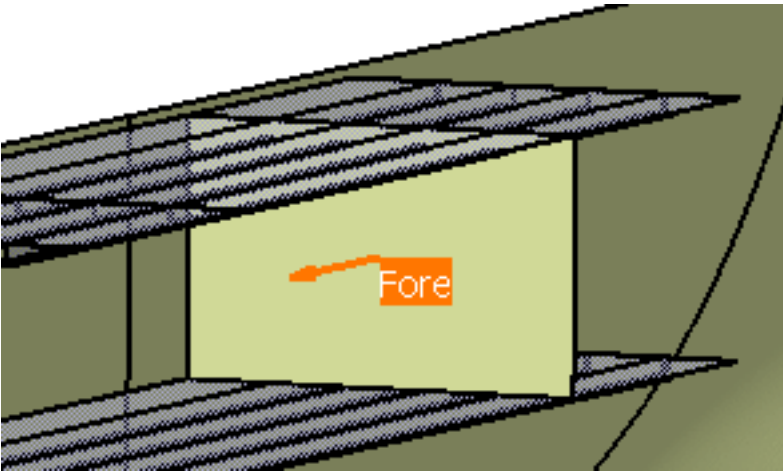

7. Click **OK** in the Plating dialog box to create your floor plate.

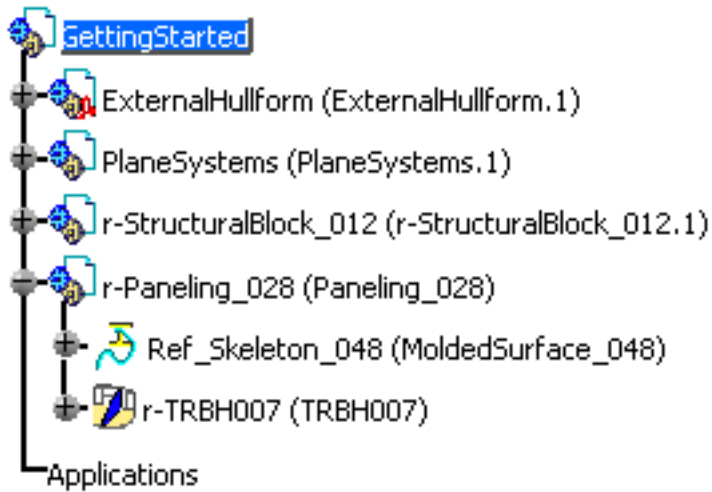


8. Place the hull form and bottom deck with stiffeners in No Show to view only the top deck and floor plate.

You will now stiffen the floor plate.




Adding Stiffening

 This task shows you how to stiffen the floor plate you just created.

1. Double-click the paneling system under which the floor plate is created.
2. Click the Stiffening  icon.

The Stiffening dialog box is displayed.

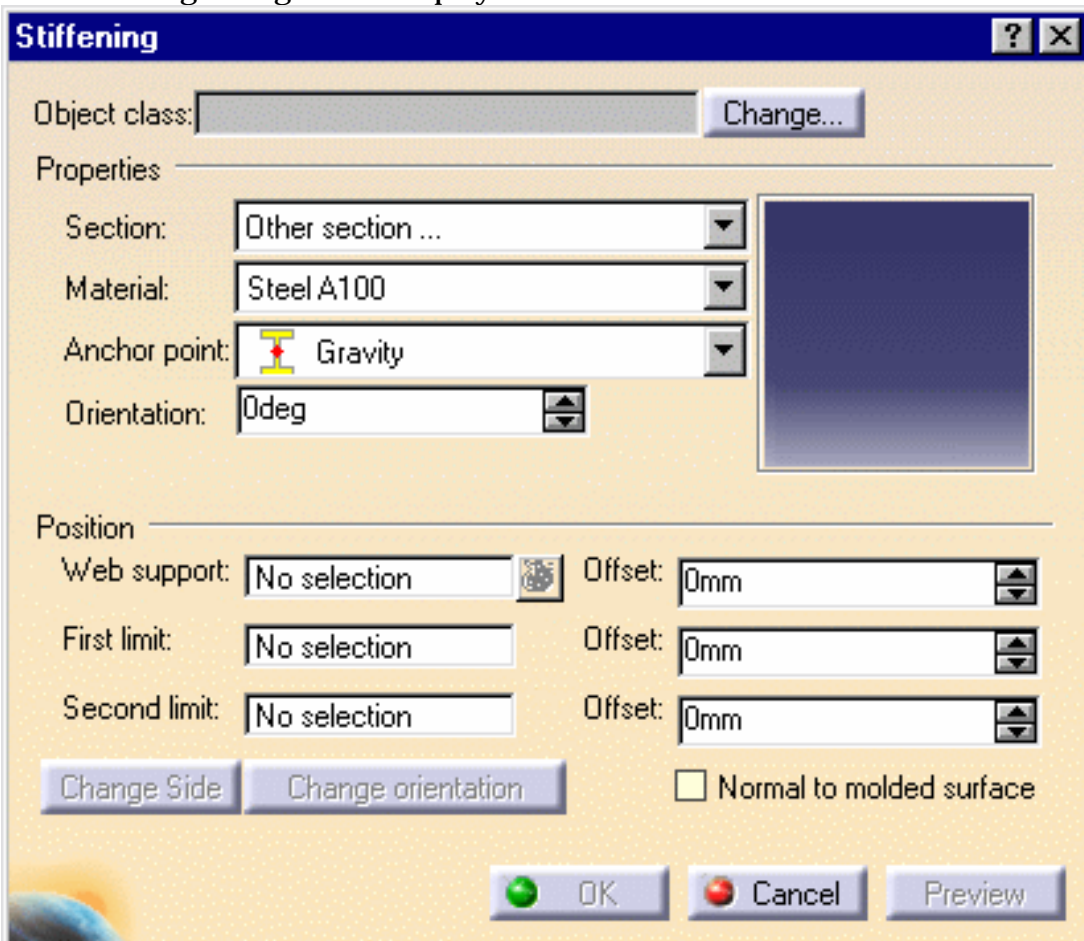


The Stiffening dialog box is shown with the following fields and controls:

- Object class:** A text field with a "Change..." button next to it.
- Properties:**
 - Section:** A dropdown menu showing "Other section ...".
 - Material:** A dropdown menu showing "Steel A100".
 - Anchor point:** A dropdown menu showing "Gravity" with a red dot icon.
 - Orientation:** A dropdown menu showing "0deg" with up/down arrows.
- Position:**
 - Web support:** A dropdown menu showing "No selection" with a small icon.
 - Offset:** A text field showing "0mm" with up/down arrows.
 - First limit:** A dropdown menu showing "No selection".
 - Offset:** A text field showing "0mm" with up/down arrows.
 - Second limit:** A dropdown menu showing "No selection".
 - Offset:** A text field showing "0mm" with up/down arrows.
- Buttons:** "Change Side", "Change orientation", and a checkbox labeled "Normal to molded surface".
- Footer:** "OK", "Cancel", and "Preview" buttons.


3. Define the associated class:
 - Click Change... opposite Object class.

The Class Browser opens.

- Expand the Class Browser tree and select Transverse Bulkhead Vertical Stiffening, then click **OK** in the Class Browser.

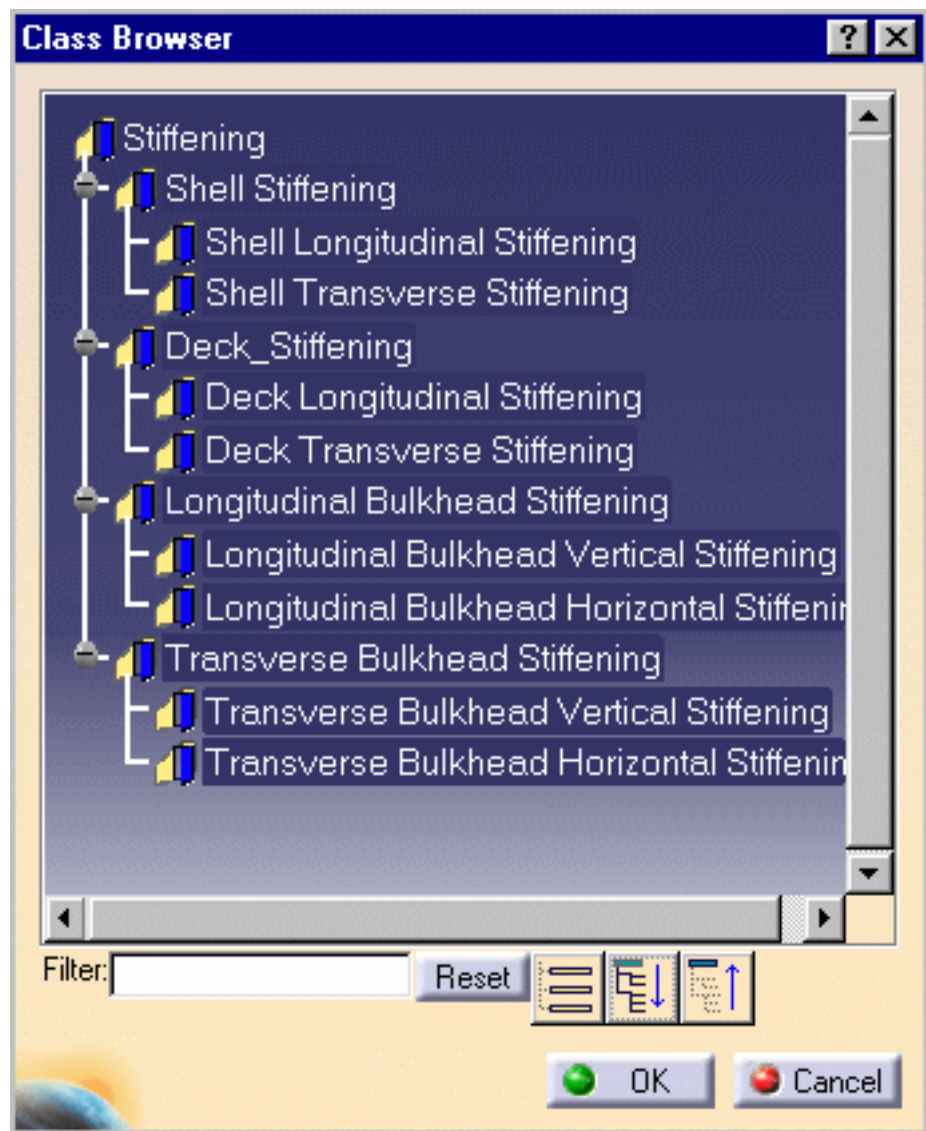


4. In the Section field, define the section you want to use, in our case WT18X179.5
 - Select Other section...
The Catalog Browser opens previewing the contents of the current catalog, by default the AISC_BigScale catalog.
 - Double-click the Tee standard type.
 - Browse the list of shapes and selection section WT18X179.5.
 - Click **OK**.

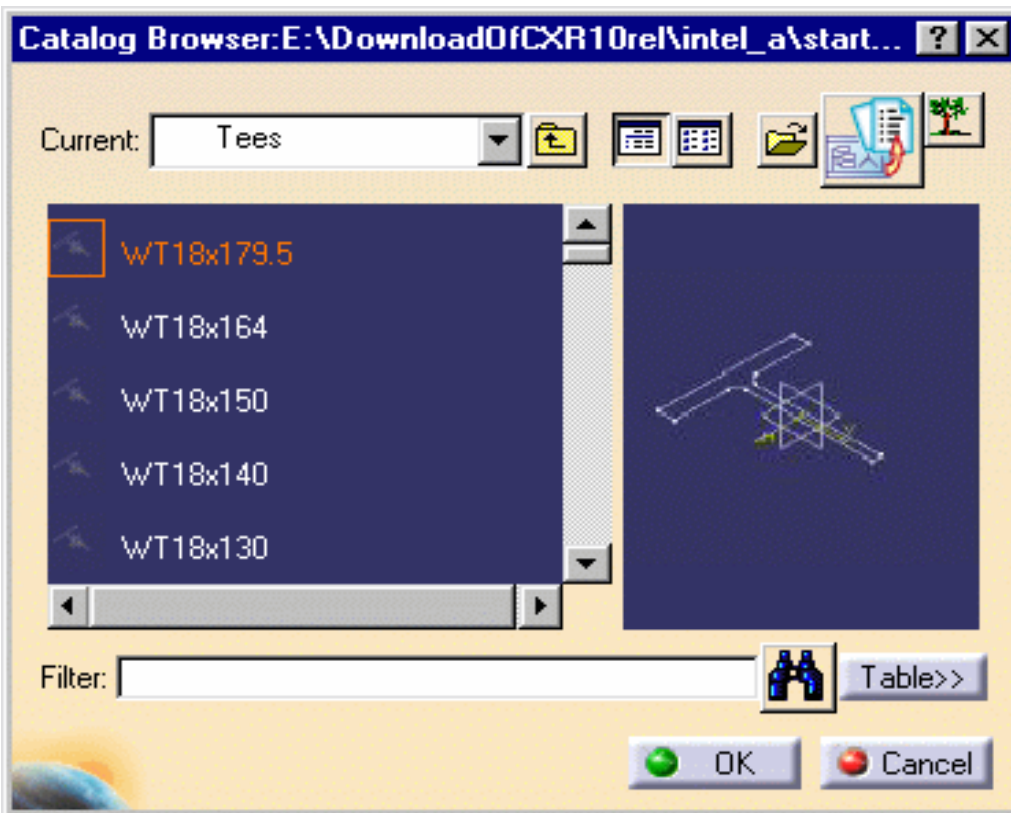


5. Define other stiffening properties:
 - Click the drop-down arrow opposite the Material field and select the desired material-grade combination. In this case, Steel A36.
 - Right-click in the Anchor point field and select User from the contextual menu, then set the anchor point to WebSideRight.
 - Keep the default orientation.
6. Define the web support along which the stiffening section will be swept:

Click the Web support field then select longitudinal planes corresponding to existing deck stiffeners to align floor plate stiffeners to existing stiffeners.

7. Click **OK** when done.

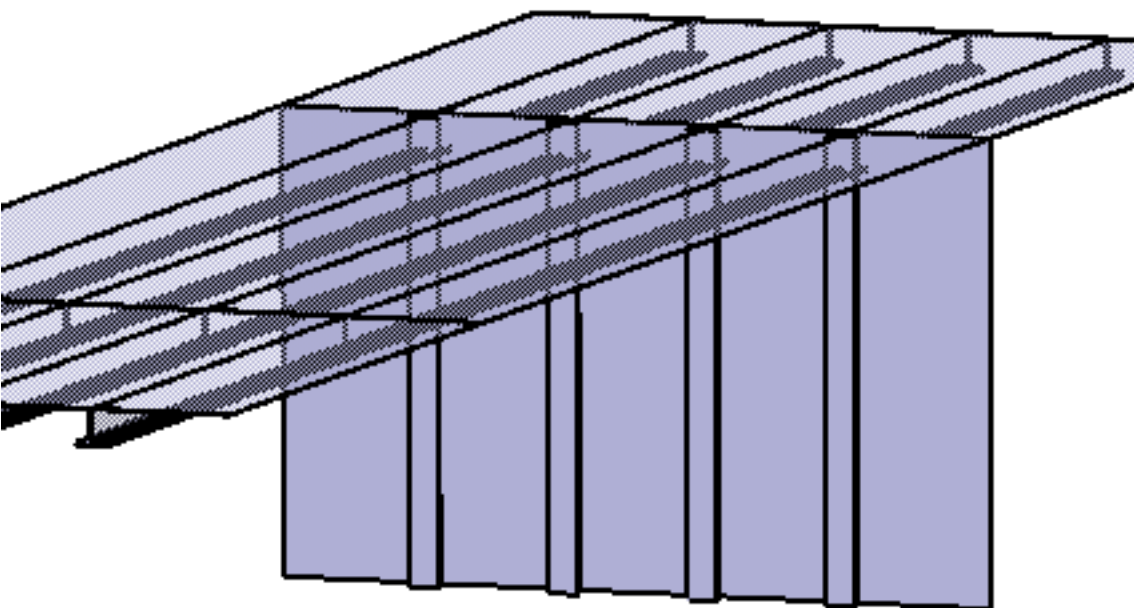

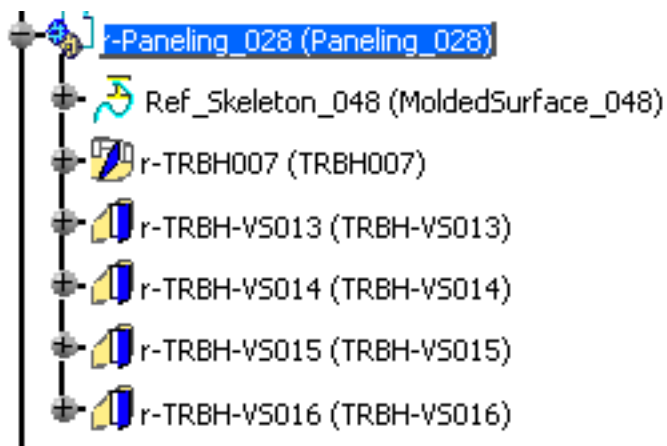

The floor plate is stiffened as specified. You will now add slots to the floor plate for passage of deck stiffeners.



Adding Slots & Trimming Stiffening



This task shows you how to:

- Add slots to the floor plate for the passage of deck stiffeners
- Trim floor plate stiffening to allow for welding
- Create corner brackets connecting the deck to the floor plate.


Slots require closed contours and user features to position them.

Adding Slots



1. Click the Slot  icon.

The Slot dialog box is displayed.

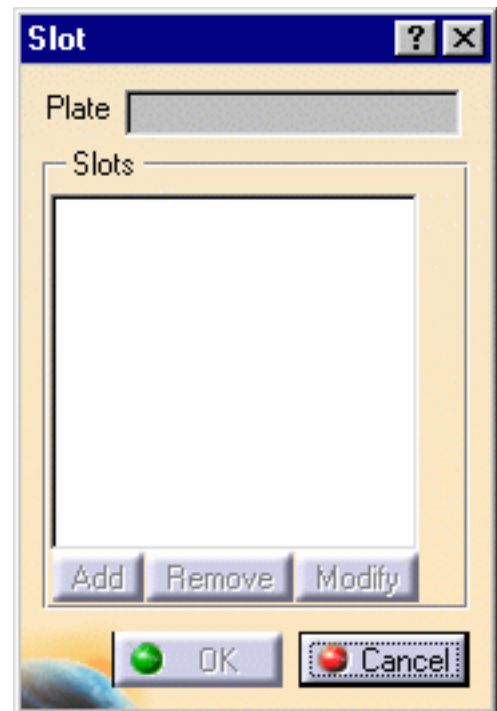


2. Select the floor plate then click the Add button.

The Create A Slot dialog box appears.




3. Select all stiffeners passing through the floor plate.

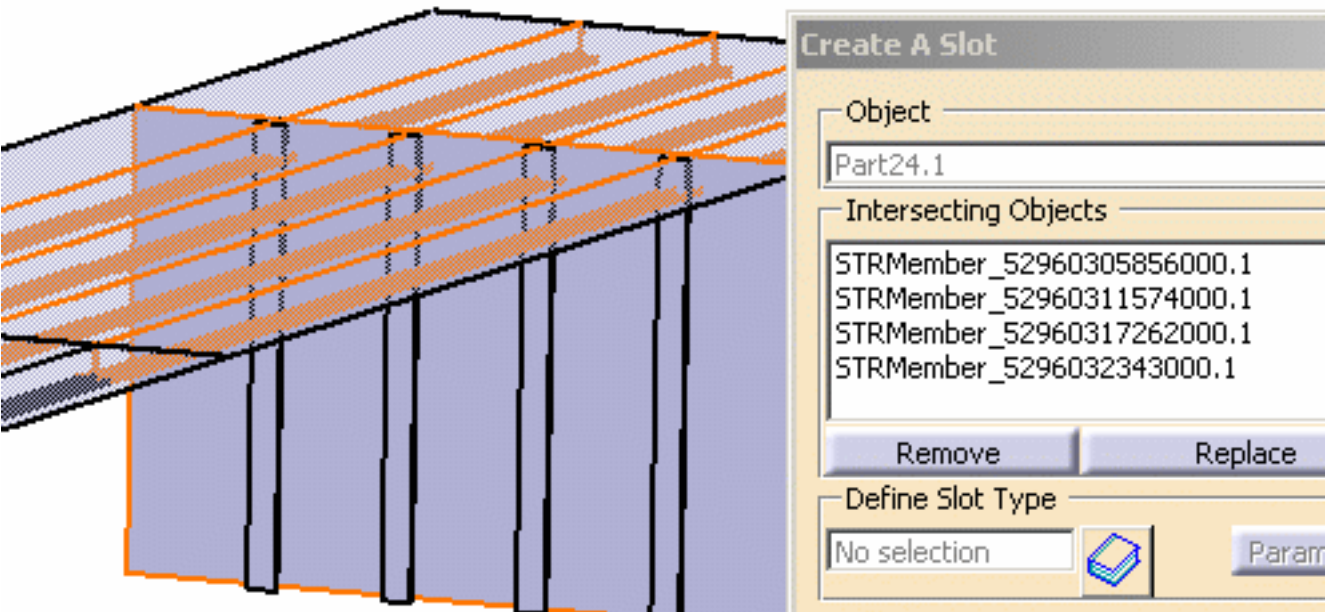

4. Click the Catalog Browser icon to open the catalog containing the available slot types.


Note: The catalog Browser opens at the appropriate chapter, in our case Tees.

5. In the Catalog Selection for Slot dialog box, navigate to the family (Clearance Cut) that contains the appropriate slot type, for example CC-10, then click **OK** to select the slot.

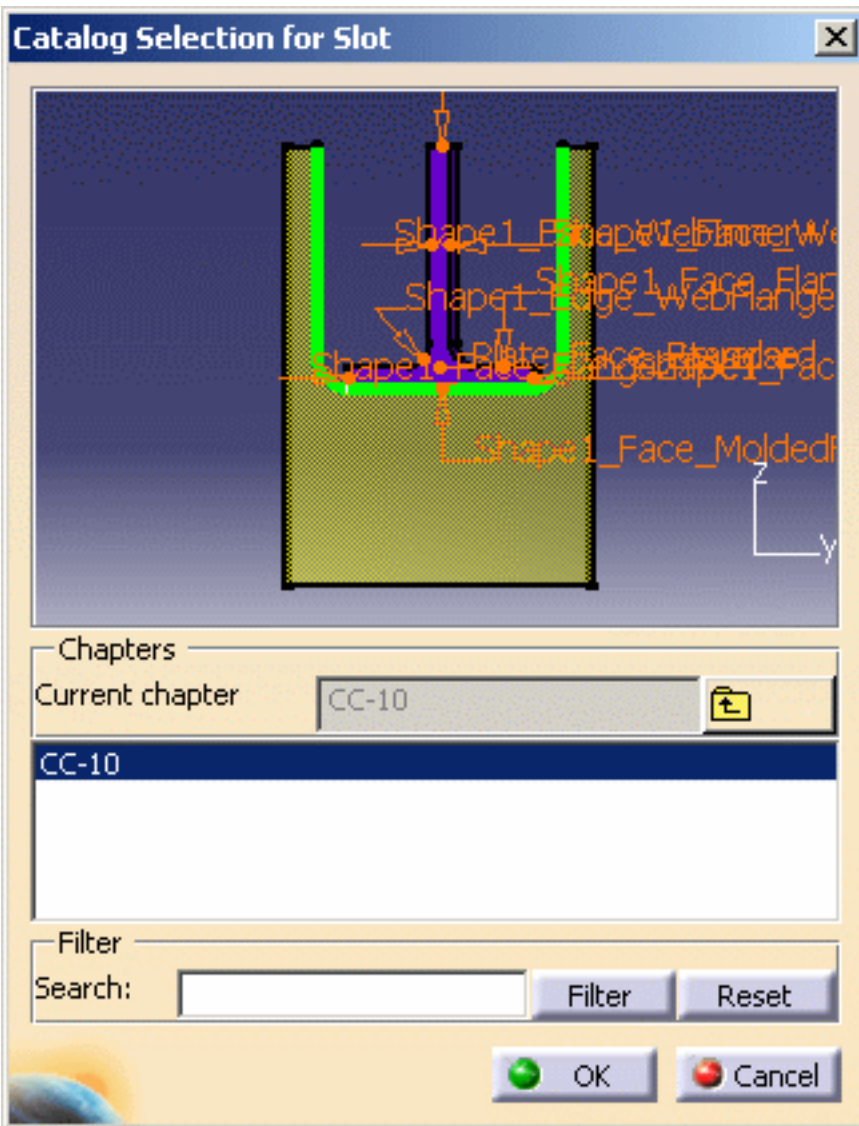

6. Click **OK** in the Create A Slot dialog box that re-appears.

Slots are created for each stiffener passing through the floor plate. Slots are identified in the Slot dialog box that appears.

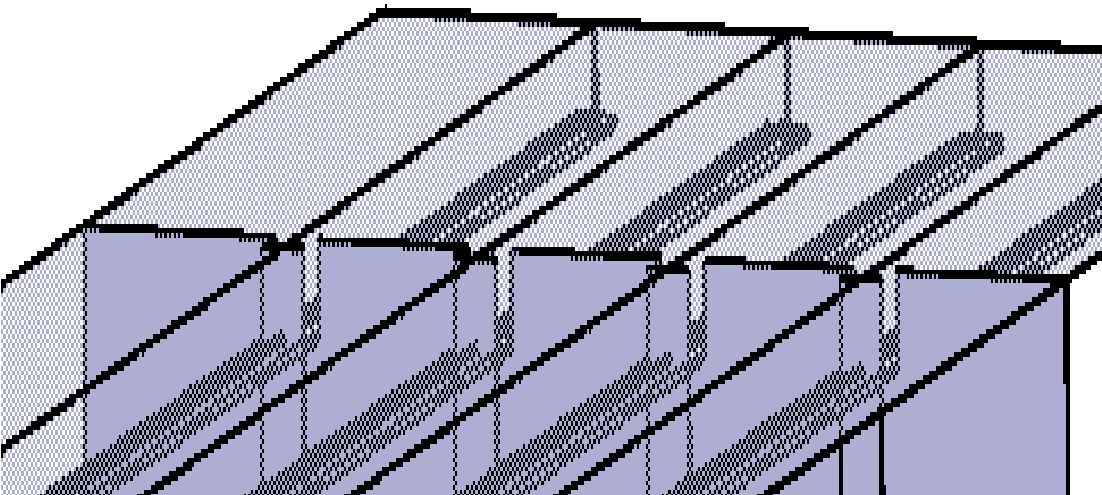

7. Click **OK** in the Slot dialog box to confirm.




Trimming Stiffening

You will now cut back floor plate stiffening to top deck stiffening.

1. Click the Cutback  icon.


The Cutback dialog box opens. The Trim to plane option is the default option.

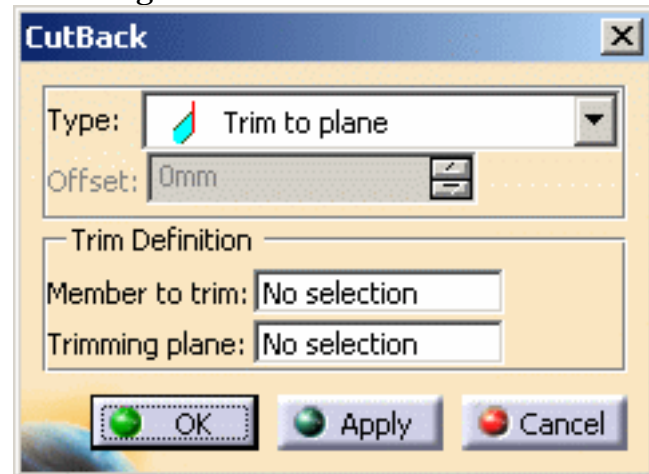


2. Select one of the floor plate stiffening systems.

This is the stiffening you want to trim.


3. Select the flange face of the corresponding deck stiffener.

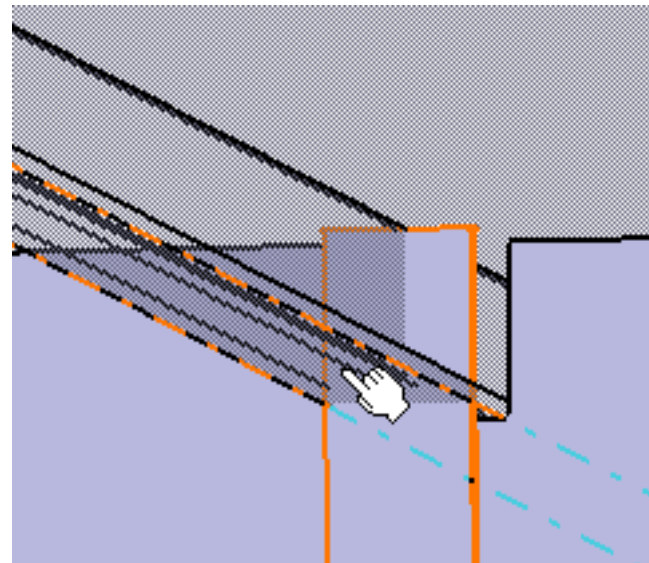


4. Click **OK** to trim the floor plate stiffening to the flange face of the deck stiffener and if necessary, update.

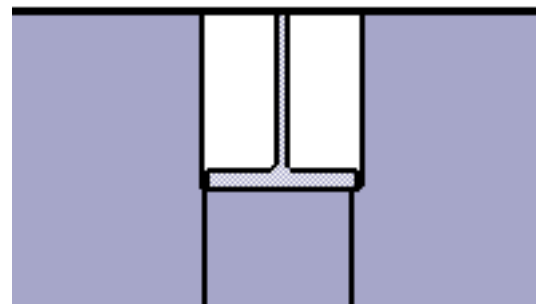


5. Repeat for other floor plate stiffening.

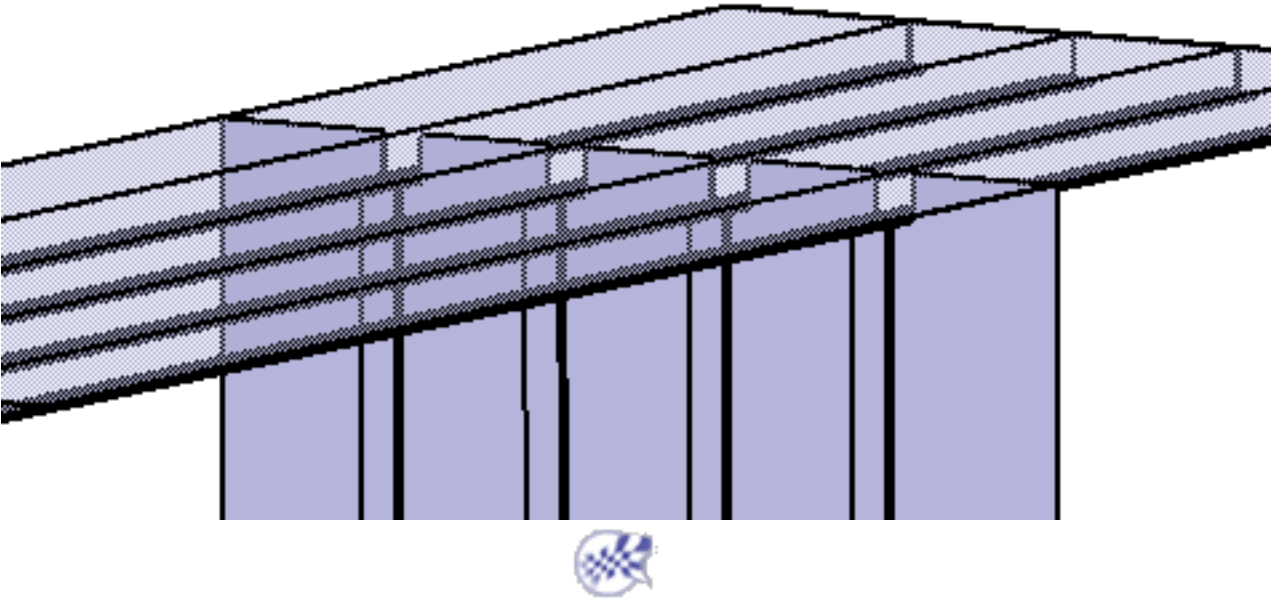


Creating Corner Brackets

1. Brackets are small assemblies and are created using assembly templates.
Click the Small Assemblies  icon.

The Catalog Selection for Small Assemblies dialog box opens.

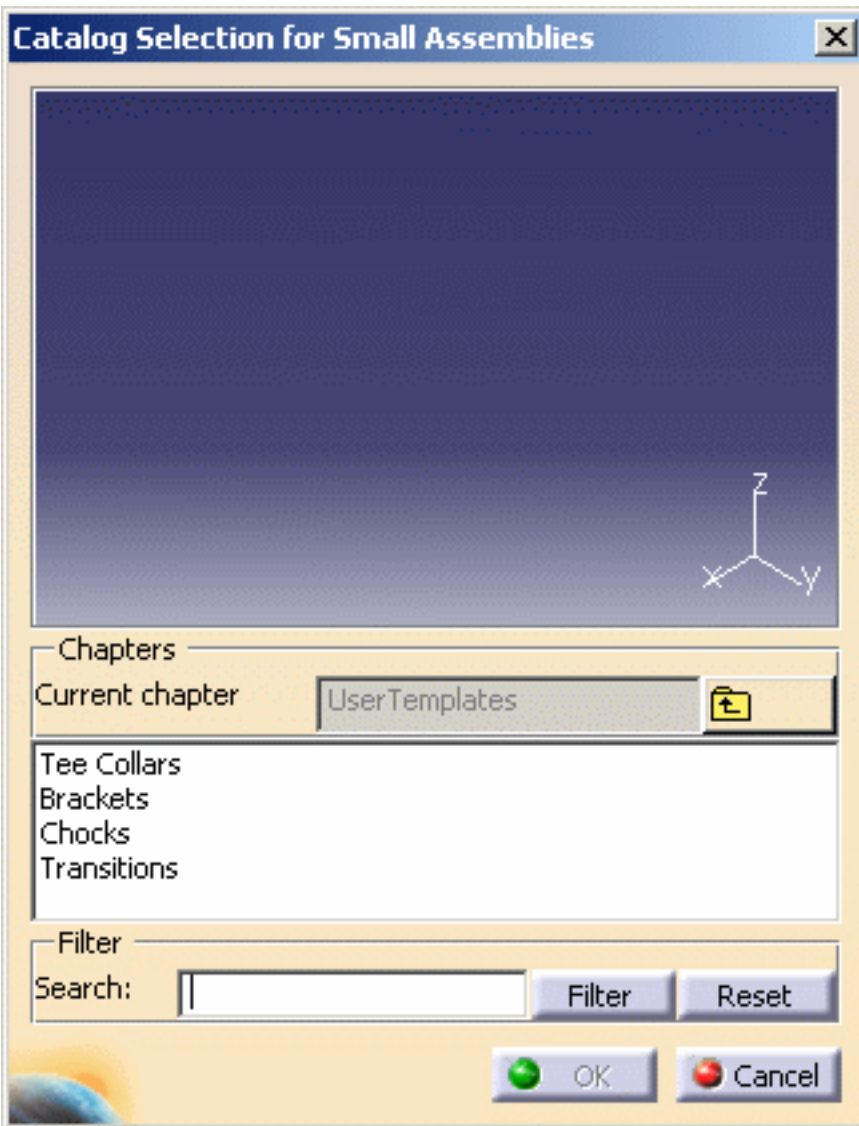


2. Double-click the Brackets chapter and select knee bracket.

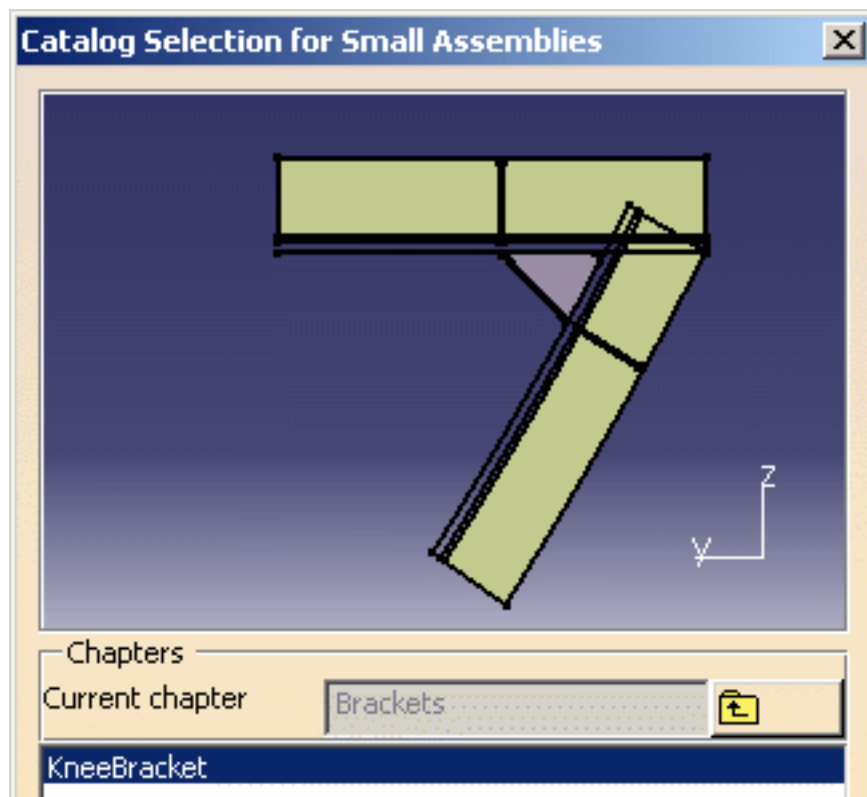

3. Click **OK** to close the Catalog Selection for Small Assemblies dialog box.

The Insert Object dialog box opens.

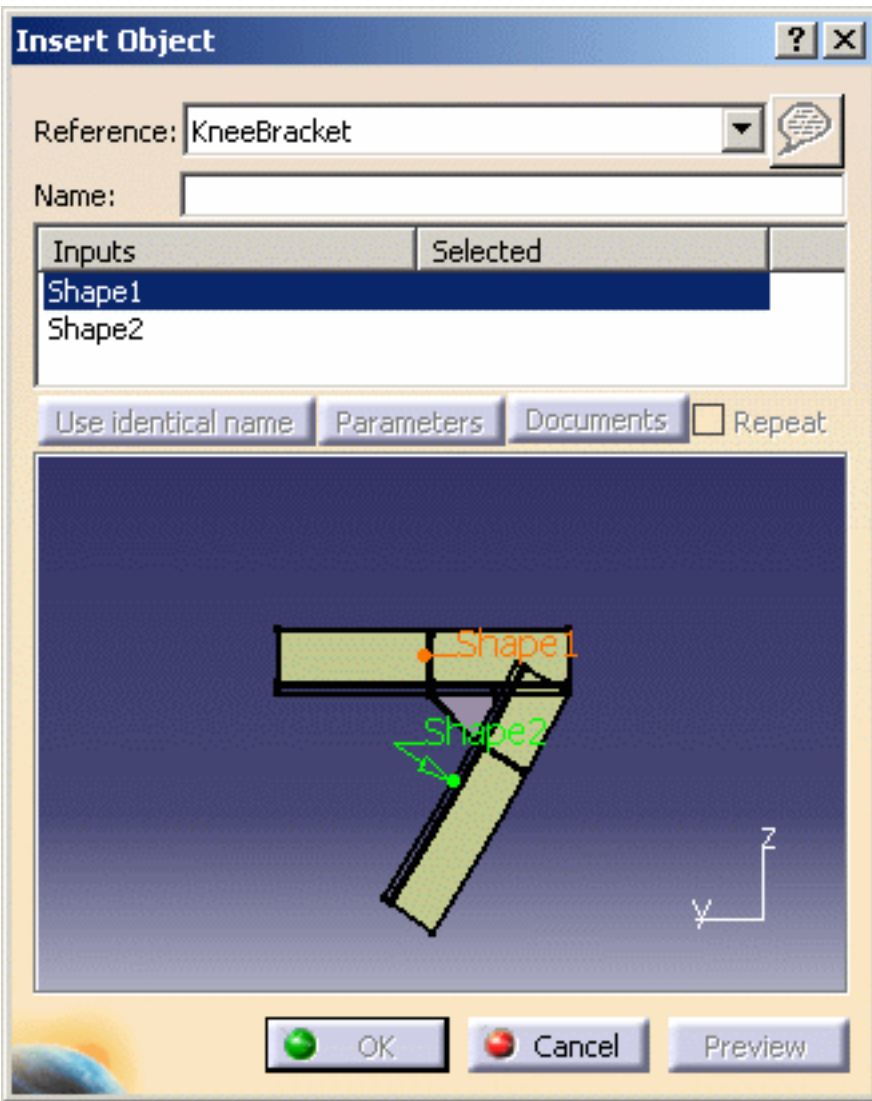


4. Select one of the deck stiffening systems (shape 1) to position the small assembly.


The name appears in the Selected column.

5. Select the corresponding floor plate stiffening system (shape 2).
6. Click **OK** when done.

The bracket is created.

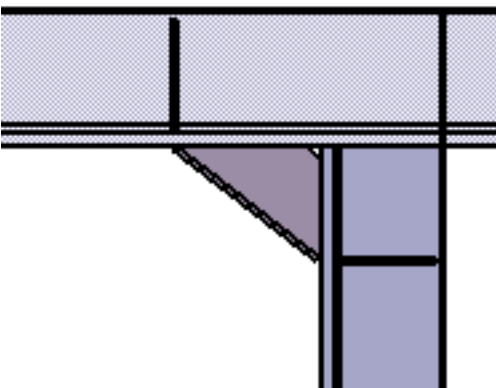

7. Repeat to create brackets connecting other sets of floor plate and deck stiffening systems.

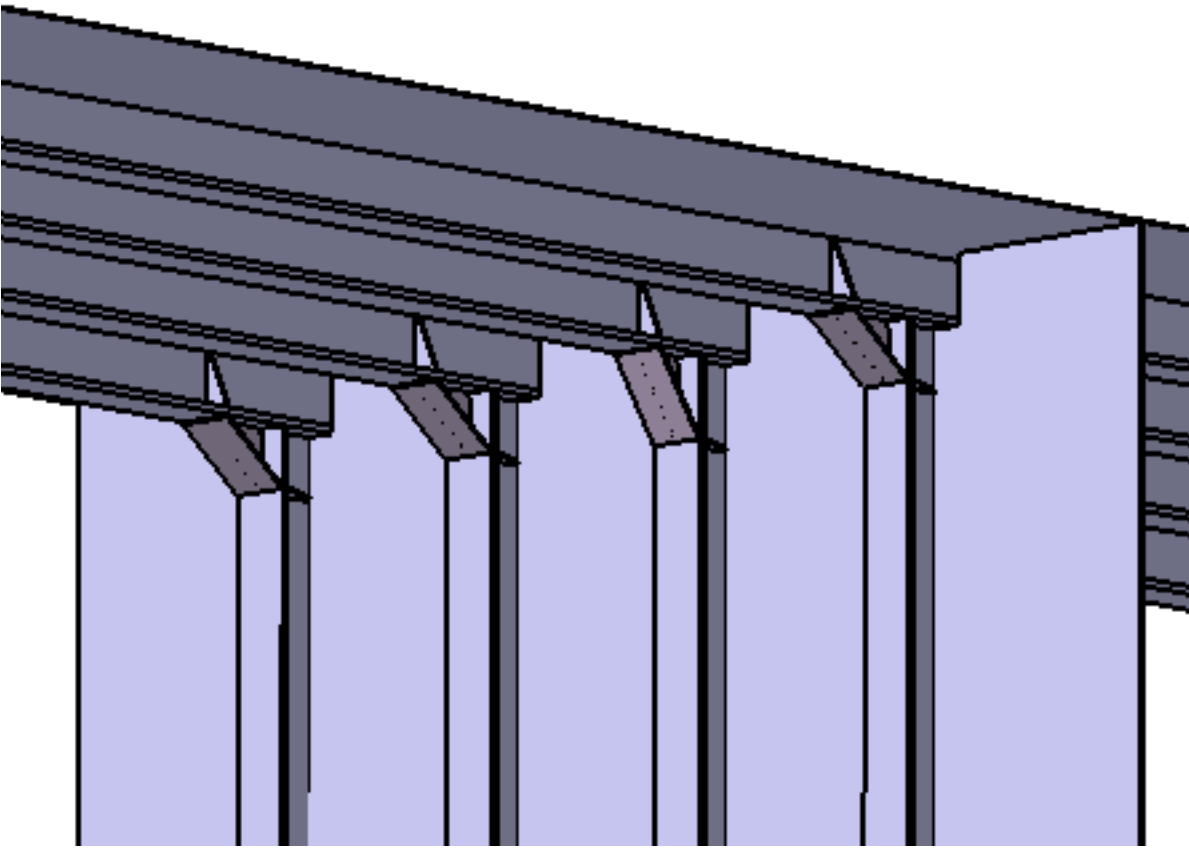

Adding Openings



This task shows you how to add an opening to the floor plate.


Openings require closed contours and user features to position them.



1. Double-click the floor plate paneling to activate it.

2. Click the Opening  icon.

The Opening dialog box is displayed. Keep the default object class.


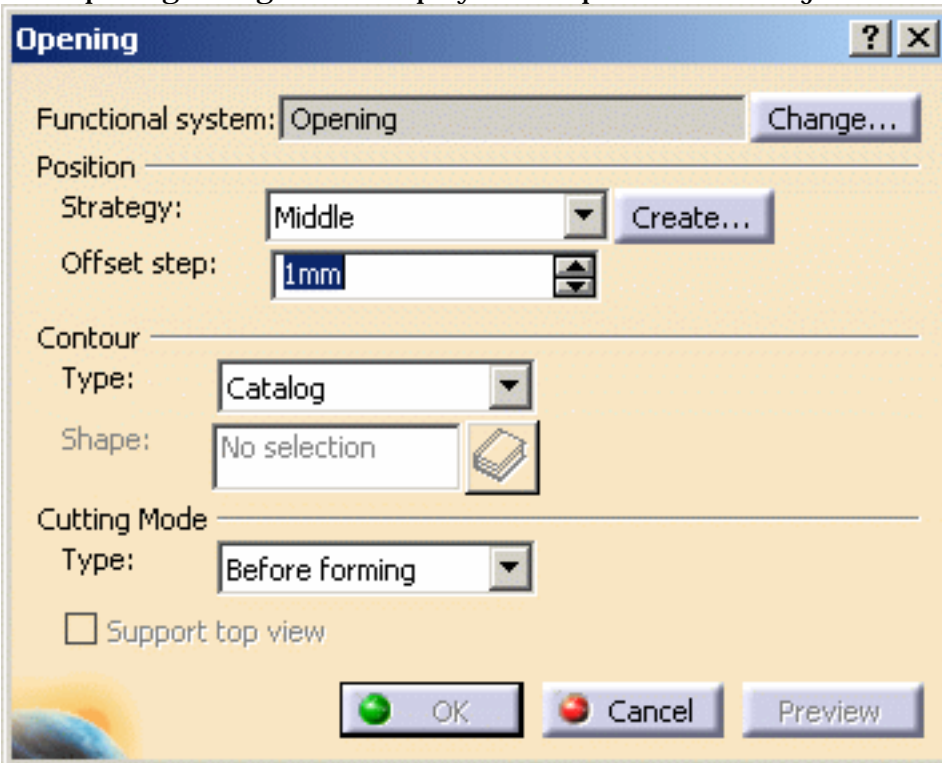


3. Click the Strategy drop-down arrow in the position area and select Two planes, then click Create...


The Insert Object dialog box opens.

The molded surface of the floor plate is selected as the support plane and is indicated in the geometry area.


4. Select the two planes that will position the opening, then click Preview to view the results in the geometry area.

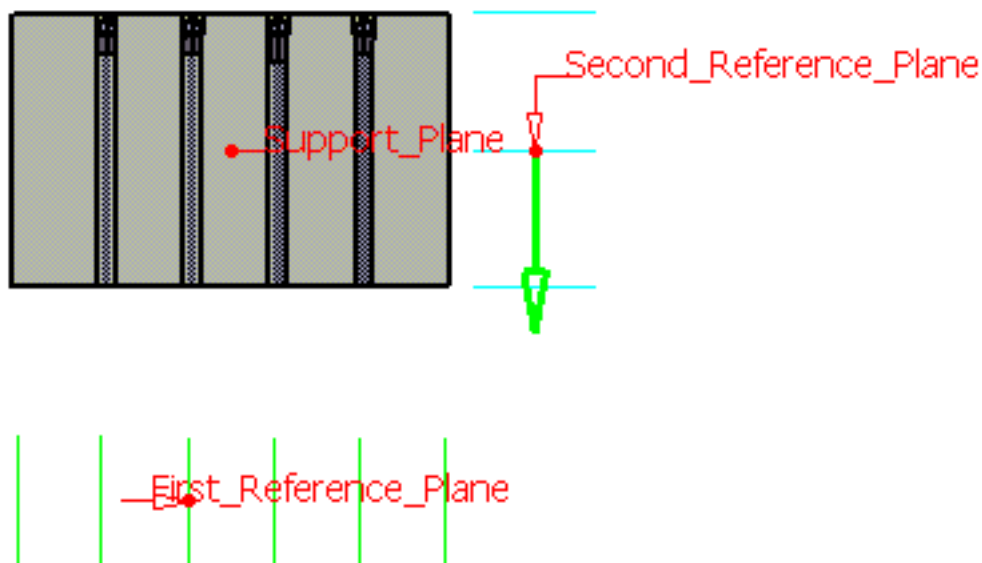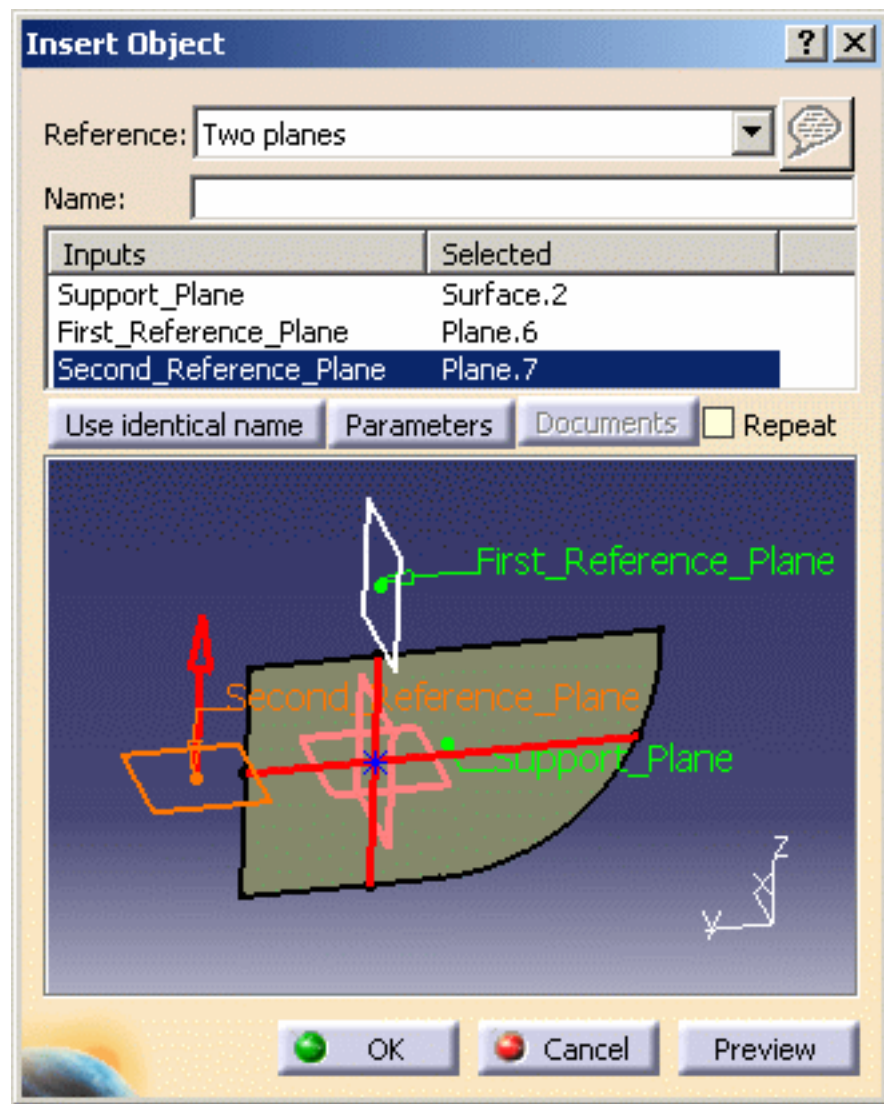

5. Click **OK** to return to the Opening dialog box.
6. Check the Support top view option in the Opening dialog box to get a top view of the 3D model.

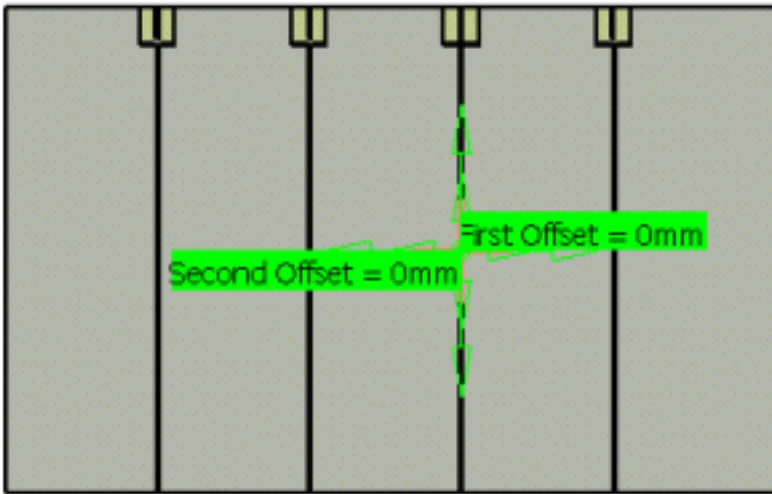


7. Use the green manipulators to adjust the position of the opening.

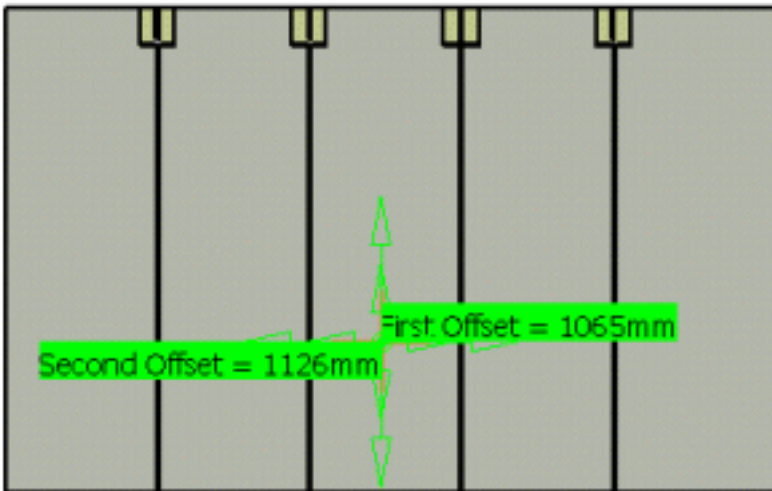


8. Set the contour Type to Sketcher and click the sketcher icon.
9. Sketch your shape in the Sketcher workbench, then exit.

The name of the sketch appears in the Shape field.

10. If necessary, adjust the position of the opening again, click **Preview** in the Opening dialog box.

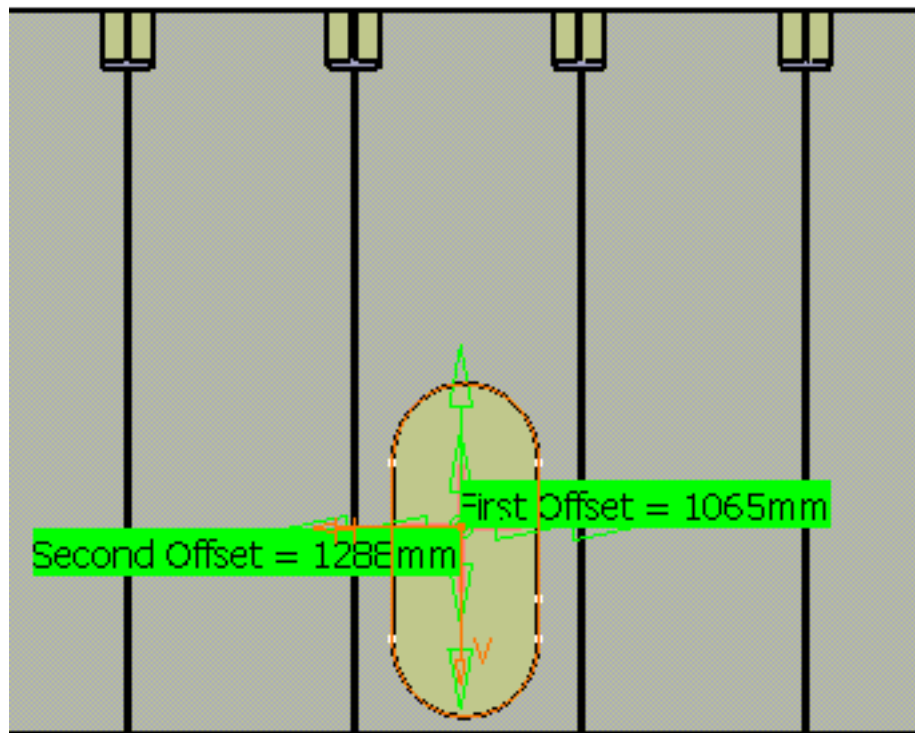

11. Click **OK** when done.

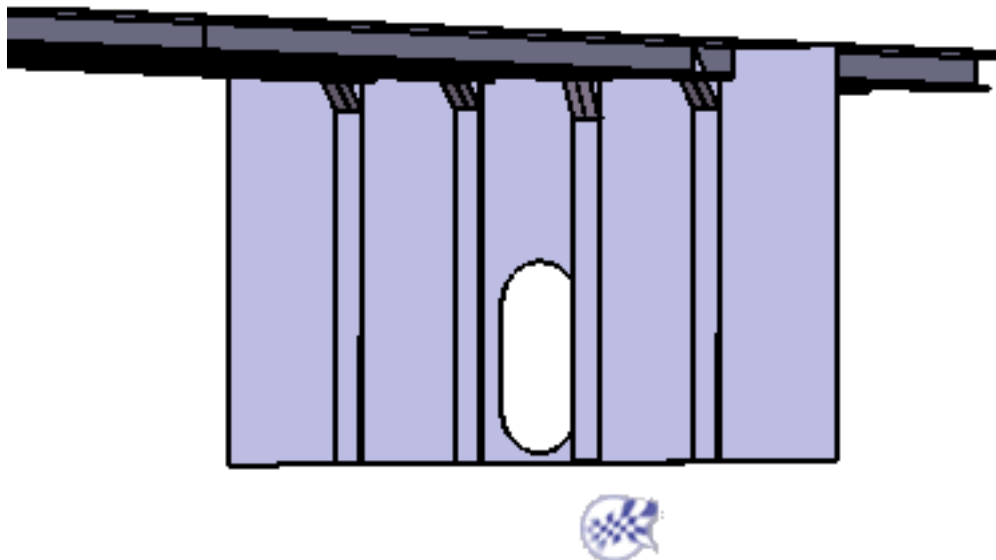

User Tasks

Splitting Design into Blocks
Creating Structural Systems
Connecting Structural Elements
Creating Physical Plates & Shapes
Design Assistant
Drawing Production
Managing Your Project
More About Catalog Slots, Endcuts & Small Assemblies
More About Openings
Structure Detail Design Package in Knowledge Expert

Splitting Design into Blocks

Before starting the detail design per se, a build strategy is defined and a detail design block generated by applying a build strategy block to the functional design.



Build the block scheme: identify your block scheme, create a 3D grid dividing the ship into cells then define the basic block.



Generate detail design blocks: select the block to process and click OK.

Start detail design from scratch: build a block scheme then generate a detail design block.

Building the Block Scheme



This task shows you how to determine the basic block definition. To do so, you will **prepare a 3D grid of cells** representing the block scheme before actually **defining the blocks** themselves.

This is typically a planning task that lets you develop a build strategy that takes into account shipyard capabilities, standards and preferences.




1. Double-click to activate a first level entry in the specification tree at which to define the block scheme.

If desired, you can create the block definition at the document root.


2. Click the Block Scheme  icon.

The Block Scheme dialog box appears.

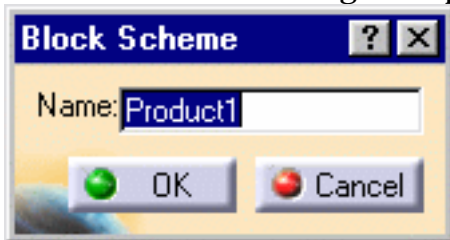


3. Identify the block scheme, then click **OK** in the dialog box.

The specification tree is updated with all appropriate features for the block scheme.

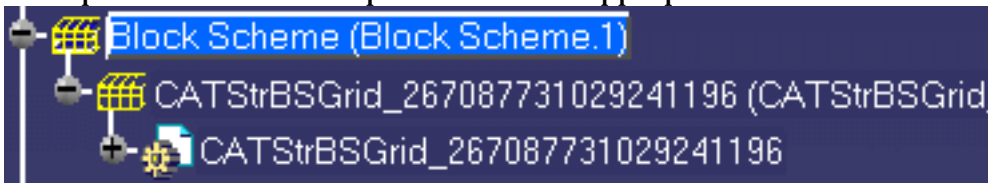

Preparing the Block Definition

4. Click the 3D Grid  icon to create a 3D grid that divides the ship into cells.


The 3D Grid dialog box appears.






To make up the lists of planes, you can select:

- individual planes
- **entire plane systems** by simply clicking one plane in the system
- a combination of plane systems and individual planes
or,
- surfaces.

The List  icon becomes active when you select more than one item. Click this icon to view the list of planes selected in the Elements list dialog box.

The Explode option in the dialog box lets you handle plane systems as individual planes.

5. Select a first set of planes or surfaces in one direction.
6. Click the Second list of planes field and select a second set of planes or surfaces in another direction.
7. Click the Third list of planes field and select a third set of planes or surfaces in the third direction.
8. Click **Apply** to preview the grid.

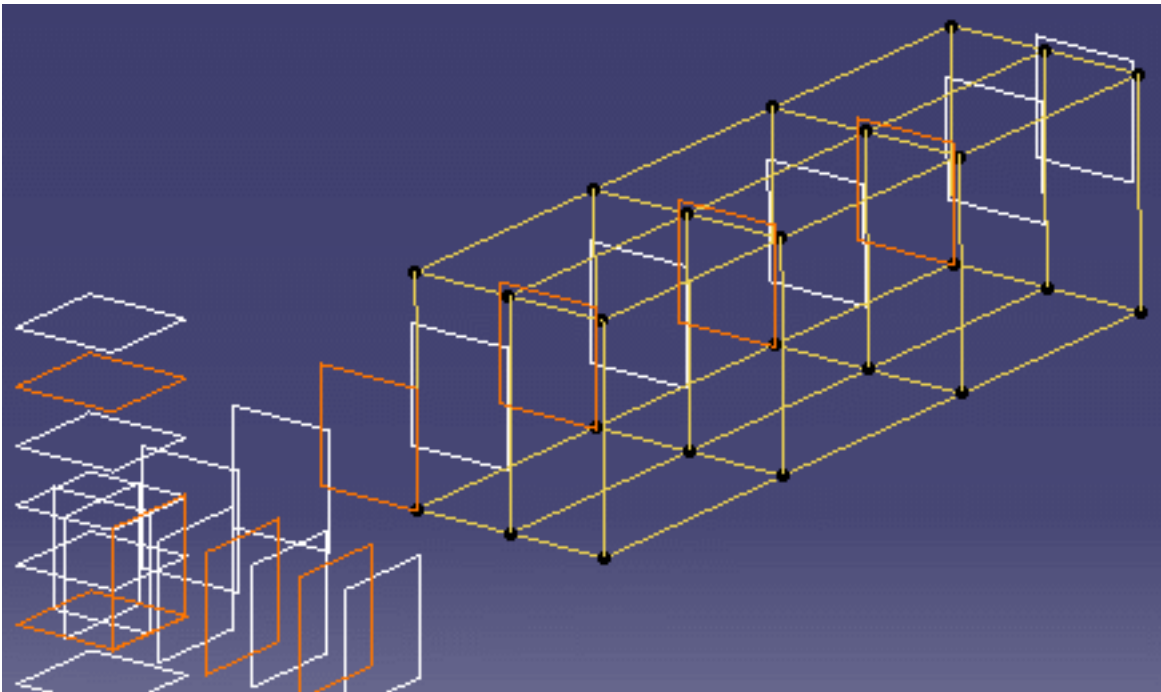

9. Using the List icon, make any necessary changes to the grid.


You can remove or replace planes as well as add new planes to the list in the Elements list dialog box. Click **Close** when done. Then click **Apply** again in the 3D Grid dialog box to preview the results.

10. Click **OK** in the 3D Grid dialog box when satisfied to create the grid and visualize the scheme.

A 3D grid is created.

Adjust grid transparency in the Properties dialog box.



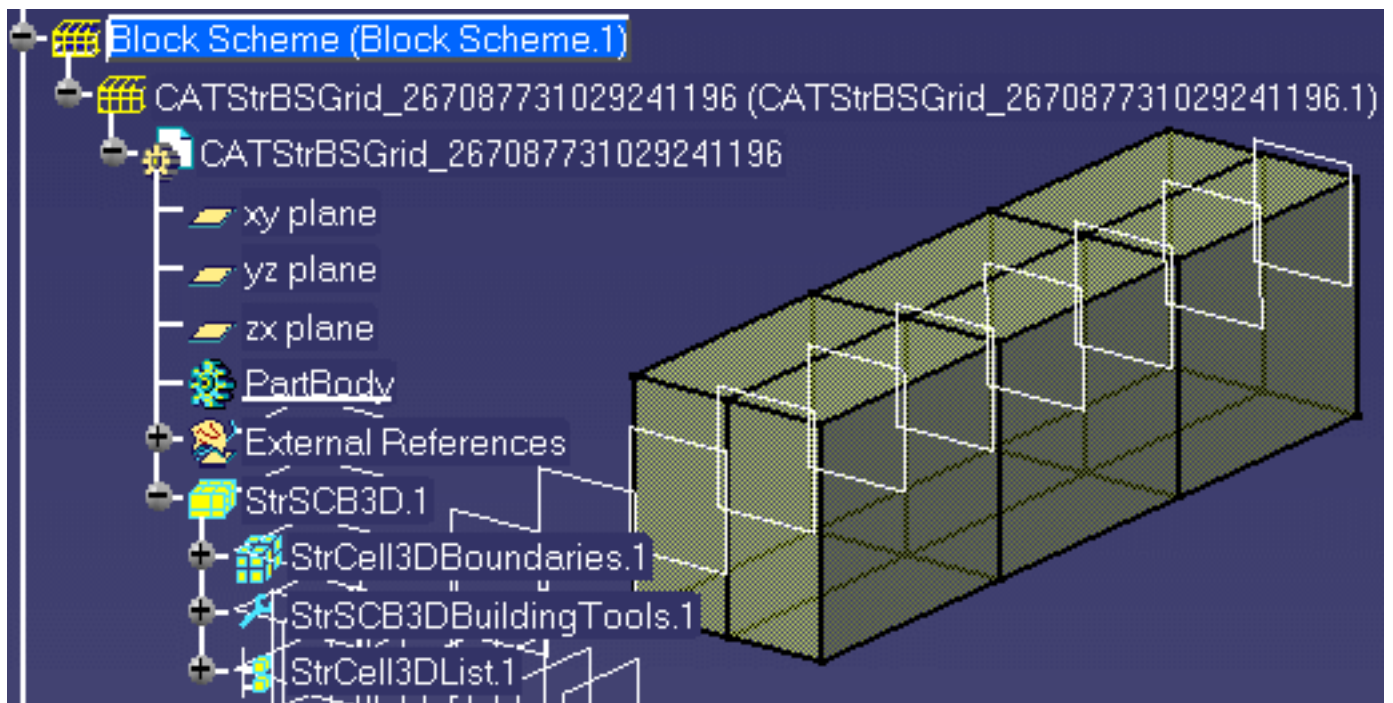


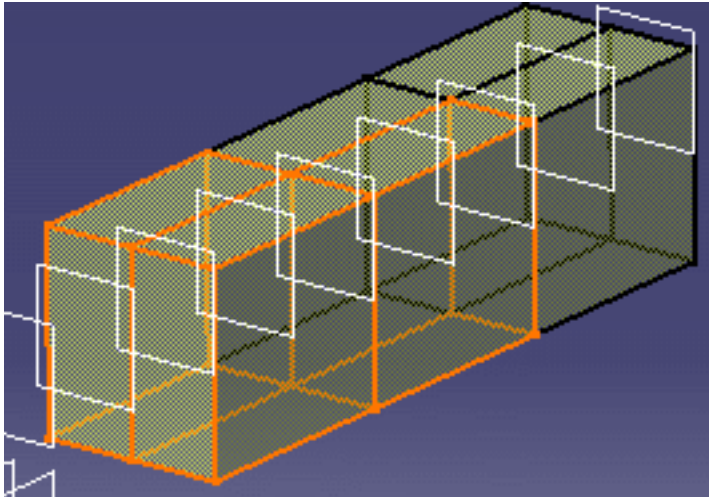
You are now ready to define blocks from grid cells.




Merging Grid Cells

Using the 3D Merge  command, you can merge grid cells.

- Select grid cells you want to merge.
Click the List icon to browse and modify the list of cells you want merged.




- Click **OK** in the 3D Merge dialog box when done.

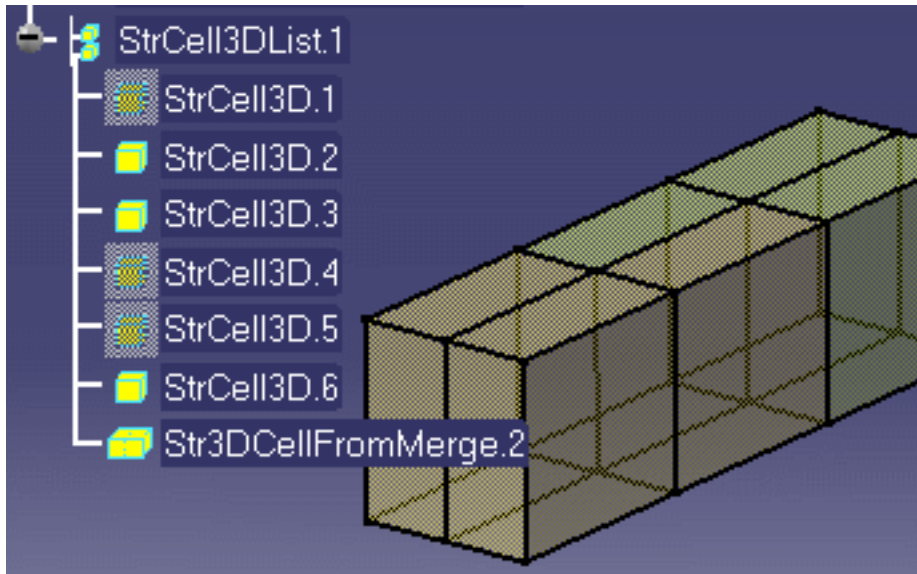

Defining Blocks

- 11.** Click the Block  icon.

The Block dialog box appears.

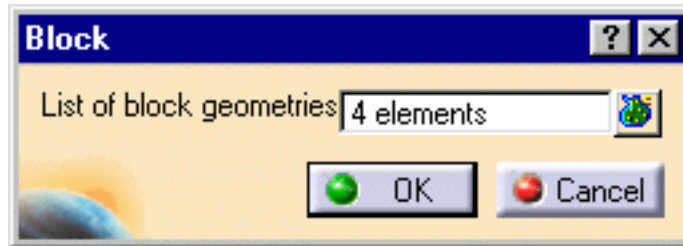

- 12.** If necessary, select the block scheme entry in the specification tree.


The number of cells in the block scheme is identified in the List of block geometries field. Cells are highlighted in the geometry area.

You can visualize the list of cells by clicking the List  icon and remove any grid cells you do not want processed.

- 13.** Click **OK** in the Block dialog box.

Basic blocks are defined as specified.



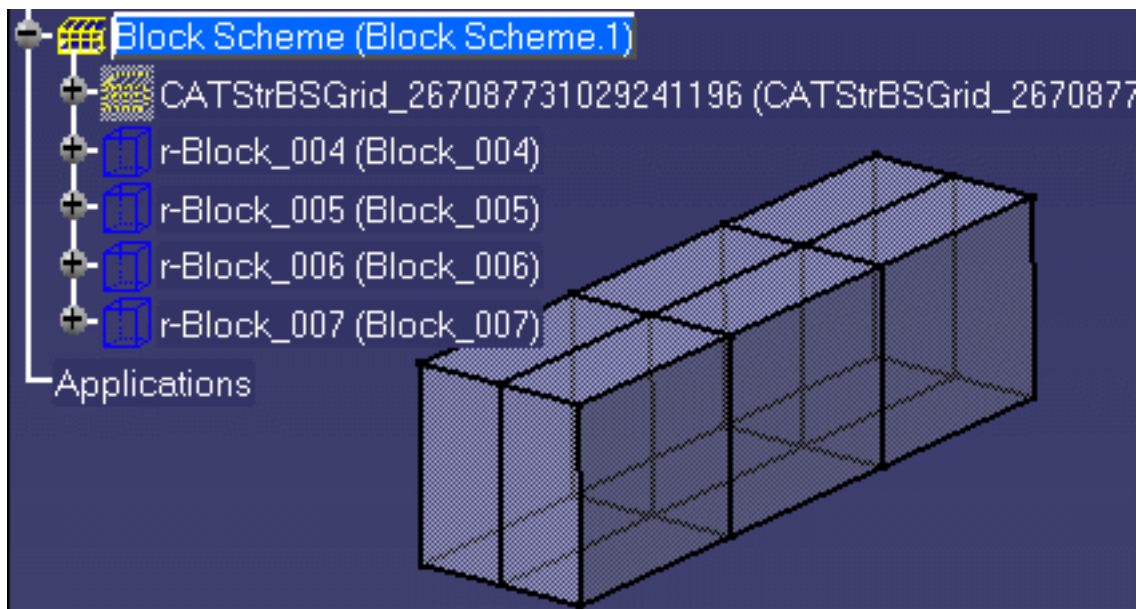

You can now [apply the block scheme to the functional design](#) to define working units that will be used by the detail design engineer for structure detail design.



Generating Detail Design Blocks



This task shows you how to apply a block scheme block to the functional design to define a working unit that will be used for structure detail design.



This command handles individual blocks in the block scheme and is typically a design engineering task. Have the block scheme and functional design open.



1. Click the Split by Block  icon.

The Split by Block dialog box appears.



2. Select the block you want to process.

The system automatically detects all functional design items contained in this block that intersect the block definition. The number of items is listed in the Functional objects field. Items are highlighted in the geometry area.



This command manages functional plates and stiffeners, not functional systems.



3. Remove or add any functional design items to the list of objects to be processed as desired. To visualize the list of functional items selected, click the List icon or right-click in the field and select Elements list from the contextual menu. You can remove or replace items as well as add new items in the Elements list dialog box. The Split by Block command also lets you select items for special treatment, i.e. those items that you do not want trimmed to the block definition.
4. Click the No trimming field and select functional items that you do not want trimmed to the block definition.

Notes:

- Multi-selection capabilities are available when selecting these items.
 - These items must be dealt with separately later.
5. Click **OK** when done to generate the detail design block.

The detail design is generated under a single specification tree entry.



When generating the detail design, functional design classes are mapped to corresponding detail design classes as follows:

Plate system -> Plating

Stiffener system -> Stiffening and beaming



Starting Detail Design from Scratch



This task shows you how to start your detail design from scratch, i.e. without any existing functional objects.

 


Have defined a **block scheme block**.



When starting from scratch, do not open any functional design document.



1. Click the Split by Block  icon.

The Split by Block dialog box appears.



2. Select the block you want to process.


A dialog box informs you that no functional objects intersect the block.



Note: If your functional design was open, remove all functional objects listed.

3. Click **OK** in the Warning dialog box, then in the Split by Block dialog box to generate an empty detail design block.

The detail design is generated under a single specification tree entry.

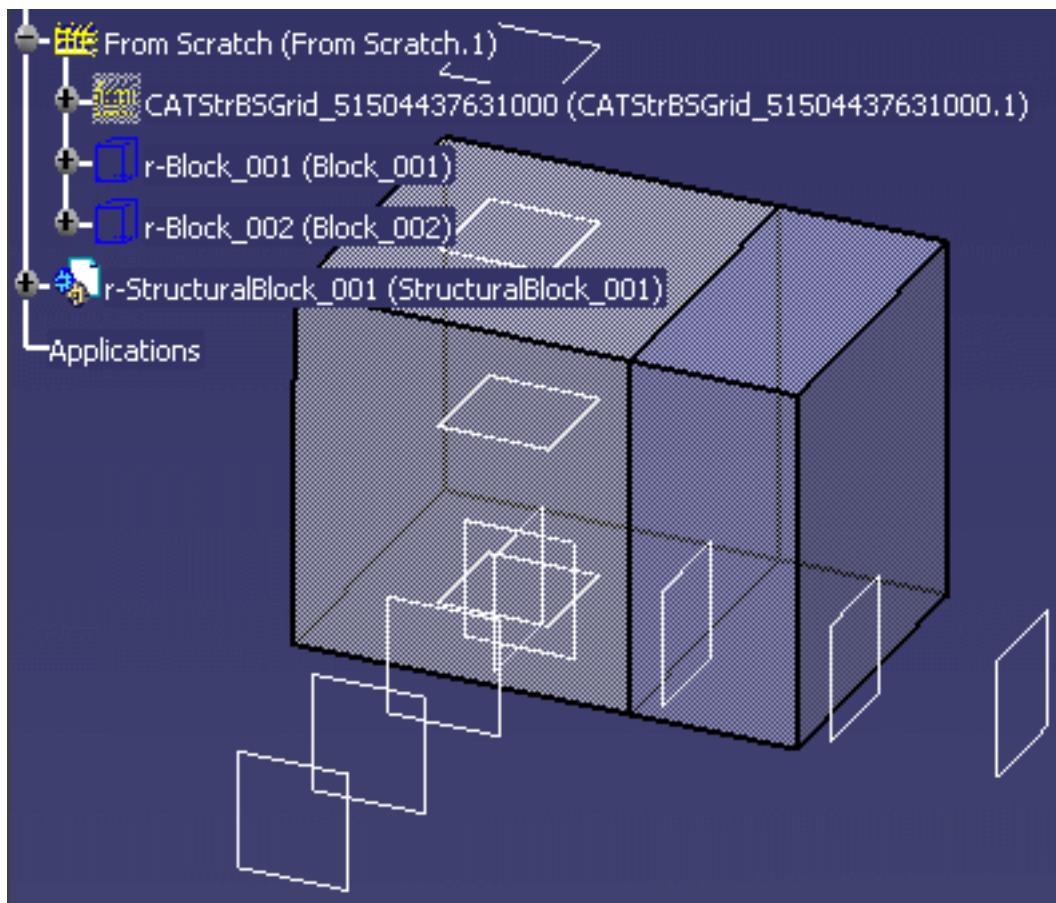

You detail design block is ready; you can start your detail design for scratch.

If necessary, at a later date, you can return to the functional design and select objects of interest.

- Select the detail design block in the specification tree.
- Click the Split by Block icon.
- Select functional objects of interest.
- Click **OK**.



Creating Structural Systems



Create a plating system: set parameters in the dialog box then select a support plane or surface, and if necessary define a contour.



Create plating with free edge: set parameters in the dialog box, select a support plane or surface, and if necessary define a contour, then select the free edge.



Create stiffening systems: select the paneling system to stiffen, set parameters in the dialog box then select web supports and define stiffening system limits.



Create stiffening on free edge: select a paneling system with a free edge, set parameters in the dialog box then define limits.



Create inserting systems: select a paneling system, set parameters in the dialog box then define a contour.



Create openings: select a stiffening or paneling system, specify the positioning strategy and inputs, then select a contour and a cutting mode.



Create beaming systems: activate a paneling system, set parameters in the dialog box, then define beaming limits, and two intersecting planes to define section direction and the beaming trace.



Miter: select the stiffening system to trim then the stiffening system serving as limit.



System split: select the paneling system to split, click the By field and select another paneling system, a surface or a plane.



Strake: select a plating system, click the 2D grid command and define a 2D grid.



Generate plates and shapes: make a multi-selection of detail design objects, click the Product node field and select the node where you want plates and shapes to be instantiated.

Creating Plating Systems



This task shows you how to create plating systems.


New plating systems are added where necessary to complete the functional design before starting the detailed design as such.

A plating system is defined by a plane or surface (support) and a contour.



1. Click the Plating  icon.

The Plating dialog box opens.

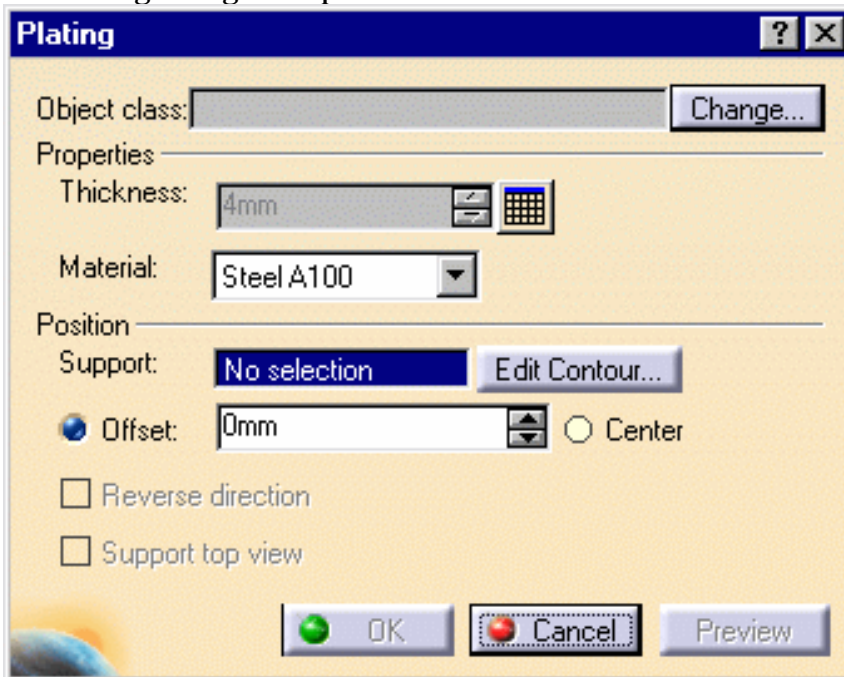


2. Define the associated class:
 - Click Change... opposite Object class:

The Class Browser opens and accesses the [feature dictionary](#) defining object classes.

- If necessary, expand the object class tree and select the desired class, e.g., Deck.
- Click OK when done.

 
The selected class is displayed in the Object class field of the Plating dialog box.

3. Confirm or change plating system properties:
 - Click the Design Table icon  and select a thickness from the design table, then click OK.
 - Select a material and grade in the Material drop-down list.

Thickness and material-grade combinations are managed as [project resources](#).


4. Select the support in your product. In our example, a plane.

A support can be either a plane or a surface.

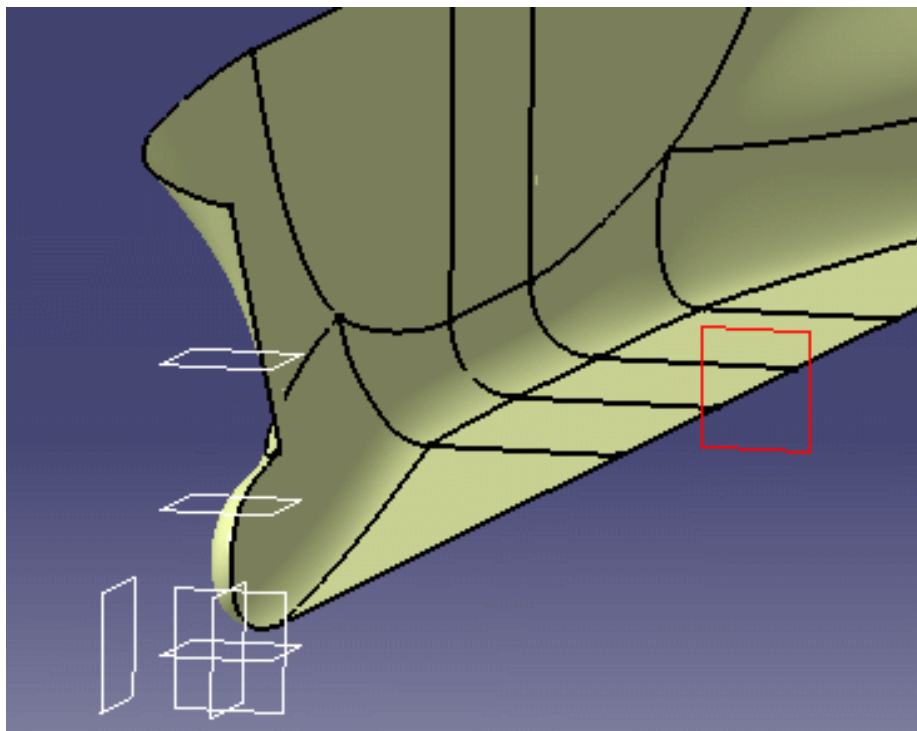

As an alternative, with the Plating dialog box open, click Edit Contour... opposite the Support field, then select the support.


The Paneling Molded Surface dialog box will open and the support identity will appear in the Support field.

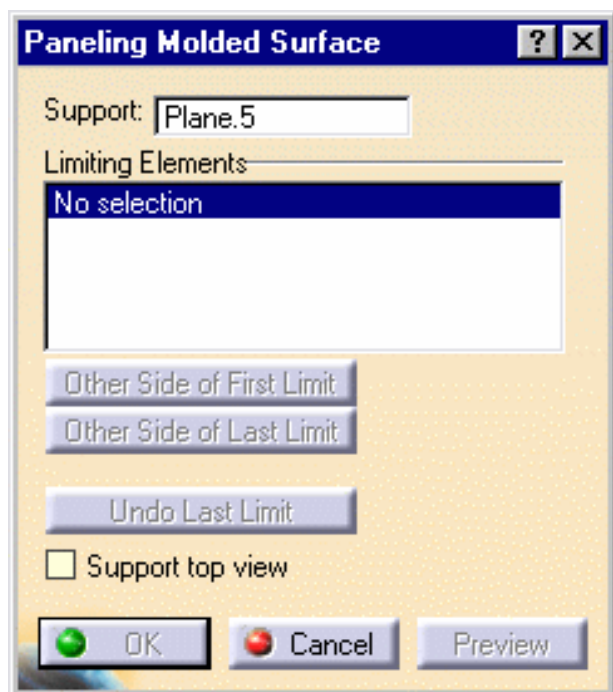




Selecting Limits


- Limits can be any combination of planes, surfaces or paneling systems.
 - With respect to a paneling system, the application retrieves the molded surface and computes the intersection of the underlying molded surface with the support.
 - The order in which you select the limits is essential. Limits must be adjacent; for example, added in a clockwise or counterclockwise direction.
 - You can remove limits if necessary, but only in the reverse order in which they were set.
- 5.** Select the hull as the first limit. A blue curve will appear defining the limit.

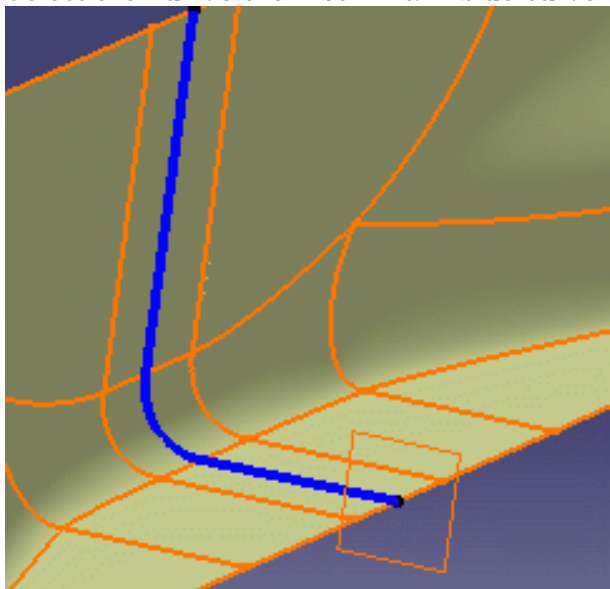

- 6.** Select one of the planes as second limit.

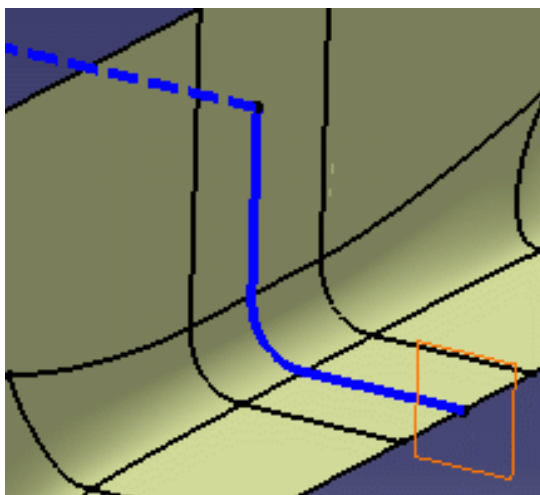


If the curve extends in the wrong direction (as shown above) click either Other Side of First Limit or Other Side of Last Limit, to redirect the curves in the proper direction.

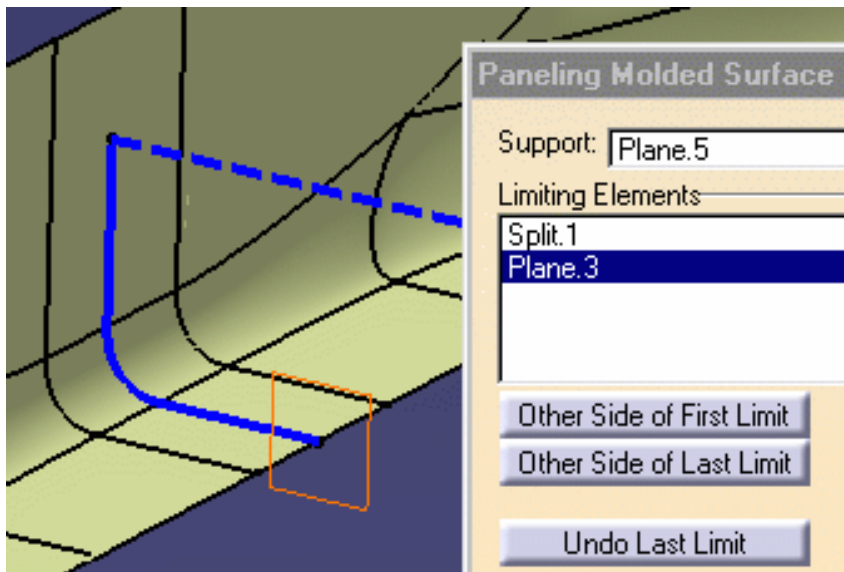


- Toggling the curve corresponding to the first limit can only be done via the dialog box.
Note: This option becomes unavailable when a third limit is selected.
- Toggling the curve corresponding to the last limit can be done via the dialog box or by clicking the limit again in the geometry area.

7. Select the other planes in succession to close the contour.

As you select the limits, click again to toggle the direction of each limit so that it points inwards so as to close the contour.

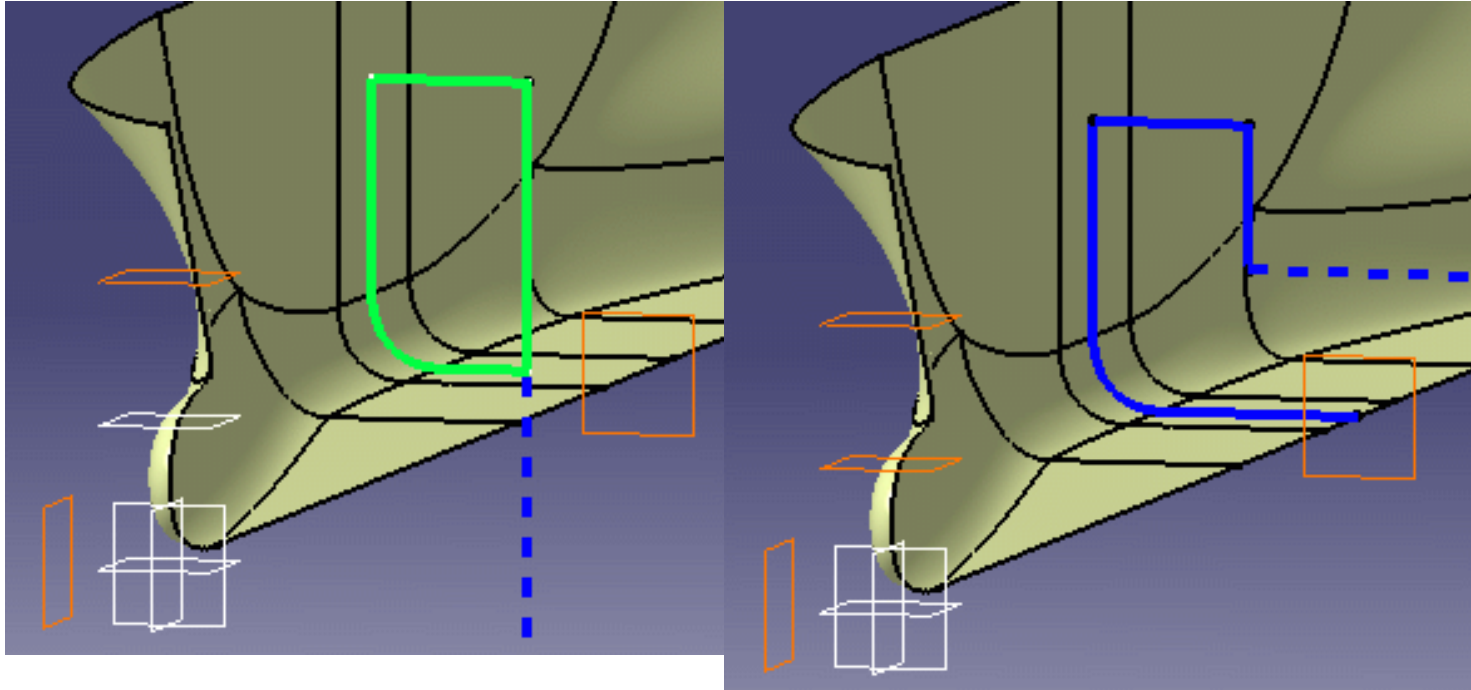

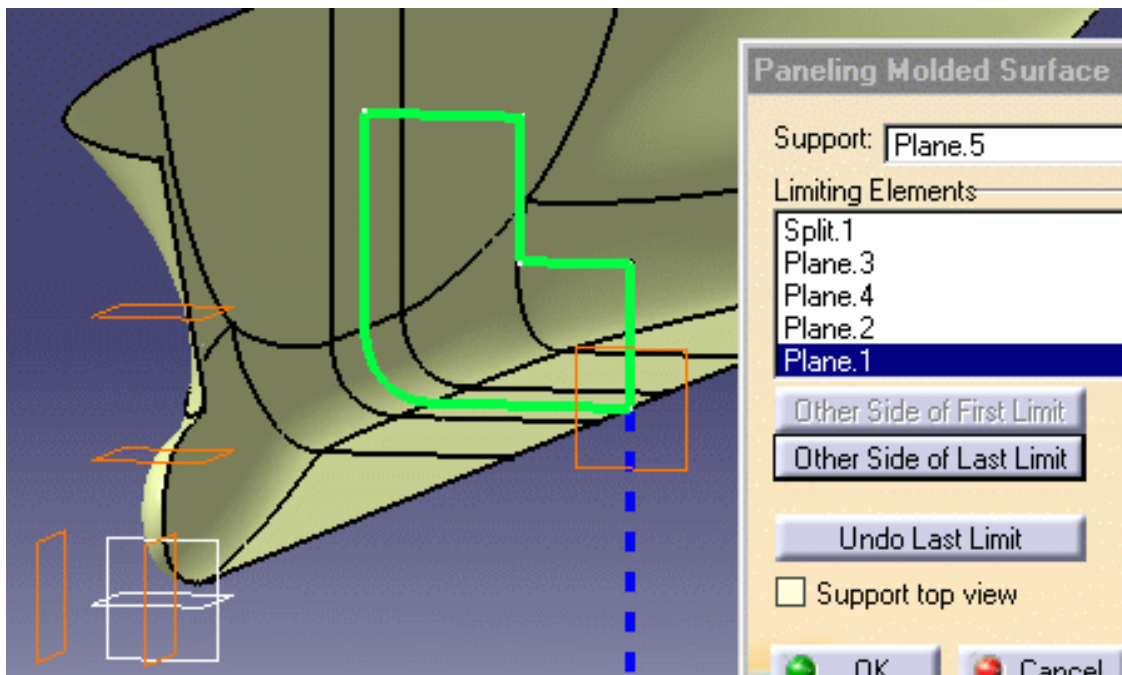


Color Coding

- As you select the limits for your contour the curves are blue. When the contour has been closed properly the contour highlights green. This, however, does not prevent you selecting other limits to define plating of a more complex shape.
- A dotted blue curve corresponds to the current limit.
- A red curve means that the current limit does not intersect the previous limit.

8. Click **OK** when satisfied to return to the Plating dialog box.

A vector in the geometry area shows the direction in which plating system thickness will be oriented. By default, the orientation of plating thickness is defined according to molded conventions. [Molded conventions](#) are managed as project resources.

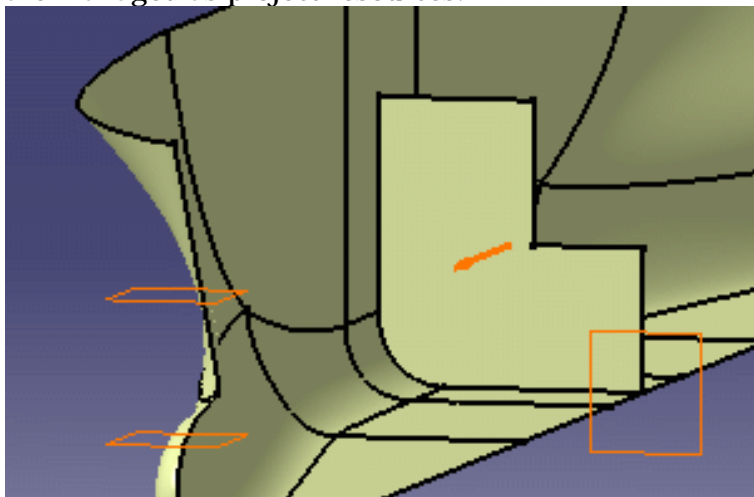


9. Set the offset position of the plating system with respect to the support:

Enter an offset value in the Offset field or click Center to center the plating system with respect to the support. *The offset value may be no greater than the plating thickness.*



Offset


- Offset is calculated in the direction opposite that of the material throw orientation.
- Centering the plating system positions it at half the material thickness.

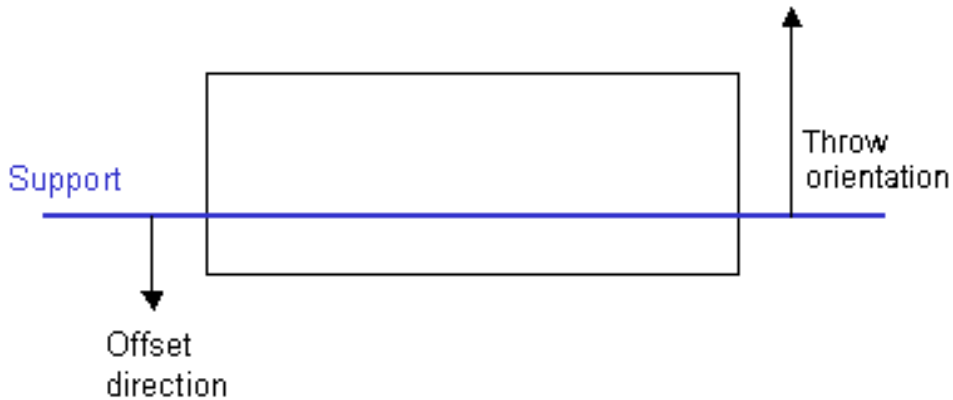

Support top view

This option is only available if the support is a plane and is shared by both Plating and Paneling Molded Surface dialog boxes. When checked, the document view is that of the support plane.

10. (Optional) Change the orientation of plating system thickness by clicking the vector in the geometry area or checking the Reverse direction option in the Plating dialog box.
11. (Optional) Click **Preview** to visualize the result.
12. Click **OK** to generate the new plating system.

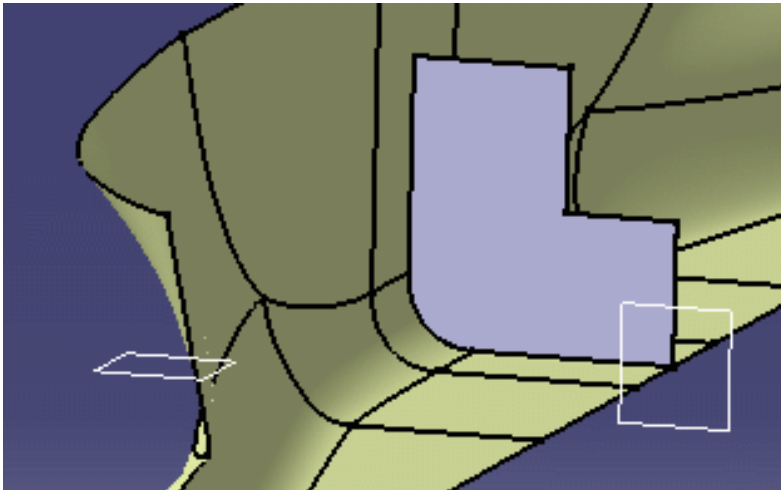

Editing Plating


You can edit the definition of plating to change plating:

- Thickness
- Material
- Support (via the Edit Contour... command, then click the Support field and select a new support).

To do so, right-click the plating in the specification tree and select Definition from the contextual menu.





Creating Plating with Free Edge


 This task shows you how to create plating with a free edge.

New plating systems are added where necessary to complete the functional design before starting the detailed design as such.

A plating system is defined by a plane or surface (support) and a contour with a free edge.

 **1.** Click the Plating with Free Edge  icon.

The Plating with Free Edge dialog box opens.

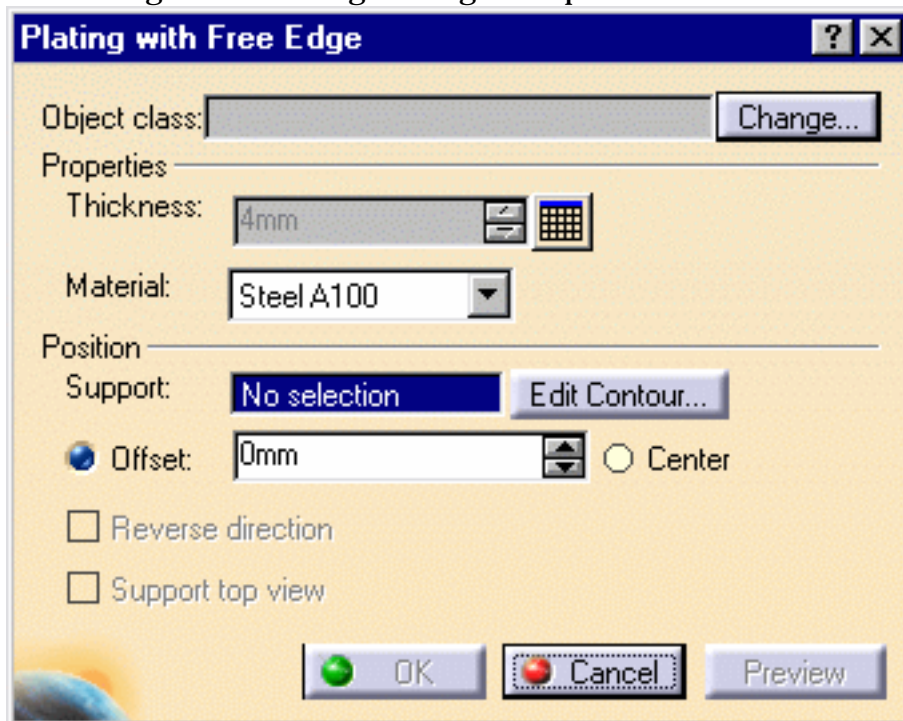

2. Define the associated class:


- Click Change... opposite Object class:

The Class Browser opens and accesses the [feature dictionary](#) defining object classes.

- If necessary, expand the object class tree and select the desired class, e.g., Deck.
- Click OK when done.

The selected class is displayed in the Object class field of the Plating with Free Edge dialog box.


3. Confirm or change plating system properties:

- Click the Design Table icon  and select a thickness from the design table, then click OK.
- Select a material and grade in the Material drop-down list.

Thickness and material-grade combinations are managed as [project resources](#).


4. Select the support in your product. In our example, a plane.

A support can be either a plane or a surface.

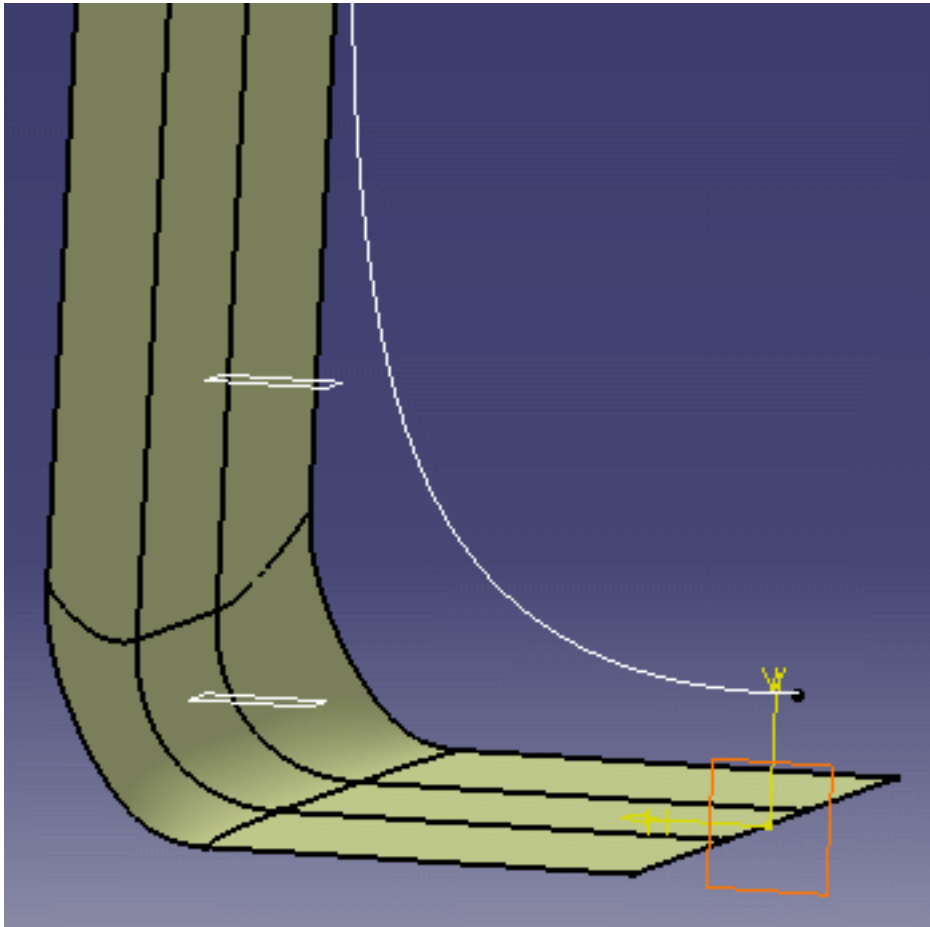

As an alternative, with the Plating dialog box open, click Edit Contour... opposite the Support field, then select the support.


The Paneling Molded Surface dialog box will open and the support identity will appear in the Support field.

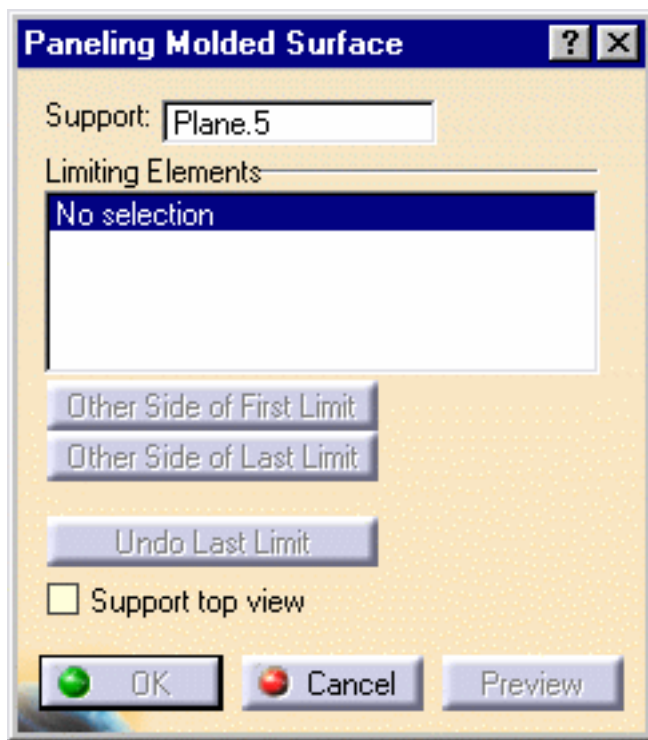


Selecting Limits

- Limits can be any combination of planes, surfaces or paneling systems.
- With respect to a paneling system, the application retrieves the molded surface and computes the intersection of the underlying molded surface with the support.
- The order in which you select the limits is essential. Limits must be adjacent; for example, added in a clockwise or counterclockwise direction.
- You can remove limits if necessary, but only in the reverse order in which they were set.

5. Select a plane as the first limit. A blue curve will appear defining the limit.

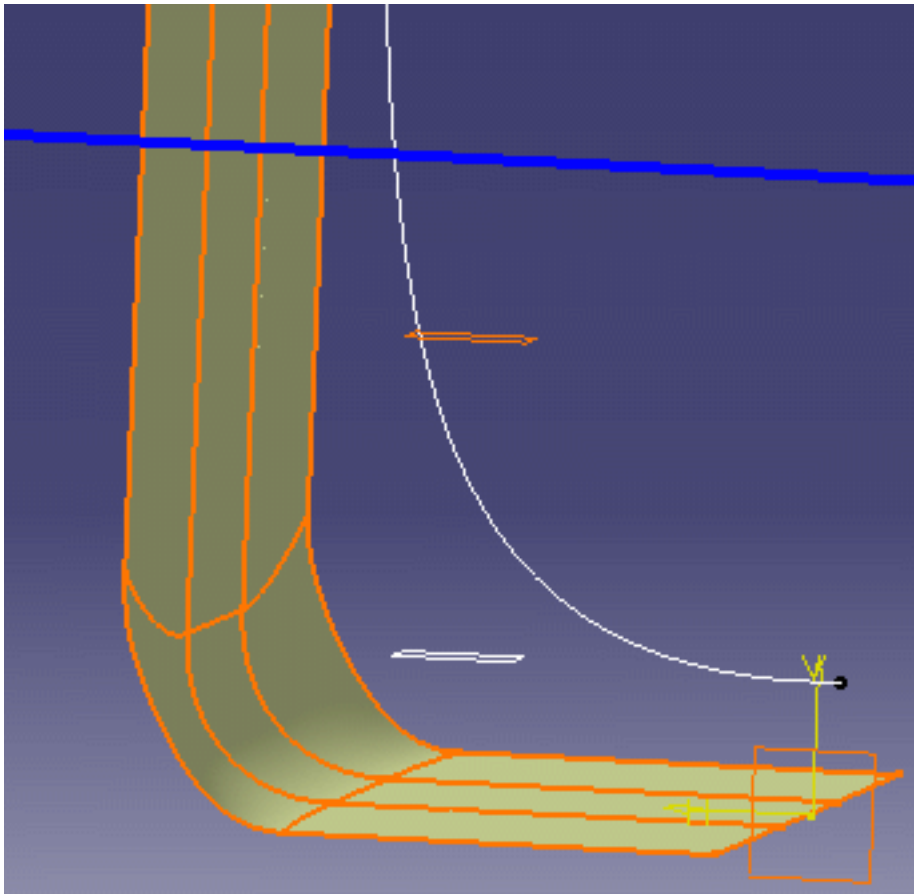


- 6.** Select the hull as second limit.
 If the curve extends in the wrong direction (as shown above) click either Other Side of First Limit or Other Side of Last Limit, to redirect the curves in the proper direction.

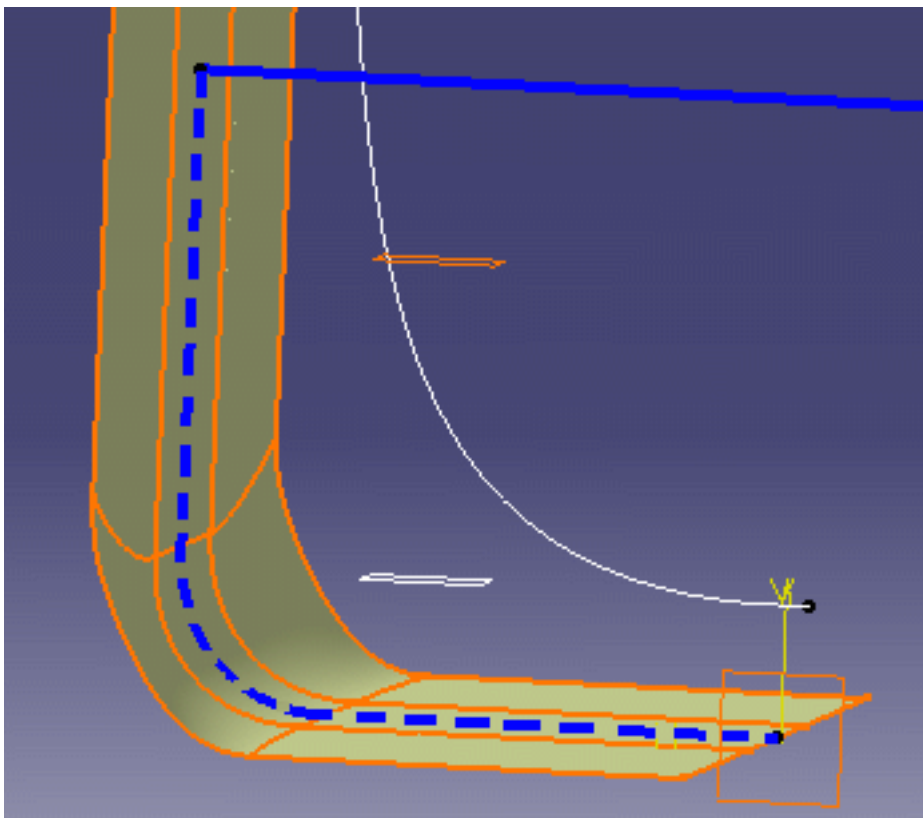

- Toggling the curve corresponding to the first limit can only be done via the dialog box.
Note: This option becomes unavailable when a third limit is selected.
- Toggling the curve corresponding to the last limit can be done via the dialog box or by clicking the limit again in the geometry area.

7. Select other planes in succession to close the contour.

As you select the limits, click again to toggle the direction of each limit so that it points inwards so as to close the contour.

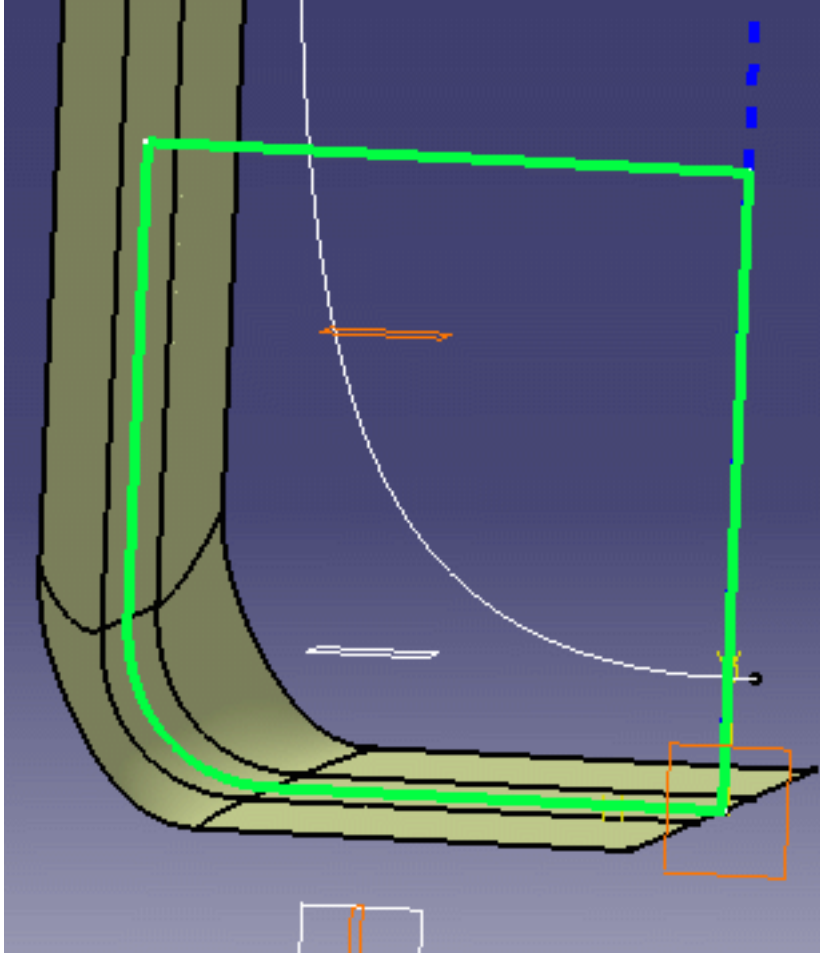


Color Coding

- As you select the limits for your contour the curves are blue. When the contour has been closed properly the contour highlights green. This, however, does not prevent you selecting other limits to define plating of a more complex shape.
- A dotted blue curve corresponds to the current limit.
- A red curve means that the current limit does not intersect the previous limit.


8. Click the Free edge field, then select the free edge.

The free edge is a curve and must exist in the document. It is always selected last.

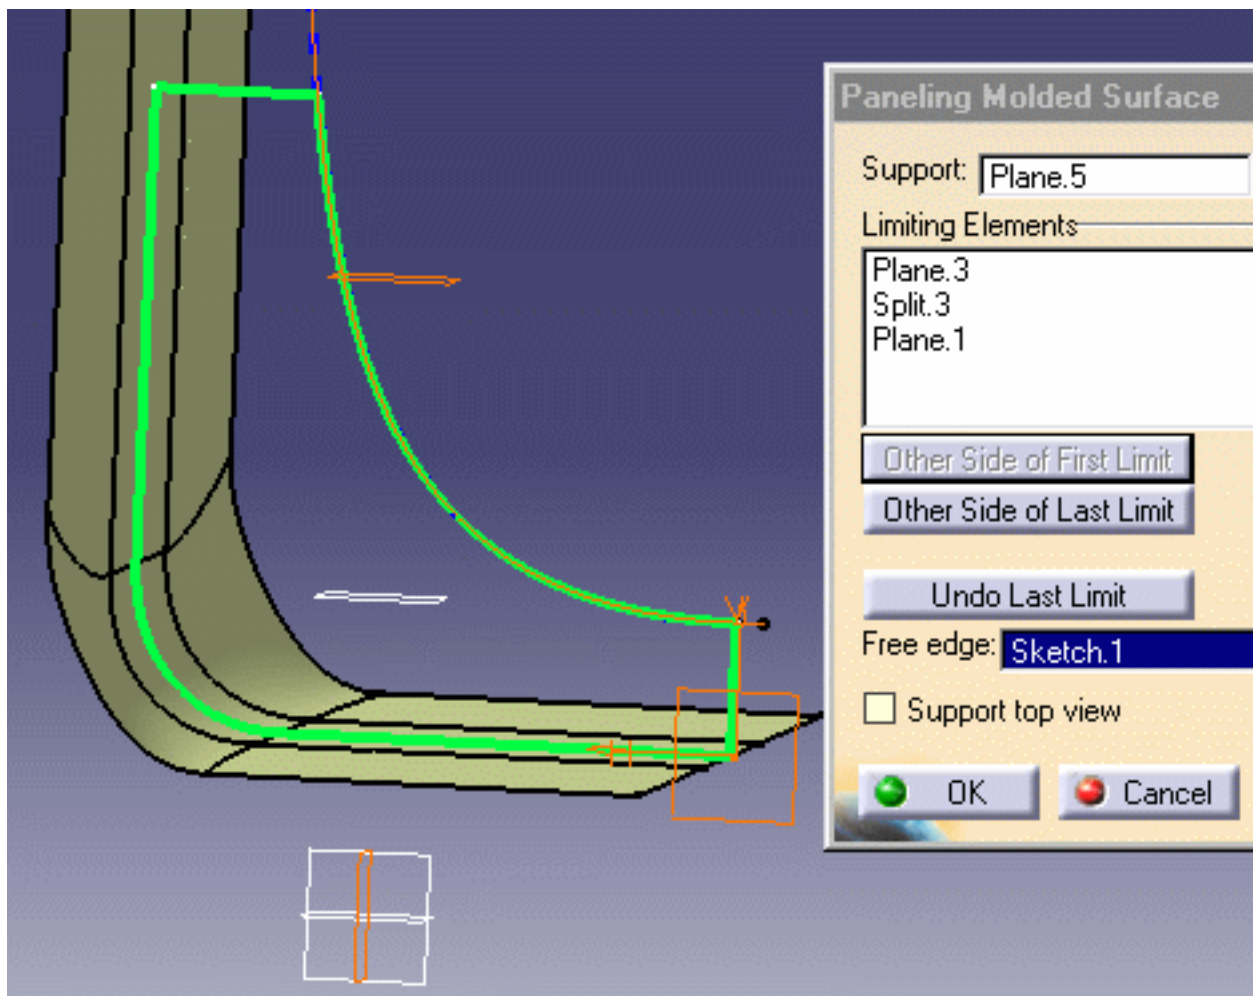

9. Click **OK** when satisfied to return to the Plating with Free Edge dialog box.

A vector in the geometry area shows the direction in which plating system thickness will be oriented. By default, the orientation of plating thickness is defined according to molded conventions. [Molded conventions](#) are managed as project resources.

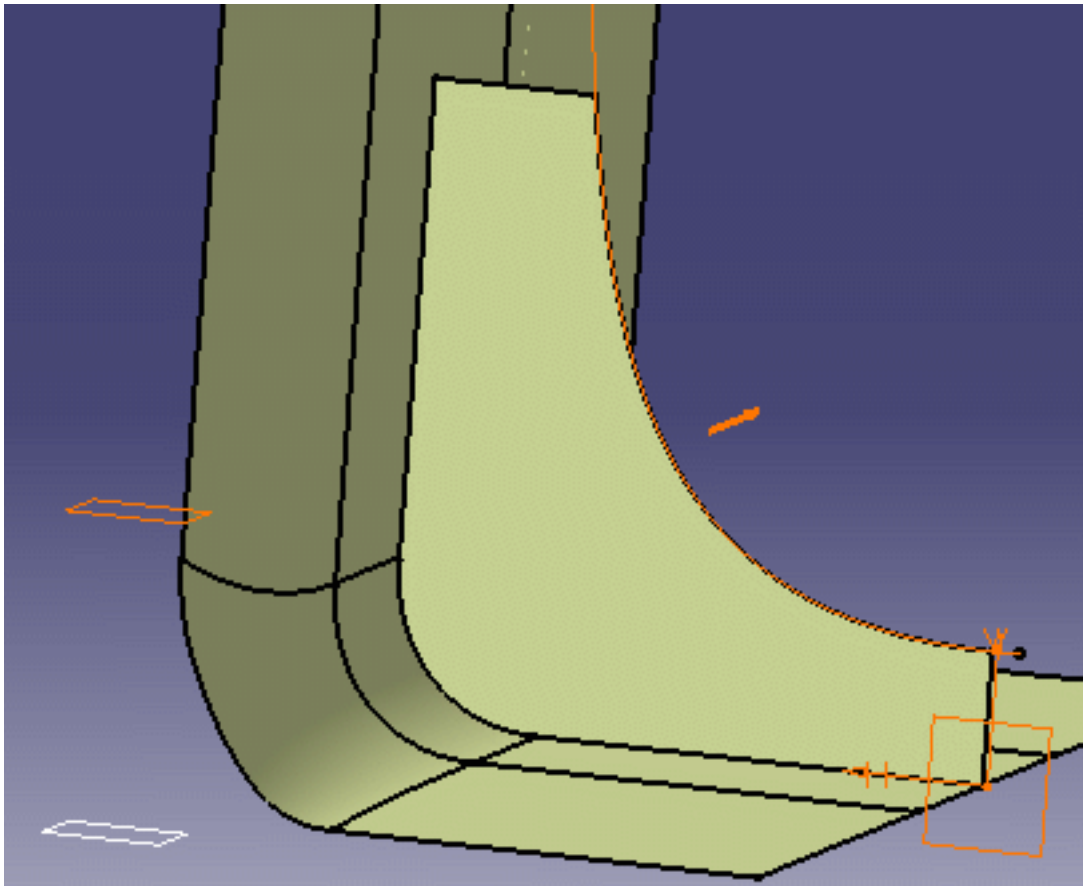


- 10.** Set the offset position of the plating system with respect to the support:

Enter an offset value in the Offset field or click Center to center the plating system with respect to the support. *The offset value may be no greater than the plating thickness.*

Offset


- Offset is calculated in the direction opposite that of the material throw orientation.
- Centering the plating system positions it at half the material thickness.

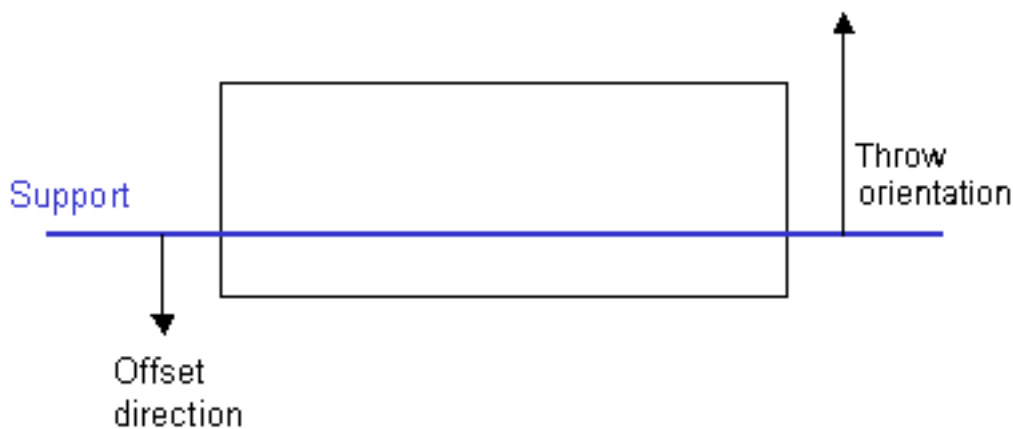

Support top view

This option is only available if the support is a plane and is shared by both Plating and Paneling Molded Surface dialog boxes. When checked, the document view is that of the support plane.

11. (Optional) Change the orientation of plating system thickness by clicking the vector in the geometry area or checking the Reverse direction option in the Plating with Free Edge dialog box.
12. (Optional) Click **Preview** to visualize the result.
13. Click **OK** to generate the new plating with free edge.

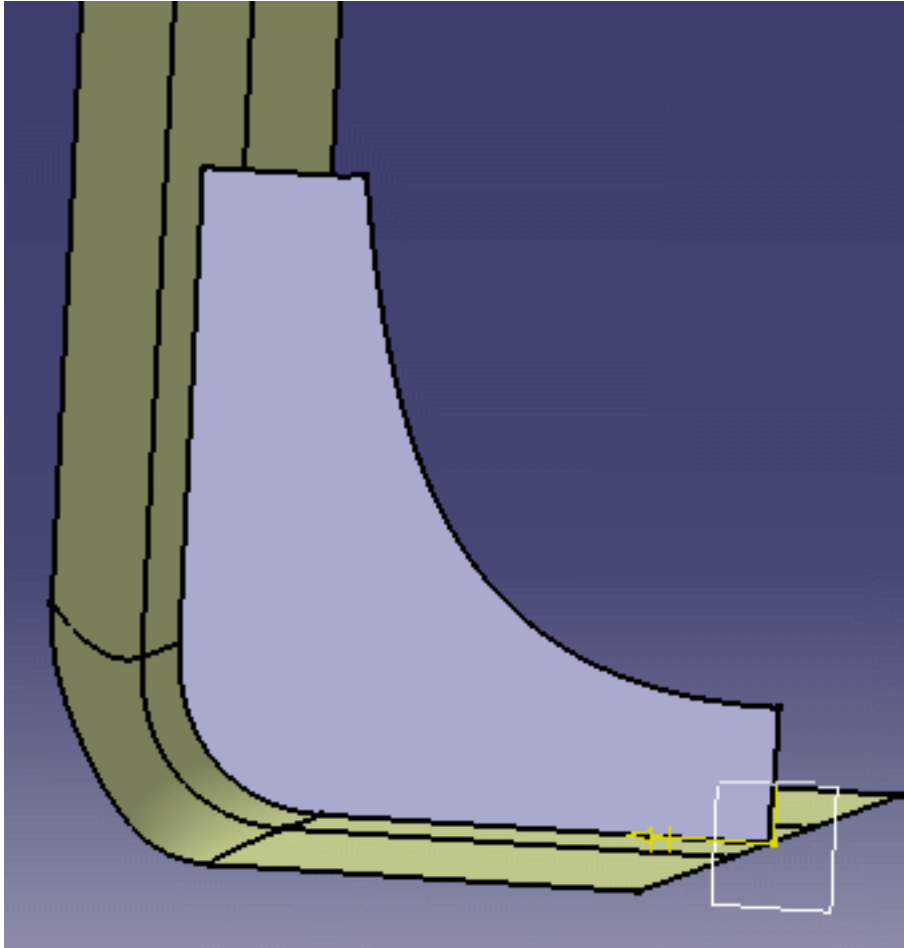

Editing Plating with Free Edge

You can edit the definition of plating with free edge to change plating:

- Thickness
- Material
- Support (via the Edit Contour... command, then click the Support field and select a new support)
- Free edge (via the Edit Contour... command, then click Undo Last Limit and select the new free edge).

To do so, right-click the plating in the specification tree and select Definition from the contextual menu.



Creating Stiffening Systems




This task shows you how to stiffen plating.


Stiffening systems are added to plating under paneling systems where necessary to complete the functional design before starting the detail design as such.

A stiffening system is defined by a web support (a plane or surface) and two limits (also planes). You can create all kinds of stiffenings, including twisted stiffenings along the hull, using this command.




1. Select the paneling system you want to stiffen in the specification tree or in the geometry area, then click the Stiffening  icon,

Or,

Click the Stiffening  icon, then select the paneling system you want to stiffen.

Note: The system detects the paneling if you select a constituent part in the geometry area.

The Stiffening dialog box appears.

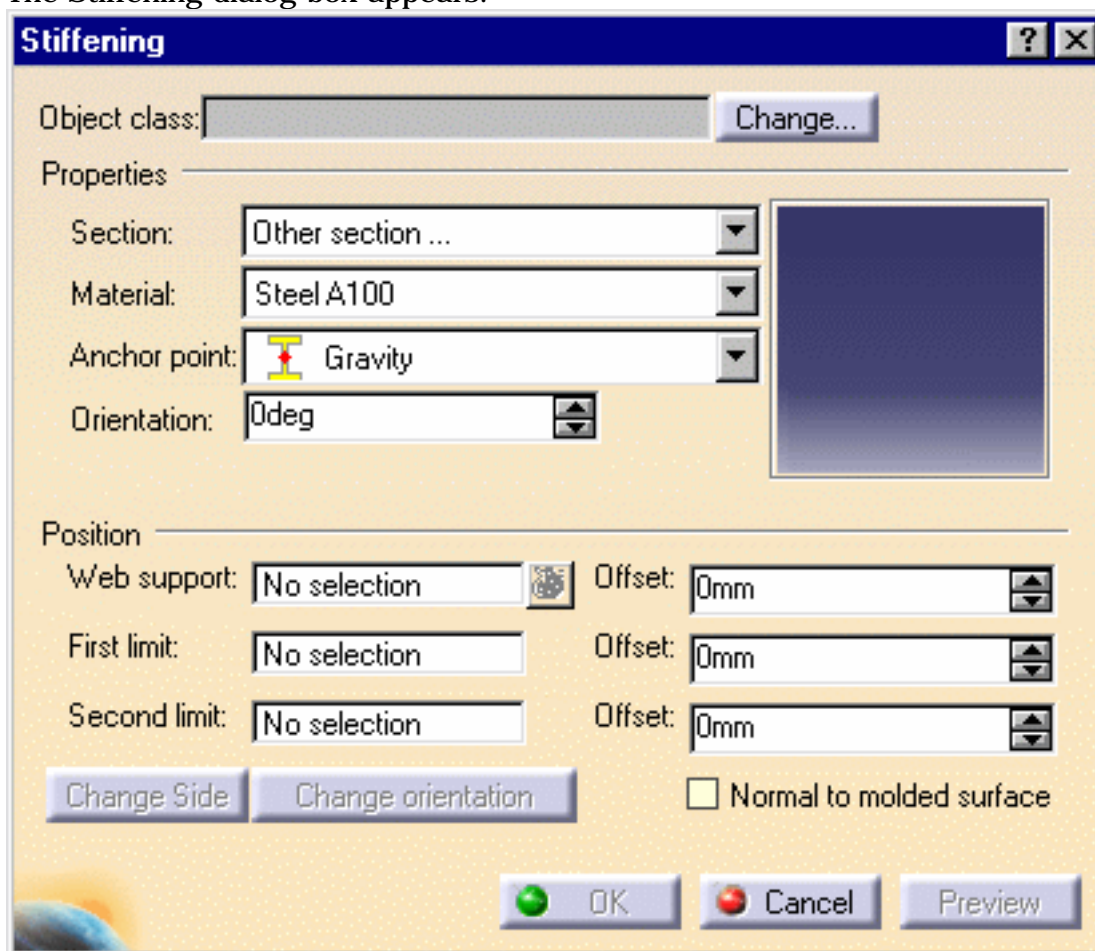


Stiffening [?] [X]

Object class:

Properties


Section:

Material:

Anchor point: 

Orientation:

Position

Web support:  Offset:

First limit: Offset:

Second limit: Offset:

☐ Normal to molded surface

2. Define the associated class:

- Click Change... opposite Object class
The Class Browser opens and accesses the [feature dictionary](#) defining object classes.
- Expand the object class tree and select the desired class
- Click **OK** when done.

You can now specify stiffening system properties.

3. In the Section field, select the section shape and size you want to use. Click:


- One of the available section names, or
- Other section... to access catalog sections not already listed. A sample section catalog is supplied with the product.

The path to the folder containing the list of available sections and the section catalog are managed as [project resources](#).

If there are no choices in the Section field, click Other section... and initialize a section list with catalog sections for subsequent use.

The Catalog Browser opens letting you browse and preview the contents of the current catalog, by default the AISC_BigScale catalog. You have several choices of standard section types.

- Browse available categories in the Catalog Browser dialog box and double-click the category of interest
- Browse the list of shape sizes and select the size of interest

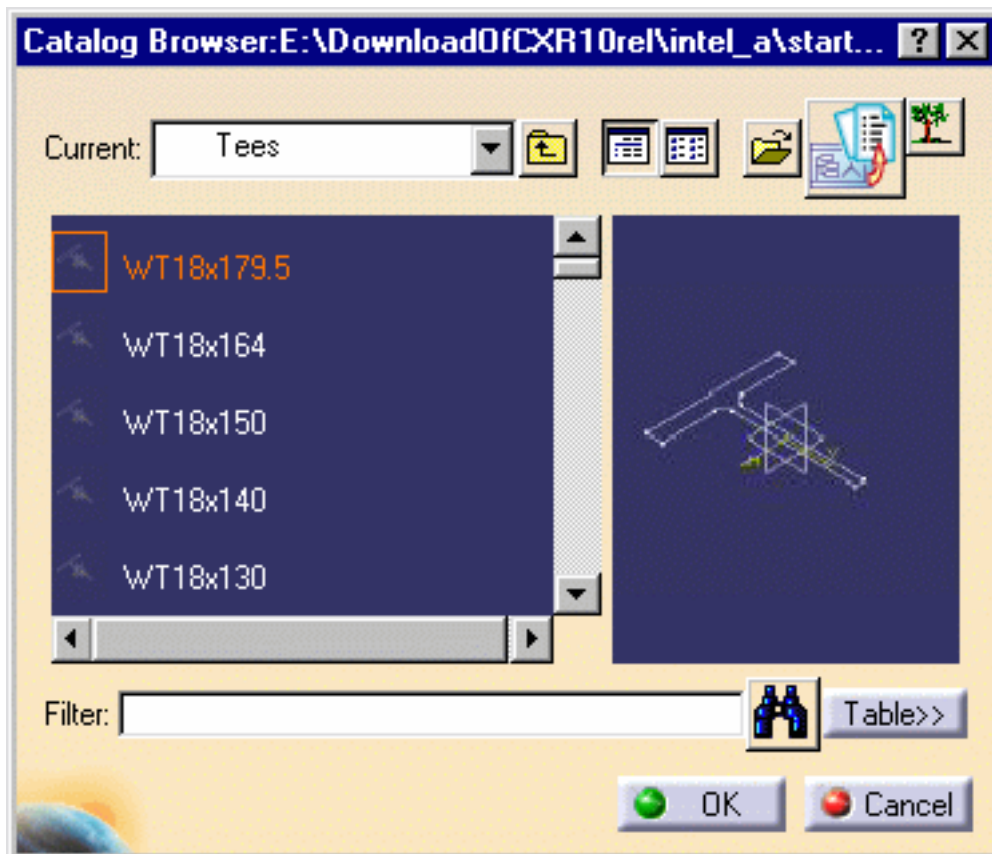



If you get the following message:

The source file of the design table AISC_XX wasn't found. The design table is in broken state while this file isn't found.

the design table path is not updating properly to reflect the catalog location. For information on how to correct this, see [About Section Catalogs](#).

- Click **OK** in the dialog box

For information on options in the Catalog Browser, see Using Catalogs in the *Infrastructure User's Guide*.

- Repeat until you have selected all catalog sections you are likely to need.

As sections are created in your document, copies of the sections are added to a resolved directory. This resolved sections directory (or folder) is the source for the list of available sections when you click the drop-down arrow opposite Section in the Stiffening dialog box.

The path for this resolved directory is managed in transparent fashion for the user, but can be customized by the administrator as a project resource.

4. Select a material and grade in the Material drop-down list.


Material-grade combinations are managed as a [project resource](#).



You are now ready to position the stiffening system.

5. In the preview or in the Anchor point list, select the point at which to anchor the section to the plating:

By default, the stiffening section is positioned normal to the plating.

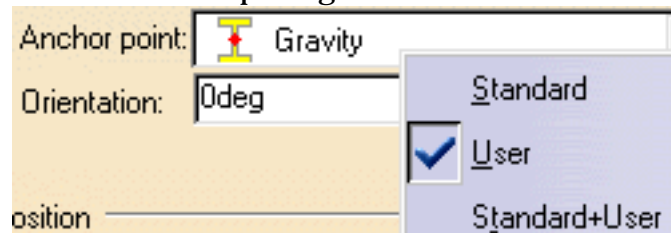Right-click in the Anchor point field to limit the anchor points listed to user-defined anchor points.




Three user-defined anchor points (WebSideRight, WebSideLeft and WebCenter) for L, T and bulb sections are supplied with the product. These anchor points are accompanied by the symbol  to distinguish them from standard anchor points ().

6. If needed, specify an angle to orient the section around its anchor point.

By default, the orientation field is updated in 90 degree increments. You can change the rotation increment:

- Right-click in the field
- Select Change step, then 1 degree or new one and set the step value you want to use.

In the illustration below, the section is anchored WebSideRight at 0 degrees (left-hand section) and at 15 degrees (right-hand section).

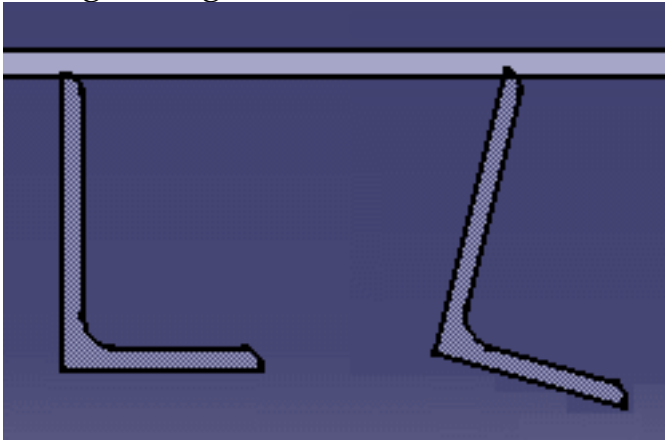

7. Click the Web support field and select the web support.

The web support is a plane or surface. The section is oriented in the same plane as the web support and is swept along the intersection curve between the plane and the molded surface of the parent paneling system. Plating thicknesses are taken into account.

Note: Multiple selection is available for the web support.

You can, if desired, enter an offset with respect to the web support.

8. If necessary, check the Normal to molded surface option.


The section is oriented normal to the molded surface of the paneling system as it is swept along the trace curve.

Check this option to stiffen the hull and create twisted stiffening systems.



9. Click the First limit field and select a first plane.
10. Click the Second limit field and select a second plane.
11. Click Preview to visualize the stiffening system.

By default, stiffening systems are placed according to molded conventions and are placed on the opposite side of the default orientation for plating thickness. [Molded conventions](#) are managed as project resources.

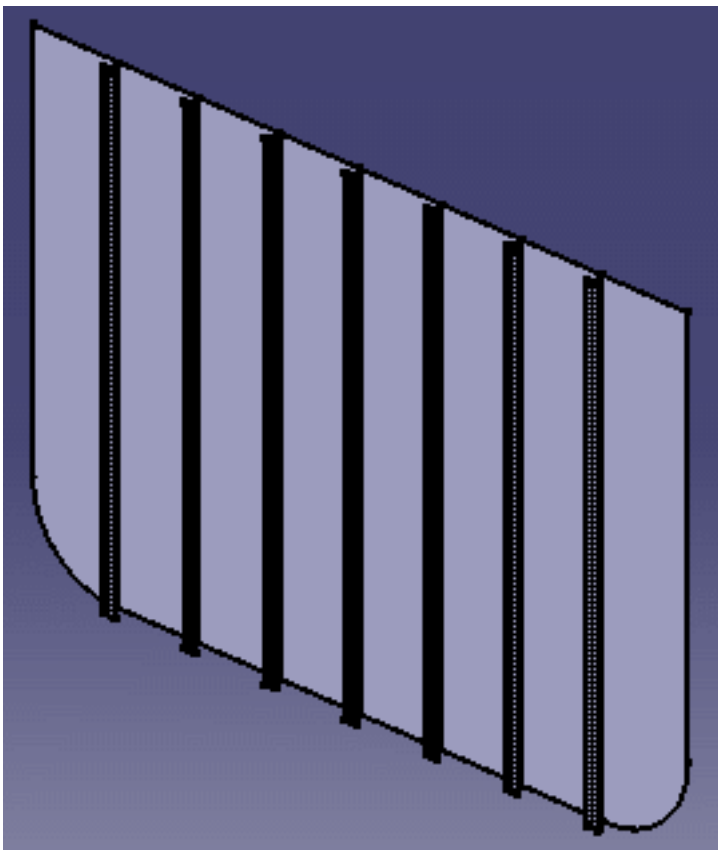


Stiffening [?] [X]

Object class:

Properties


Section: [v]

Material: [v]

Anchor point:  [v]

Orientation: [up] [down]

Position


Web support:  Offset: [up] [down]

First limit: Offset: [up] [down]


Second limit: Offset: [up] [down]

☐ Normal to molded surface

- 12.** If needed, click Change Side to place the stiffening system on the opposite side of the plating, then click Preview to view the result.

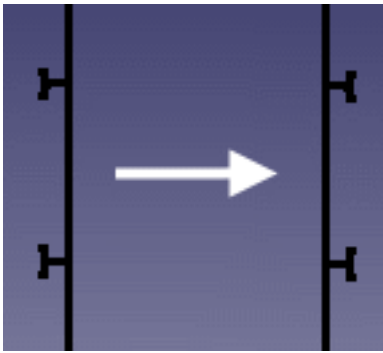

- 13.** If needed, click Change Orientation to flip the stiffener section around its anchor point, then click Preview to view the result.

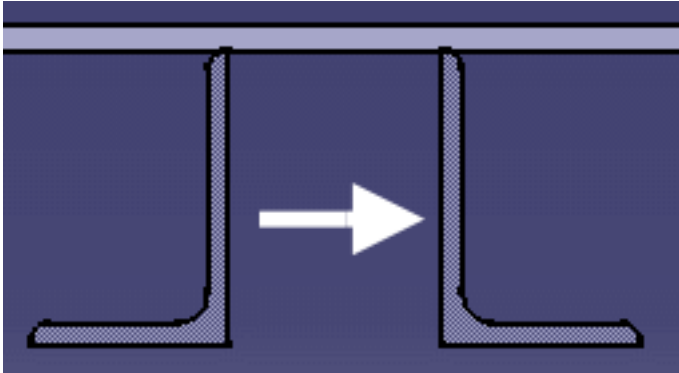

You can make changes to stiffening system position (anchor point, orientation, etc.) at any time and click Preview to see the result.

- 14.** Click **OK** when done.

Editing Stiffening

You can edit the definition of stiffening to change both the properties and position of the stiffening.

To do so, right-click the stiffening in the specification tree and select Definition from the contextual menu.




Note: If needed, select Compute when changes have been made to take plating thickness into account.




Creating Stiffening on Free Edge



This task shows you how to add constant-section (flat bar) stiffening systems to free edges of plating or around openings in order to stiffen edges and prevent water washing through doors and other openings.

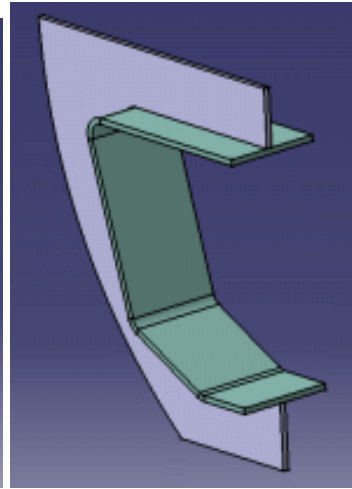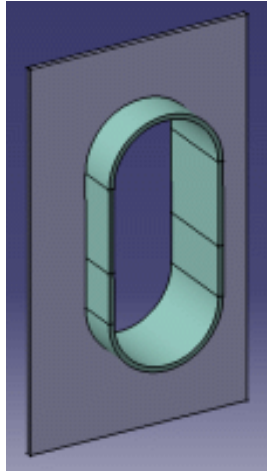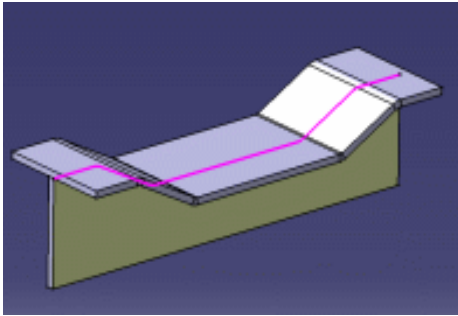

1. Select a paneling system with free edge or with openings in the specification tree or the geometry area, then click the Stiffening on Free Edge  icon,


Or,

Click the Stiffening on Free Edge  icon, then select a paneling system.

Note: The system detects the paneling if you select a constituent part in the geometry area.

The Stiffening On Free Edge dialog box appears.

The selected paneling is identified in the Free edge field.

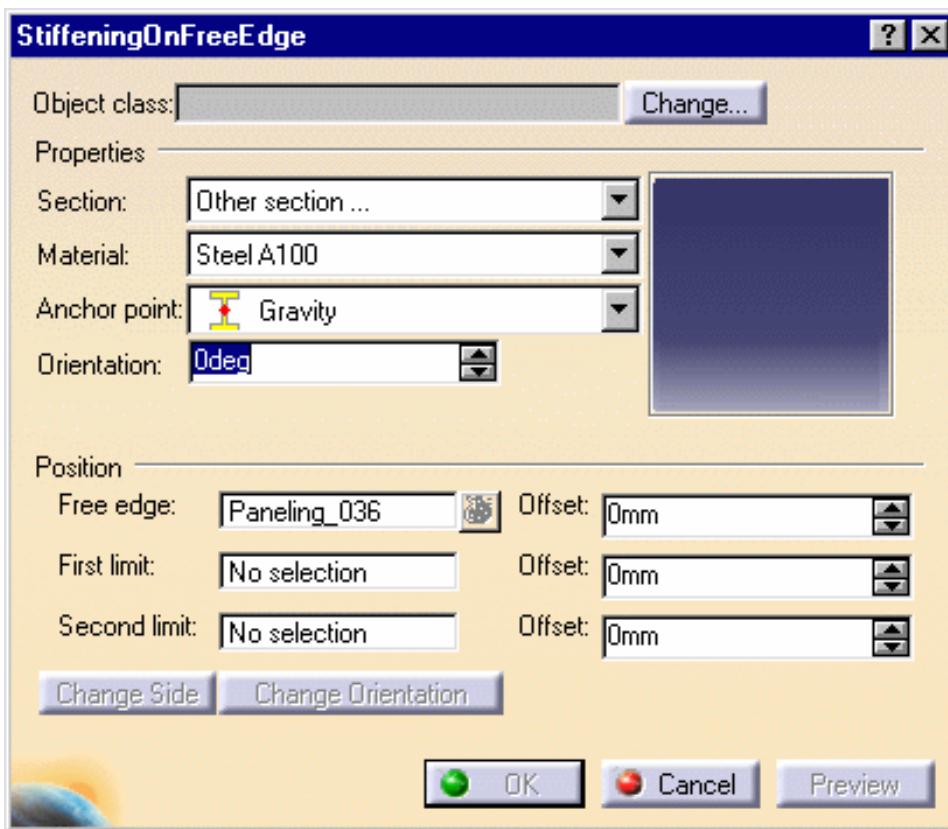

2. Define the associated class:
 - Click Change... opposite Object class
The Class Browser opens and accesses the [feature dictionary](#) defining object classes.
 - Expand the object class tree and select the desired class
 - Click **OK** when done.

You can now specify stiffening system properties.

3. In the Section field, select the section shape and size you want to use. For stiffening with free edge, you will want a flat bar.

Click:

- One of the available section names, or
- Other section... to access catalog sections not already listed. A sample section catalog is supplied with the product.


The path to the folder containing the list of available sections and the section catalog are managed as [project resources](#).

If there are no choices in the Section field, click Other section... and initialize a section list with catalog flat bar sections for subsequent use.

The Catalog Browser opens letting you browse and preview the contents of the current catalog, by default the AISC_BigScale catalog.

- Browse available categories in the Catalog Browser dialog box and double-click Flat_Bars
- Browse the list of shape sizes and select the size of interest



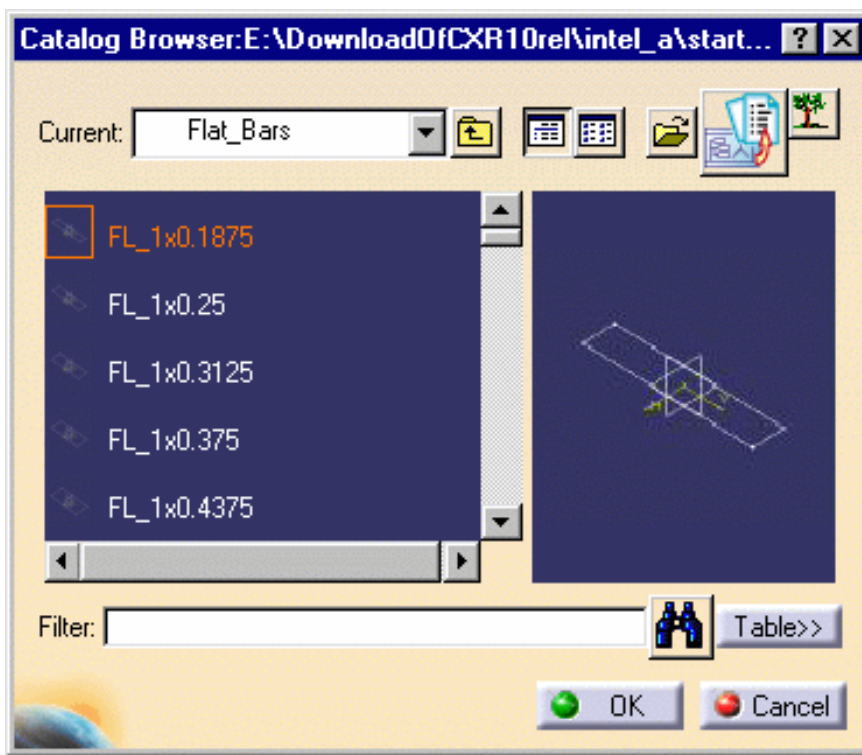

If you get the following message:

The source file of the design table AISC_XX wasnt found. The design table is in broken state while this file isn't found.

the design table path is not updating properly to reflect the catalog location. For information on how to correct this, see [About Section Catalogs](#).

- Click **OK** in the dialog box

For information on options in the Catalog Browser, see Using Catalogs in the *Infrastructure User's Guide*.

- Repeat until you have selected all flat bar sections you are likely to need.

All selected flat bar sections are added to the folder containing available sections.

As flat bar sections are created in your document, copies of the sections are added to a resolved directory. In addition, this resolved sections directory (or folder) is the source for the list of available sections when you click the drop-down arrow opposite Section in the Stiffening on Free Edge dialog box.

The path for this resolved directory is managed in transparent fashion for the user, and can be customized by the administrator as a project resource.

4. Select a material and grade in the Material drop-down list.

Material-grade combinations are managed as a [project resource](#).


You are now ready to position the stiffening system.



5. In the preview or in the Anchor point list, select the point at which to anchor the section along the free edge.

By default, the stiffening system section is positioned normal to the free edge.

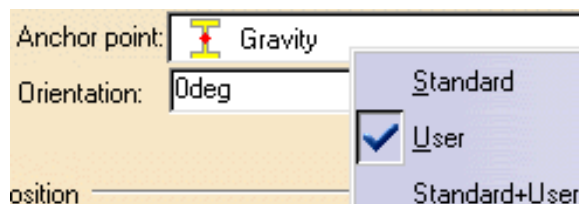

Right-click in the Anchor point field to limit the anchor points listed to those most suited to your purposes. Three lists are proposed: Standard, User and Standard+User.



Three user-defined anchor points (WebSideRight, WebSideLeft and WebCenter) for L, T and bulb sections are supplied with the product. These anchor points are accompanied by the symbol  to distinguish them from standard anchor points ().

6. If needed, specify an angle to orient the section around its anchor point.

By default, the orientation field is updated in 90 degree increments. You can change the rotation increment:

- Right-click in the field
 - Select Change step, then 1 degree or new one and set the step value you want to use.
7. If it is not the free edge of the activated paneling that you want to stiffen but an opening, click the Free edge field and select an opening on the same paneling in the specification tree.


In the case of a paneling with free edge, the system detects the free edge.

You can also enter an offset with respect to the plating.



8. If desired, define limits for the free edge of a paneling:
 - Click the First limit field and select a first plane.
 - Click the Second limit field and select a second plane.

Note: You cannot define limits for coamings.

9. Click Preview to visualize the stiffening system.

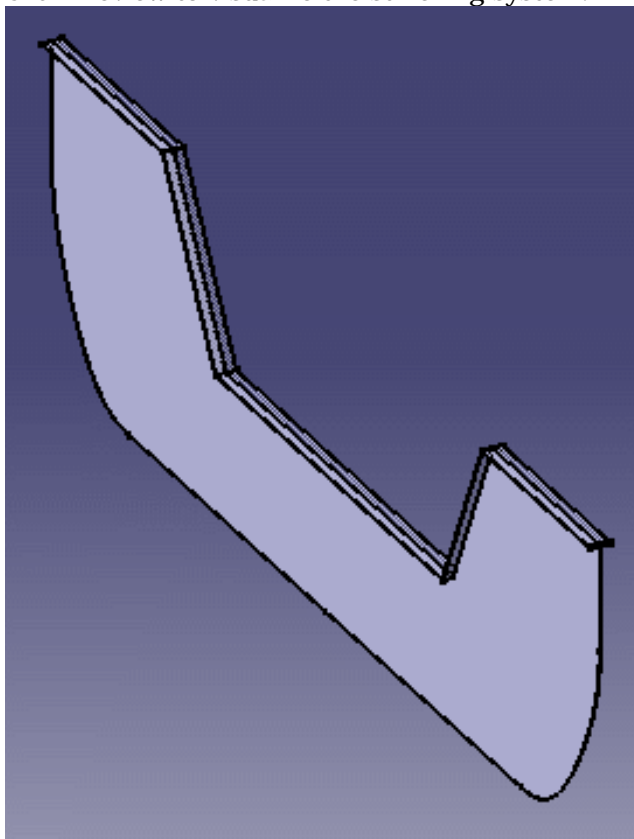

10. If needed, click Change Side to place the stiffening system on the opposite side of the paneling, then click Preview to view the result.

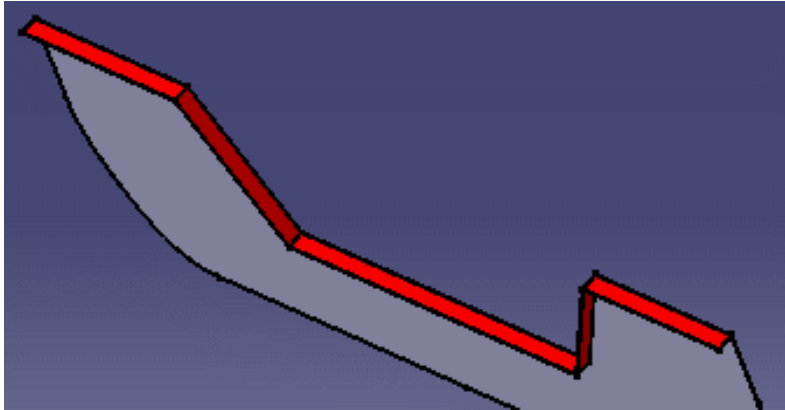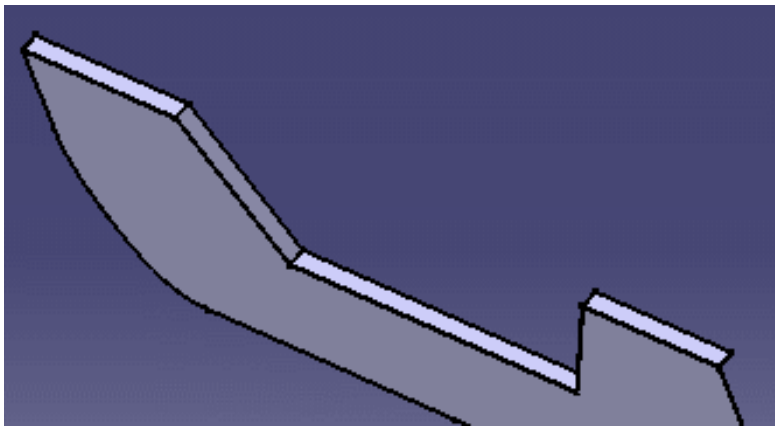

- 11.** If needed, click Change Orientation to flip the stiffener section around its anchor point, then click Preview to view the result.
You can make changes to stiffening position (anchor point, orientation, etc.) at any time and click Preview to see the result.
- 12.** Update if necessary to take plating thickness into account.
- 13.** Click **OK** when done.



Creating Inserting Systems




This task shows you how to create inserting systems.

Inserting systems are a special type of plating that, typically, are used locally to reinforce certain areas. They are created under paneling systems




1. Select the paneling system to which you want to add an inserting in the specification tree, then click the Inserting icon,

Or,

Click the Inserting  icon, then select the paneling system in the specification tree.

The Inserting panel appears. The Support field identifies the molded surface of the paneling. This is the surface used as sketch support.

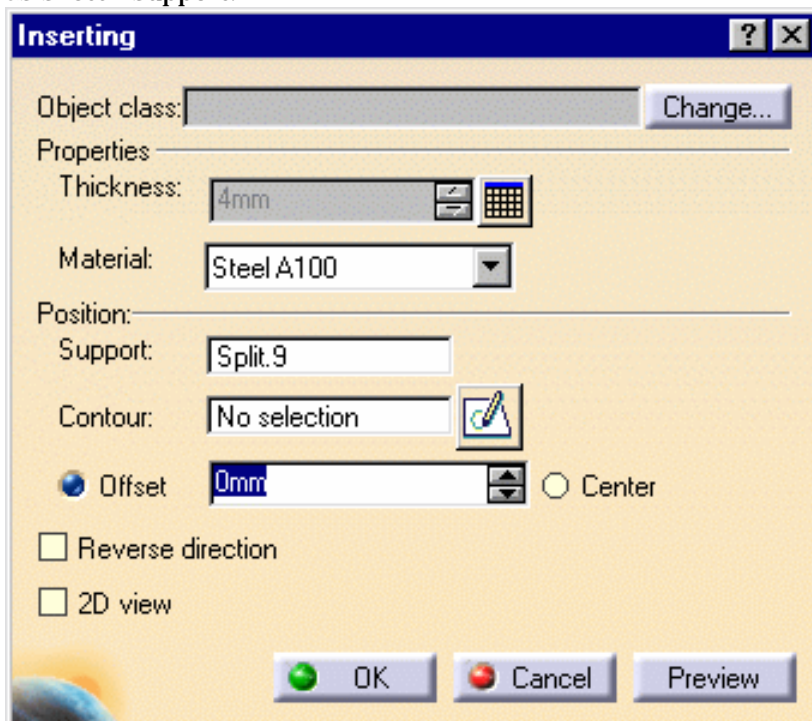

3. Define the associated object class:


- Click Change... opposite Object class.

The Class Browser opens and accesses the [feature dictionary](#) defining object classes.

- If necessary, expand the object class tree and select the desired class.
- Click OK when done.

The selected class is displayed in the Object class field of the Inserting dialog box.

4. Define a contour for your inserting system:

- Click the Sketcher  icon to enter the Sketcher workbench and sketch your contour, then exit the Sketcher when done.
Or,
- Select an existing contour.

5. Click the thickness design table icon and select a thickness from the Design Table dialog box that appears, then click OK.

Thickness is managed via a design table. This table is a [project resource](#).


6. Select a material-grade combination from the drop-down list.

Material-grade combinations are managed as a [project resource](#).

7. Position the inserting system with respect to the support:

- Enter an offset in the Offset field,
or,
- Click Center to center the inserting system with respect to the support, i.e. the molded surface of the paneling.

Offset is measured in the direction opposite that of the throw orientation. A positive or negative offset can be entered of a value no greater than the thickness of the inserting system.

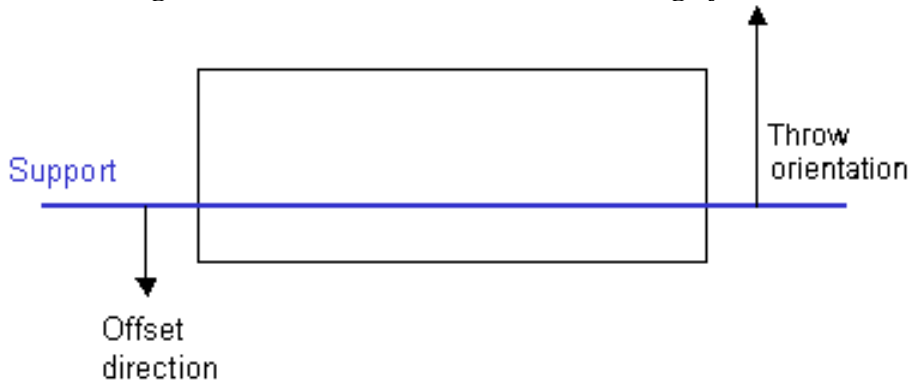

- If necessary, check Reverse direction to change the throw orientation.





Viewing the Inserting System

- Check 2D view to obtain a 2D view
- Click **Preview** to visualize the result

8. Click **OK** to generate the new inserting system.

The inserting system strengthens locally and impacts all plating systems in the paneling system.

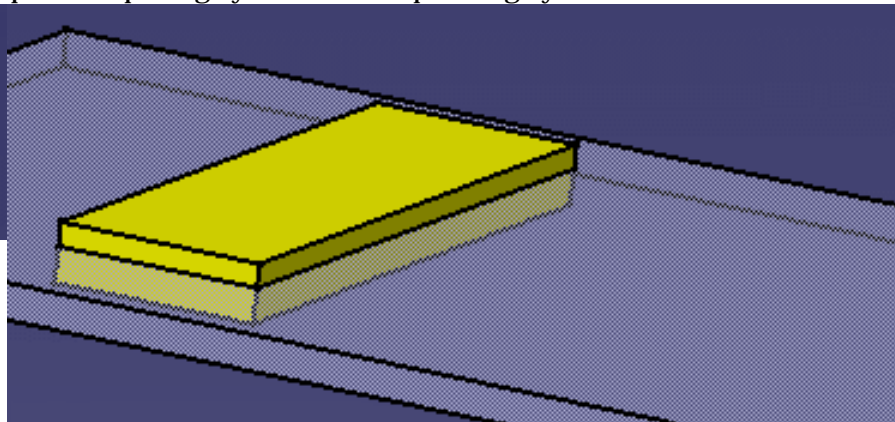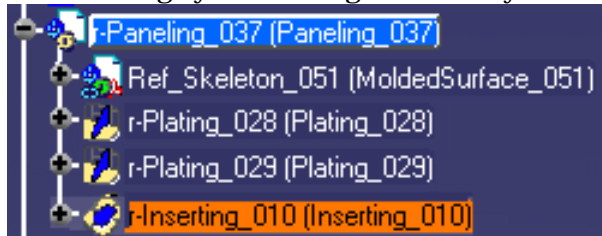




Creating Openings




This task explains how to create openings.



1. Click the Opening  icon, then select the system in the specifications tree for which the opening is to be applied. This can be a stiffening system or a paneling system.

The Opening dialog box appears.

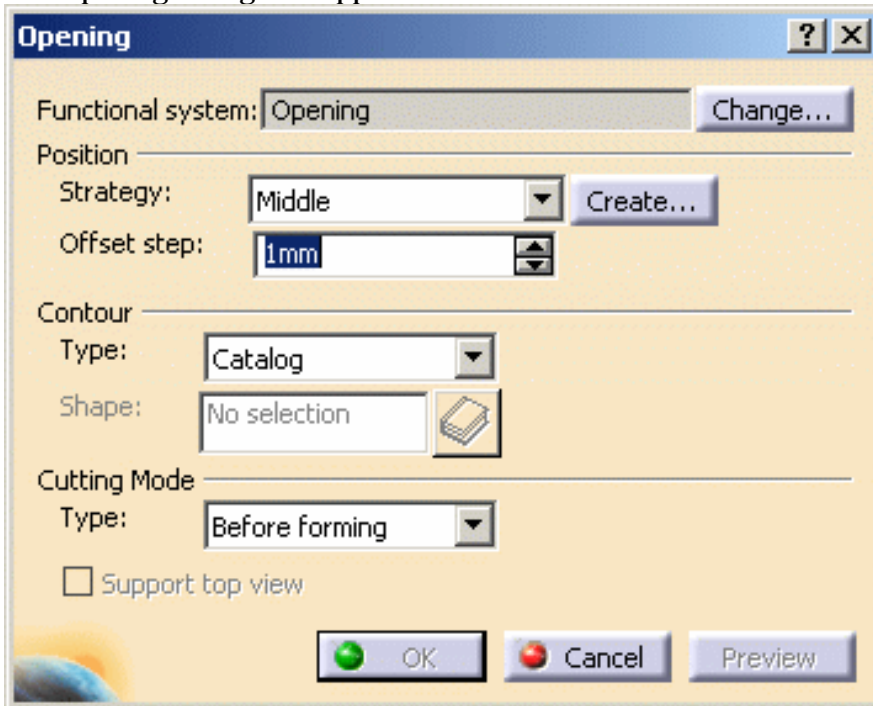

2. Define the associated object class:
 - Click Change... opposite Functional system.


The Class Browser opens and accesses the [feature dictionary](#) defining object classes.

- If necessary, click the Expand Tree button and select the desired class.
- Click **OK** when done.

The selected class is displayed in the Functional system field of the Opening dialog box.

3. Specify the positioning strategy:

Click the Strategy drop-down arrow in the position area and select the strategy of interest.

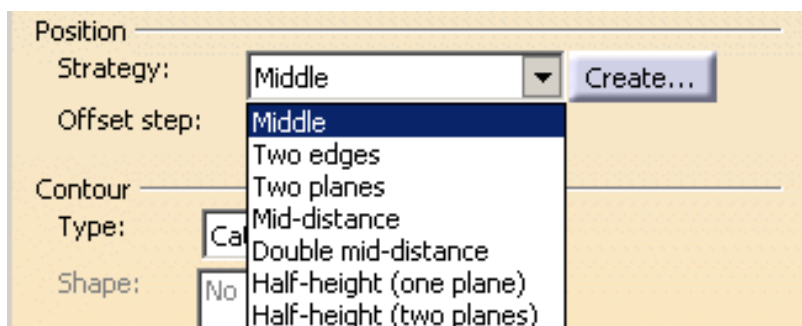





Positioning Strategies

Openings are located using user features which offer a choice of strategies letting you precisely define the location. The following types are available:


Middle

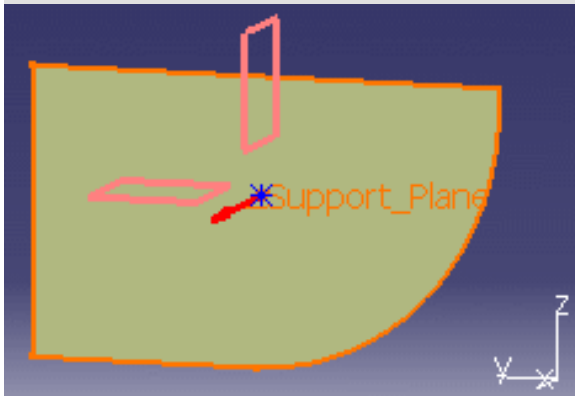


Two edges

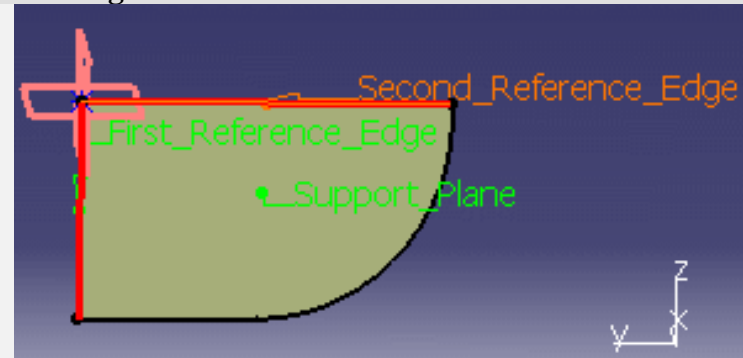


Two planes

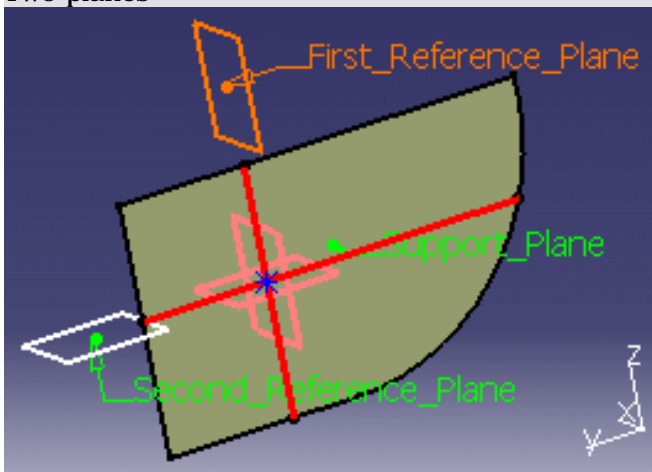

Mid-distance


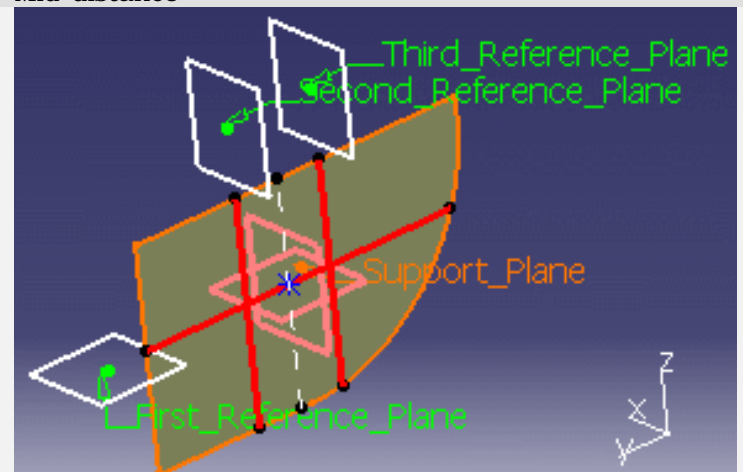


Double mid-distance

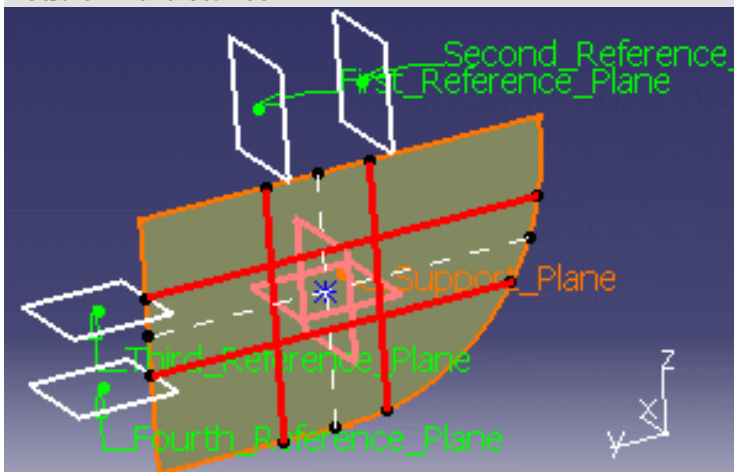


Half-height (one plane)


Half-height (two planes)

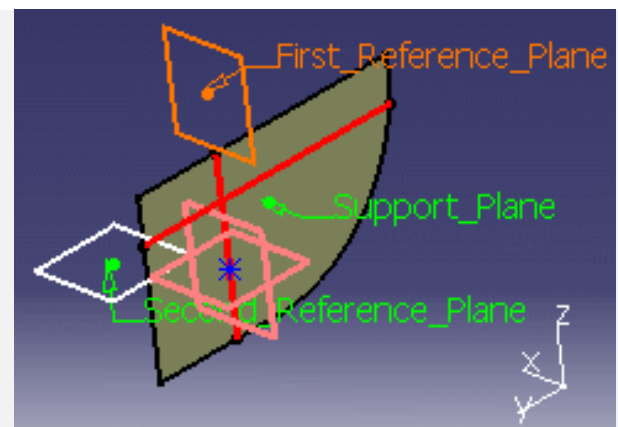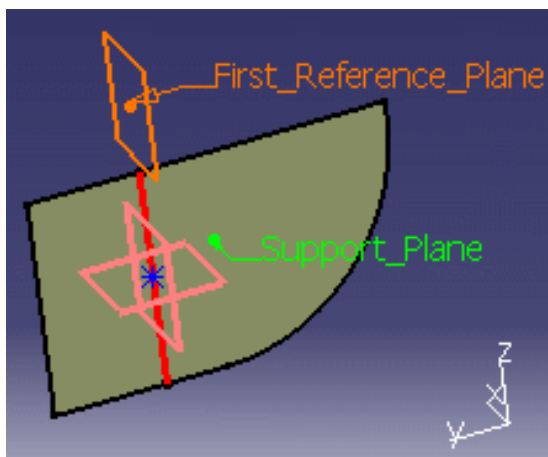

The support plane is the molded surface and is automatically identified in the Middle, Two edges and Two planes strategies if the molded surface is a planar surface.

4. Click Create... The Insert Object dialog box opens and displays the inputs and selections.

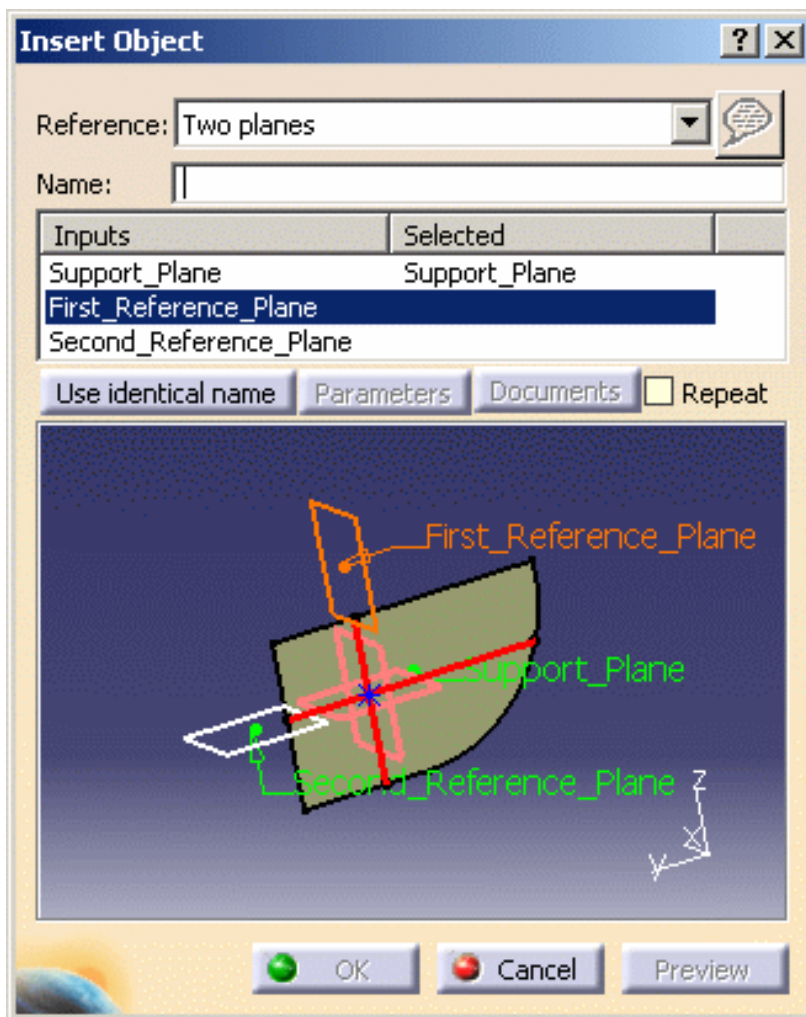


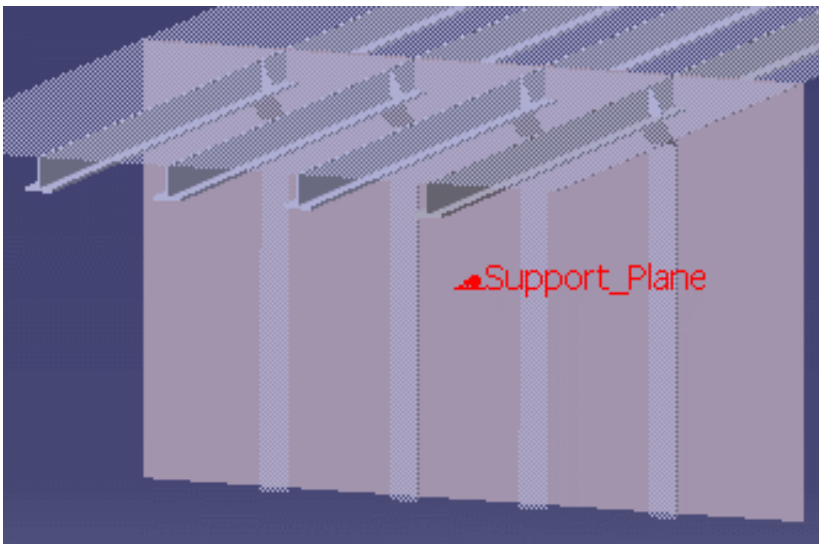

The support plane is identified in the geometry area.

The Reference field of the dialog box displays the selected strategy. If you wish to name the opening, enter the name in the Name field.


5. Select the inputs to define the positioning, then click **Preview** to view results.

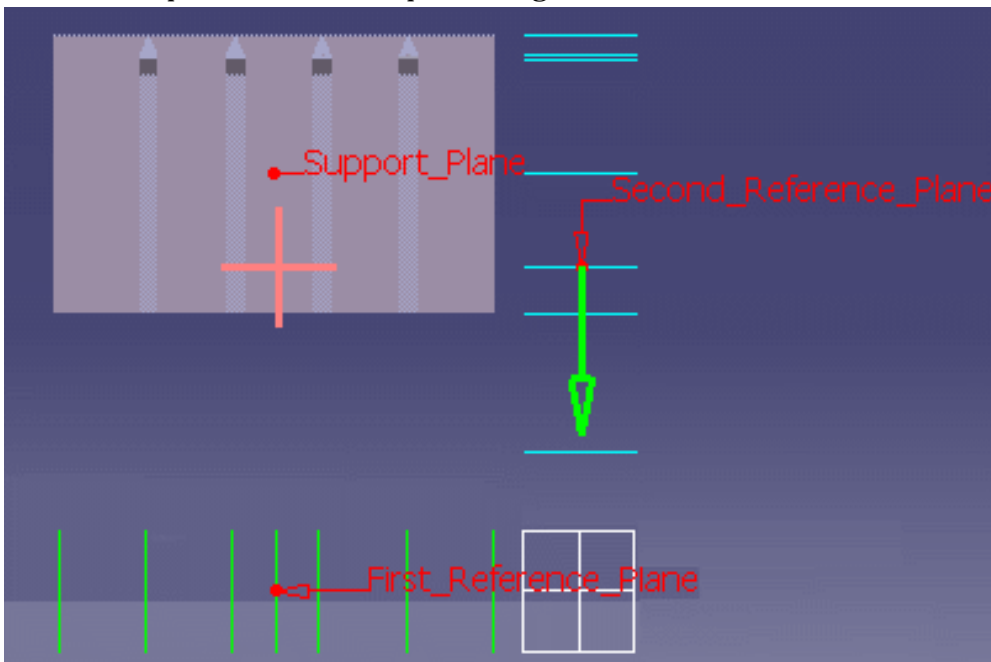

6. Click **Parameters** to modify offset and angle values if necessary.

The Parameters dialog box appears.


Use preview in the Insert Object dialog box to view the result.

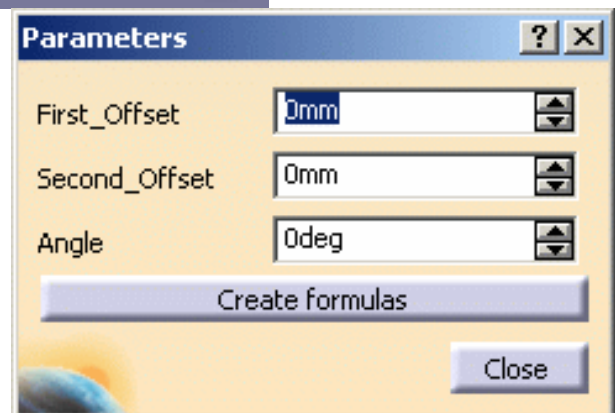

7. Click OK when done.

You return to the Opening dialog box.

8. Check the Support top view option in the Opening dialog box to get a top view of the 3D model.

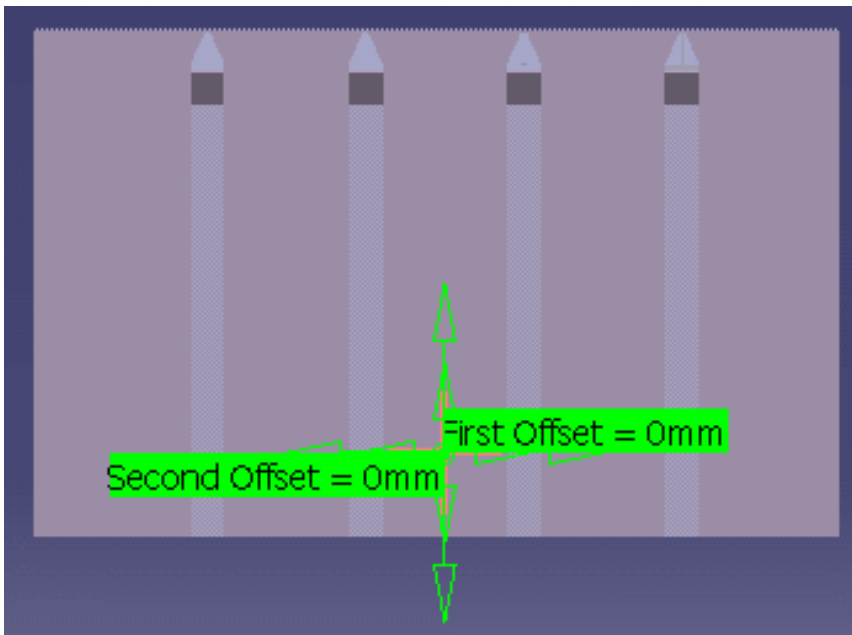


9. Use the green manipulators to adjust the position of the opening.

Manipulators are centered at the intersection of reference planes. Using them you can move the opening at a predefined step in one of two directions (longer arrows), or in both directions together (smaller set of arrows) depending on the manipulator selected.

The Offset step in the Opening dialog box defines the increment used. If, for example, you enter 100mm in this field, as you move the manipulators, the offset will increment in steps of 100mm.

You can also edit the position of the opening via the Edit... option in the Opening dialog box. Clicking this option opens a Definition dialog box. Offset values are set in the Parameters tab.

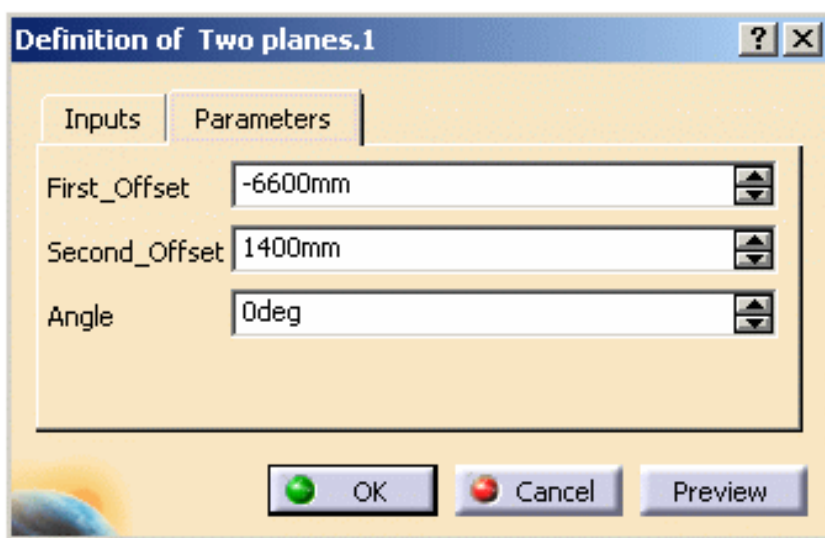

Note: The Inputs tab of this dialog box lets you change opening inputs.

10. Specify the contour type:


You can select a contour from a catalog, sketch the contour or import it.



Catalog Contour

- Click the catalog icon in the contour area:

The Catalog Selection dialog box appears.

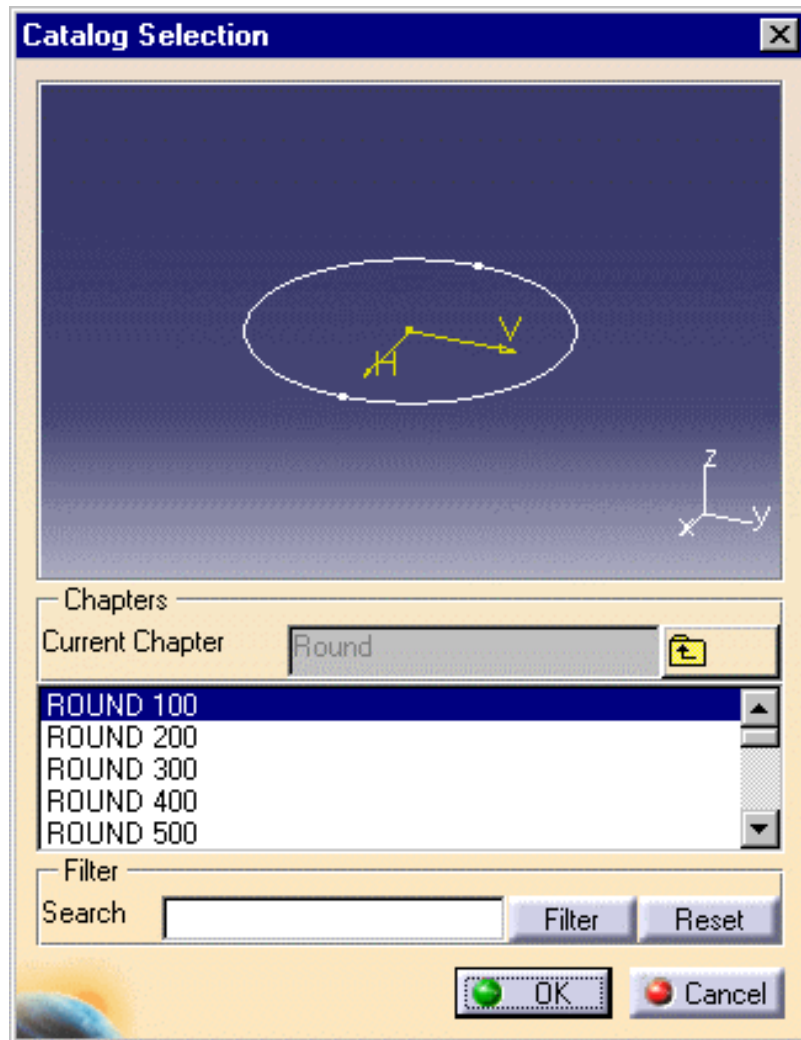

- Navigate in the dialog box to select the shape, then click OK.

Sketched Contour

- Click the Sketcher icon, draw your shape in the Sketcher workbench, then exit.

The name of the sketch is displayed in the Shape field.

Imported Contour

- Select an existing contour in another part
Or,
- Create the contour in the opening part.
In this case, you must first create an empty opening. Set the Contour Type to Imported and click OK. Create the contour in the dedicated contour openbody of the opening, then edit the opening and select the contour.
Note: You cannot define a positioning strategy for this contour type.

The selected contour is identified in the Shape field.

11.In the Opening dialog box, click **Preview** to view the proposed opening.


12.Select the Cutting mode.




Cutting Mode

Two modes are available:

- Before forming: the opening (in yellow) will be created normal to the support surface.

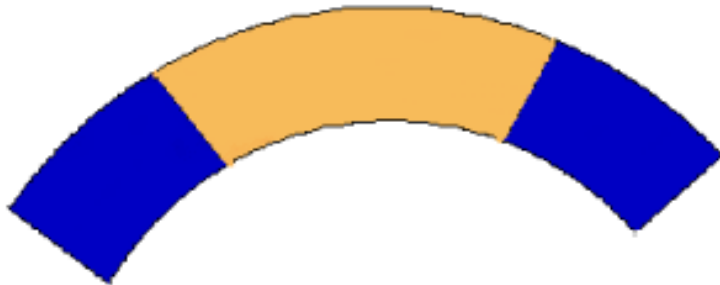


- After forming: the opening (in yellow) will be created normal to the plane containing the contour.

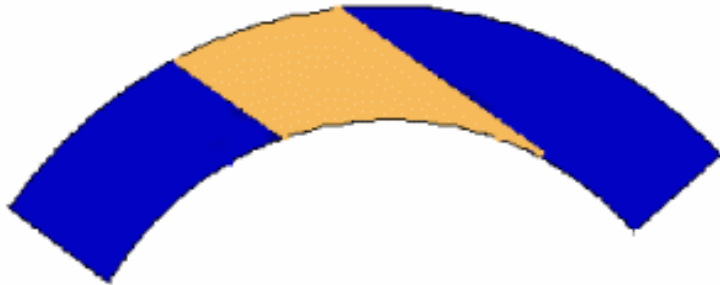

13.Click **OK** in the Opening dialog box when satisfied.

The opening is created.

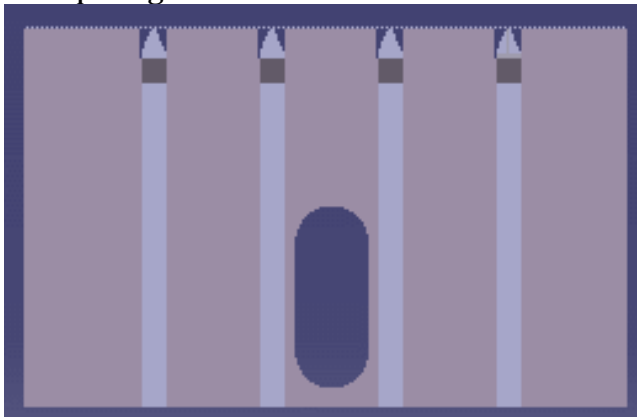


Managing Openings

You can:

- Edit the definition of openings to change the position, contour and cutting mode (Definition).
- Delete openings including any features created by the opening (Remove).
- Update after changes, for example, to take into account stiffeners added after the openings themselves were created (Compute).

To do so, right-click the stiffening in the specification tree and select the appropriate command from the contextual menu.

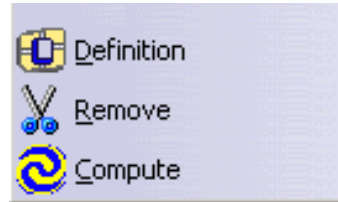

Creating Beaming Systems



This task shows you how to create a beaming system.

New beaming systems are added where necessary to complete the functional design before starting the detailed design as such. They are created under paneling systems.


A beaming system is defined by two intersecting planes and two limits.




As sections are created in your document, copies of the sections are added to a resolved directory. In addition, this resolved sections directory (or folder) is the source for the list of available sections when you click the drop-down arrow opposite Section in the Beaming dialog box.

The path for this resolved directory is managed as a [project resource](#), however, there is no default path for this resource. This path must be correctly set in order for the Beaming command to work properly. Normally, it is the administrator's task to do so. Please contact your administrator if the path has not been set properly.



1. In the specification tree, double-click the paneling system under which you want to create your beaming system.
2. Click the Beaming  icon.

The Beaming dialog box appears.

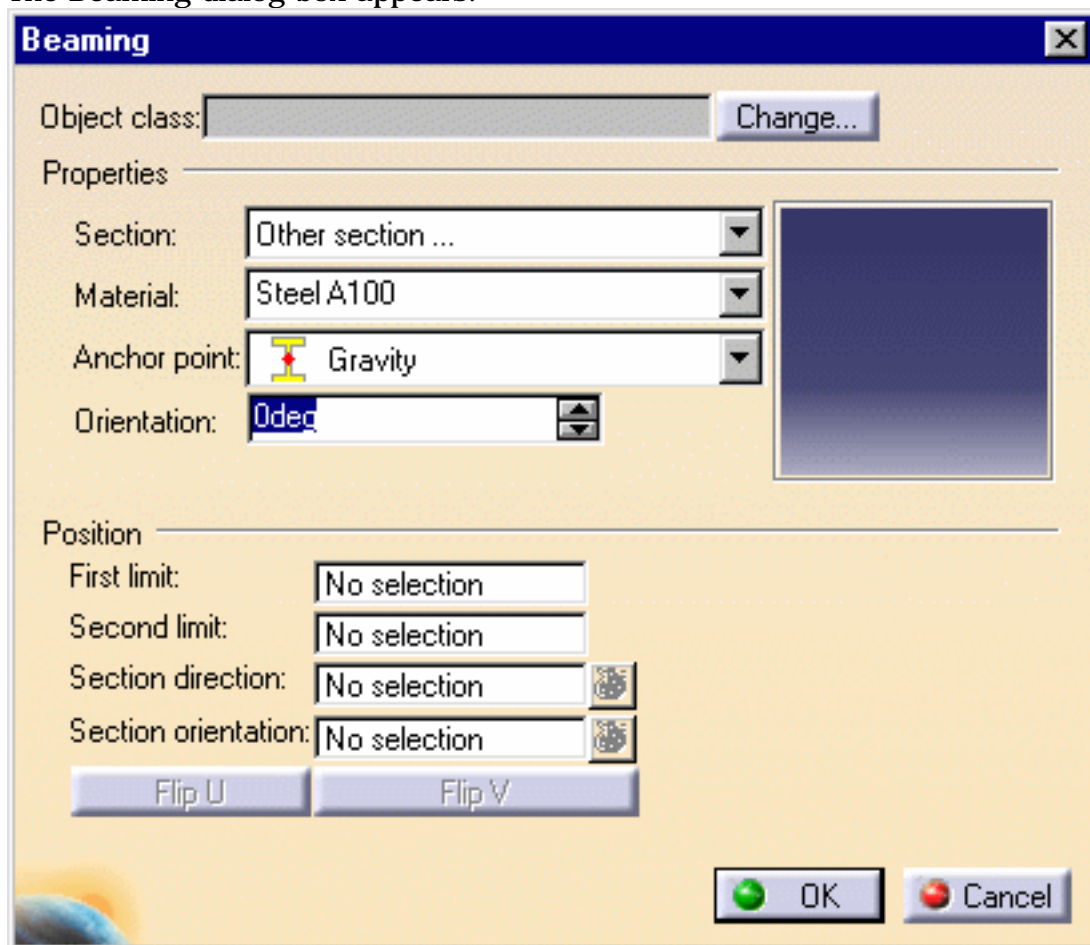


Beaming

Object class:

Properties

Section:

Material:

Anchor point: 

Orientation:

Position

First limit:

Second limit:

Section direction:

Section orientation:

3. Define the associated object class:
 - Click Change... opposite Object class

The Class Browser opens and accesses the [feature dictionary](#) defining object classes.

- Expand the object class tree and select the desired class.
- Click **OK** when done.

4. In the Section field, select the section you want to use. Click:
 - One of the available section names, or
 - If no choices are available, click Other section... to access catalog sections. A sample section catalog is supplied with the product.

The path to the folder containing the list of available sections and the section catalog are managed as [project resources](#).

If there are no choices in the Section field, click Other section... and initialize a section list with catalog for subsequent use.

The Catalog Browser opens letting you browse and preview the contents of the current catalog, by default the AISC_BigScale catalog. You have several choices of standard section types.

- Browse available categories in the Catalog Browser dialog box and double-click the category of interest.
- Browse the list of shape sizes and select the size of interest.
- Click OK in the dialog box

For more information on options in the Catalog Browser, see Using Catalogs in the *Infrastructure User's Guide*.

- Repeat until you have selected all catalog sections you are likely to need.

All selected sections are added to the folder containing available sections.
If you get the following message:

The source file of the design table AISC_XX wasnt found. The design table is in broken state while this file isn't found.

the design table path is not updating properly to reflect the catalog location. For information on how to correct this, see [About Section Catalogs](#).



5. Select a material and grade in the Material drop-down list.

Material-grade combinations are managed as a [project resource](#).



6. Define the anchor point used to place the beaming:
- Select the anchor point from the drop-down list, or,
 - Click a green dot in the preview to change the anchor point (red when selected).

Right-click in the Anchor point field and select Standard from the contextual menu to display only standard anchor points in the list.

Standard anchor points are accompanied by the symbol  to distinguish them from user anchor points ().

7. Use the Orientation arrows to rotate the section around its anchor point.

The Orientation field is updated in 90 degree increments by default. You can change the rotation increment. Right-click in the Orientation field and select Change step from the contextual menu. Select 1deg or select new one and set the step value you want to use.

8. Define beaming limits:
- Select a first limit.
 - Select a second limit.


Limits can be planes or surfaces.

9. Select a first plane to define the direction of the beaming section (Section direction).

10. This plane defines the direction of the local U-axis of the section. Click Section orientation field and select a second plane to define the beaming trace.


The beaming trace is defined by the intersection of the two selected planes.


You can change the section, material, anchor point and orientation while in the preview mode.

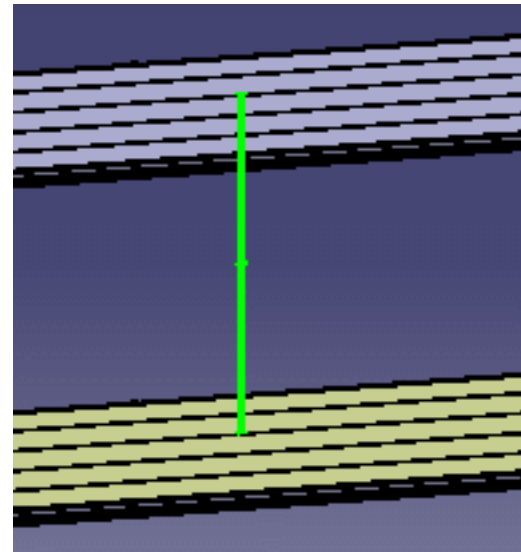

Multi-selection in Section direction & Section orientation Fields

Multi-selection is available for Section direction and Section orientation fields. If more than one set of planes is defined, beams are created at the intersections of all defined planes.

Click the List  icon to view selected planes in the Elements List dialog box.

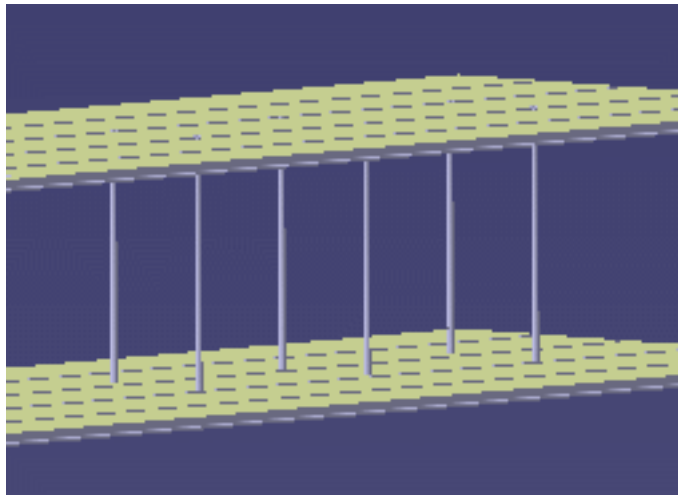


Flip U & Flip V


- Click on Flip U to orient the local U-axis in the opposite direction.
- Click on Flip V to orient the local V-axis in the opposite direction.

11. Click **OK** when done.


The beaming system is created between specified limits at the intersection of selected planes.

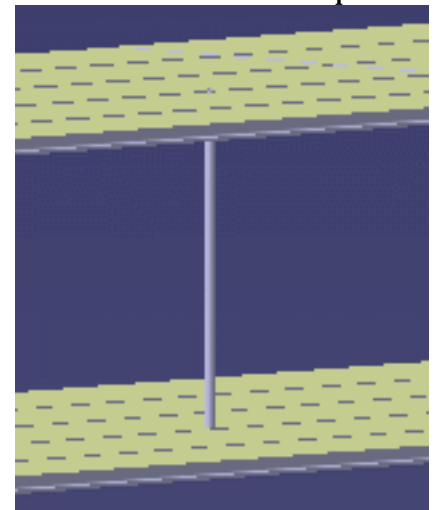



Mitering

 This task shows how to make a miter cut between stiffening systems.

Mitering defines an angle joint between two stiffening systems. The cutting plane is defined at the intersection of the two center axes of the two systems.

 No sample document is provided.

 1. Click the Mitering  icon.

The Mitering dialog box appears.

By default, the Type list is set to Miter cut.

Note: The None option lets you remove a previously applied miter cut.



2. In the Offset box, use the arrows to change the offset value or enter a value directly in the box to offset the cutting plane.
3. Select the stiffening system you want to trim (Member to trim).
4. Select the stiffening system serving as limit (Trimming member).
5. Click **OK** to create the cut.

Stiffening systems are cut as specified in the dialog box and the miter cut is identified in the specification tree.



System Split



This command lets you split systems by other systems, planes and surfaces and is particularly useful where systems intersect to identify which system is intercostal and which one is continuous. You can also use this command to create points on-the-fly to split coamings.

System split is typically done at the start of detail design when major structural systems have been created but before any detail parts or features are built.

Typical scenarios are:

- Paneling, plating, stiffening or inserting (intercostal system) is split by paneling (continuous system).
- **Stiffening (intercostal system) is split by stiffening (continuous system).**
- Paneling, plating, stiffening or inserting is split by a plane or surface.
- **Coaming split by two points.**

Multiple selection is available in this command.



This task shows how to split a paneling system by another paneling system.




No sample document is provided.




1. Click the **System Split**  icon.

The System Split dialog box appears.

You can also select the paneling system you want to split before you click the command.

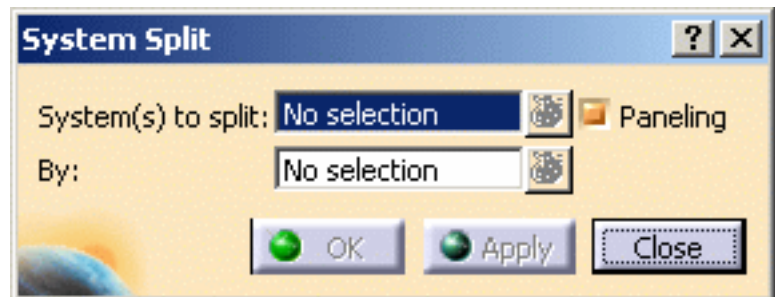


2. In the geometry area or specification tree, select the paneling system you want to split. In our example, a bulkhead paneling system with constituent stiffening systems.

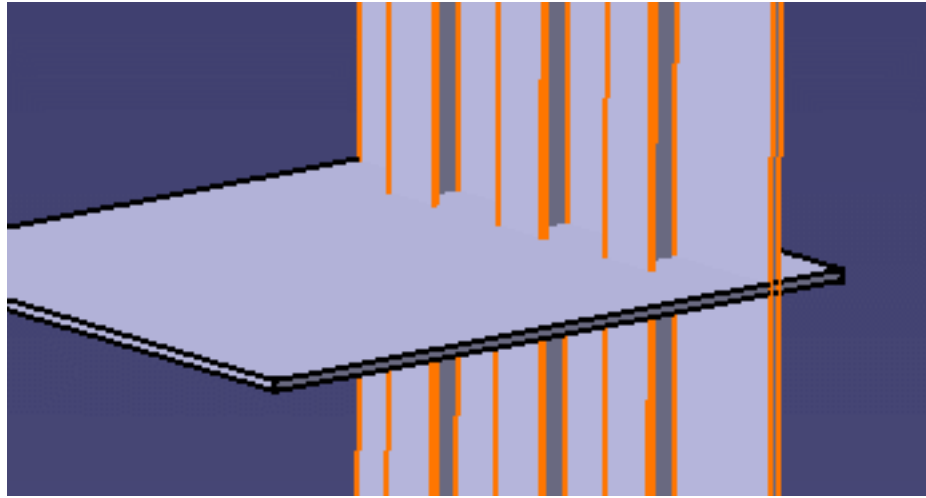

Paneling Checkbox

By default the Paneling option is active. This means that if you select a plating, stiffening or inserting, the system takes into account the associated paneling system (including all constituent systems).

To select a plating, stiffening or inserting (rather than the entire paneling system), uncheck the Paneling option first, then select systems in the geometry area or specification tree.

You can view your selection in a separate dialog box by clicking the list  icon or right-clicking the field and selecting Elements list from the contextual menu.

3. Click the By field, then select another paneling system. In our example, the deck.

Note: If you select plating or inserting, then the system takes the associated paneling into account.




Split By

You can also select a surface or a plane and split the system with this element.

4. Click **OK** to split the paneling system.

All systems in the bulkhead paneling system are split in two by the molded form of the second system (in our case, the deck) and the specification tree updated accordingly.

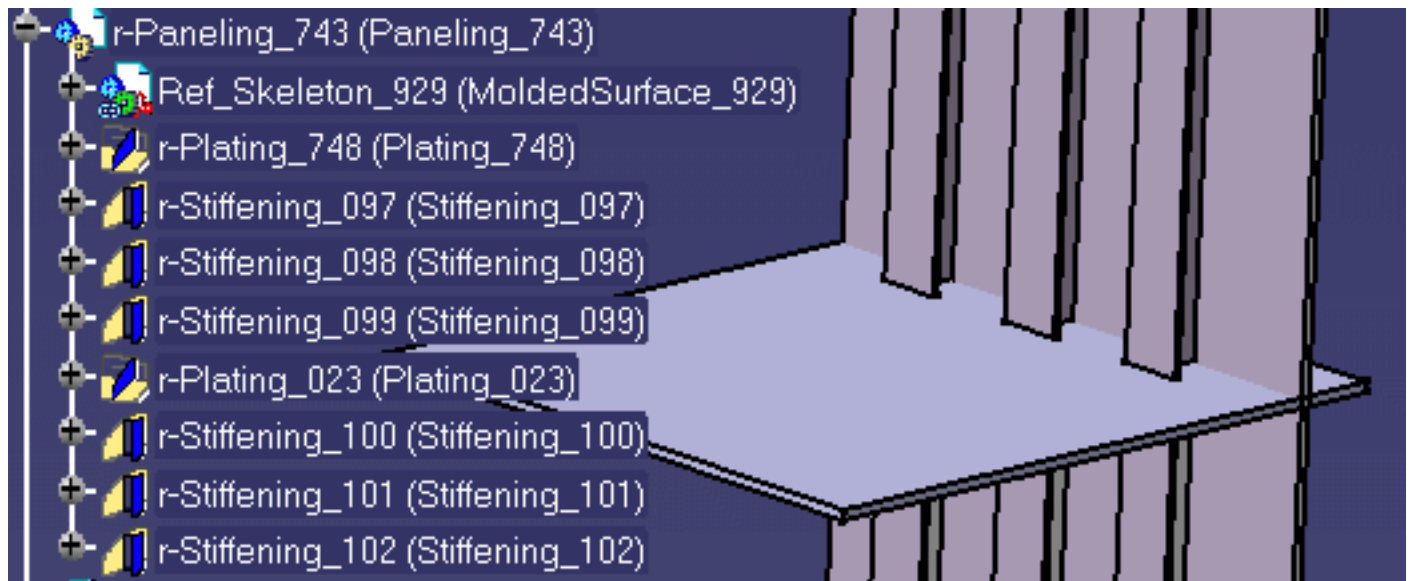


Intercostal Split of Stiffening Systems

You can also split intersecting stiffening systems that lie on the same paneling system.

- Uncheck the Paneling option.
- Identify which stiffening systems are intercostal and which ones are continuous.

Intercostal systems are split at the web support of the continuous stiffening system.

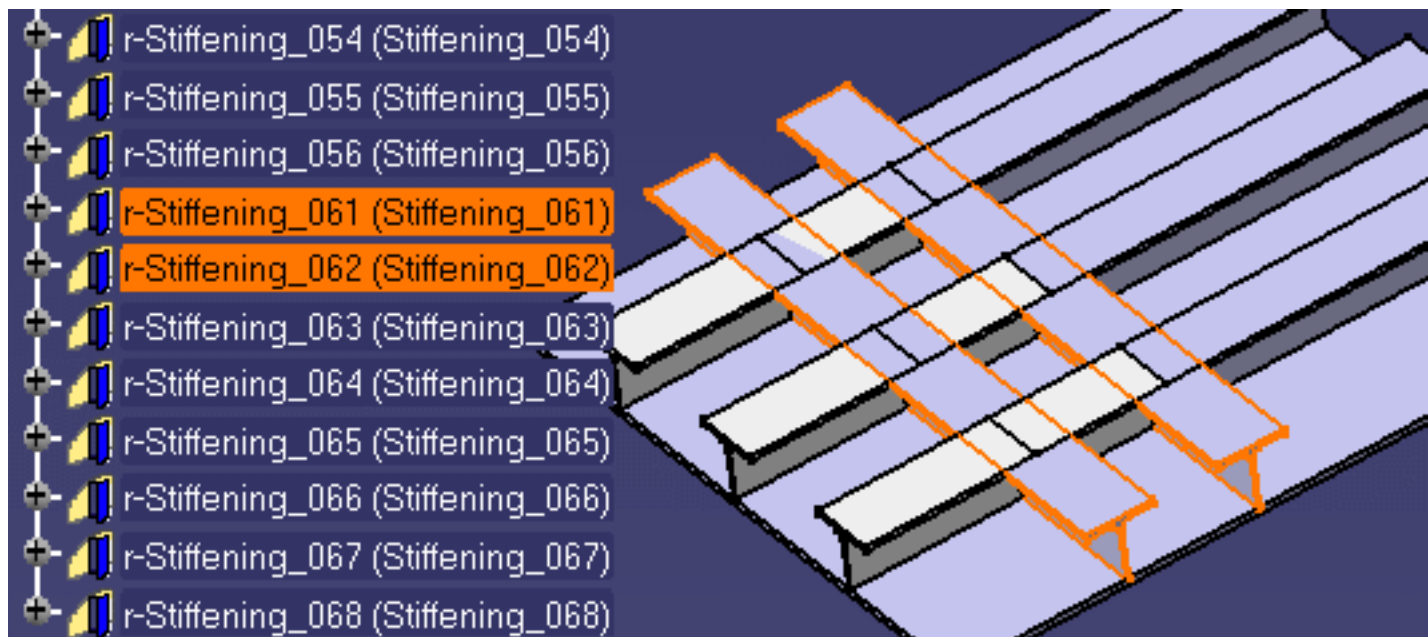


Coaming Split by Two Points



This task shows how to split a coaming by creating two points on-the-fly.

Note: Coamings are split one at a time.

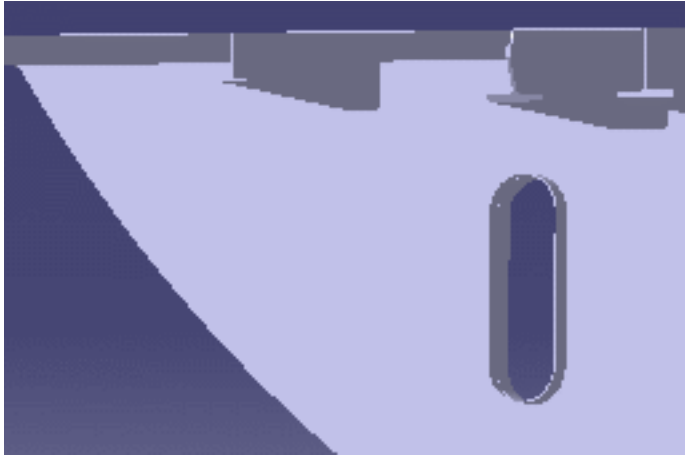

No sample document is provided.



1. Click the **System Split**  icon.

The System Split dialog box appears.

2. Click to clear the **Paneling** checkbox.



The Split Point icon appears in the dialog box.

3. Select a coaming.


The coaming is highlighted in the document.

4. Click the By field.

The Split Point icon becomes active.

5. Click the Split Point icon.

The Split Point dialog box appears.

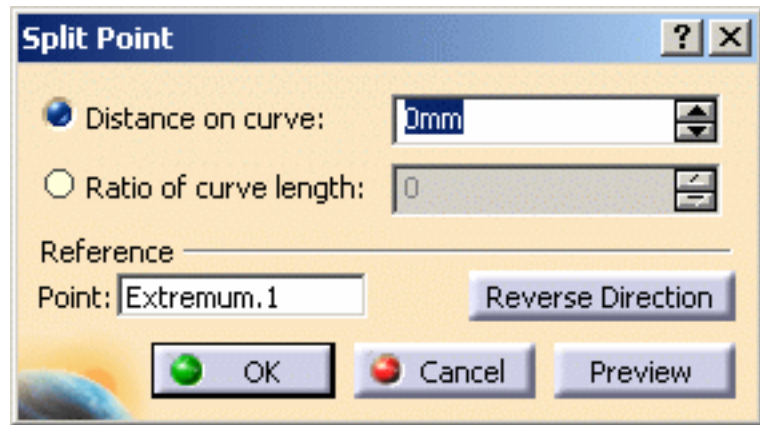


The trace curve, an endpoint located on this curve and a direction arrow are shown in the geometry area.

The endpoint is the reference point with respect to which your split point will be created.

- If no point exists, an endpoint is created and displayed.
- If a split point already exists, this point is taken as the reference point.


Click Reverse Direction to compute the distance or ratio in the opposite direction.

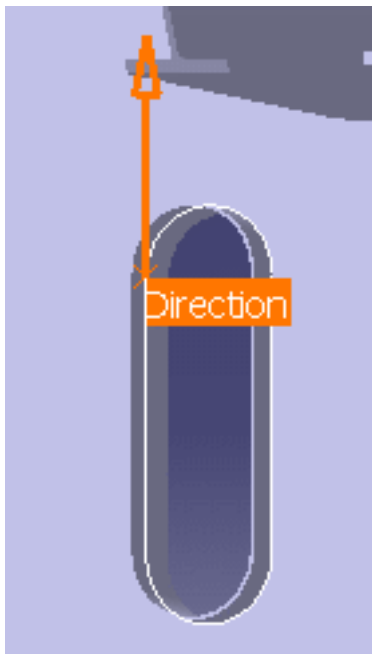

6. Do you want to create a split point at a certain distance from the reference point?
- If yes, enter a value in mm in the Distance on curve field.
 - If no, select the Ratio of curve length option and enter a ratio in the ratio field.




You can also move your cursor along the curve trace to desired location in either mode, then click and see the distance or ratio value display in the dialog box.

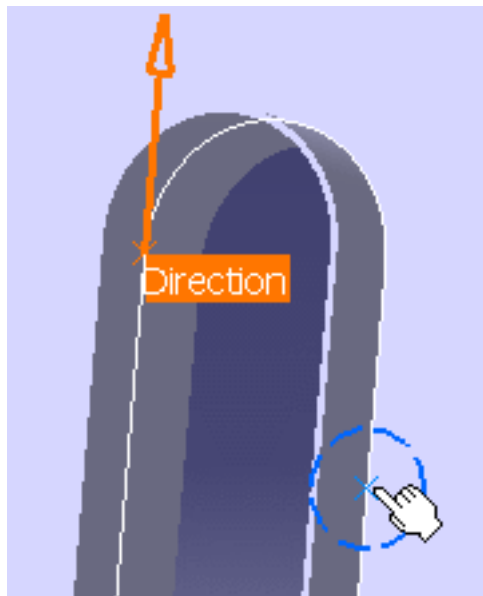


7. Click OK to create the split point.

You return to the System Split dialog box, but you still need a second point to split the coaming.

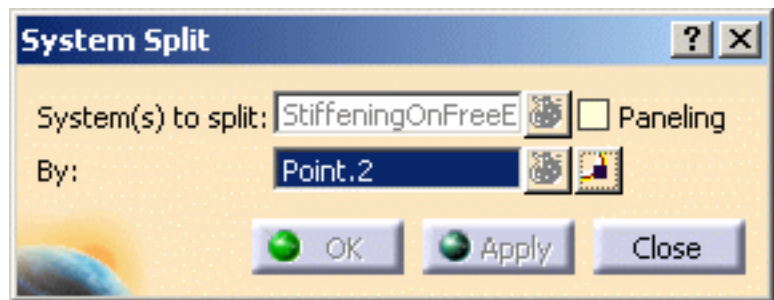


8. Click the Split Point icon again and create a second split point.

Note: The first split point is taken as the reference point.

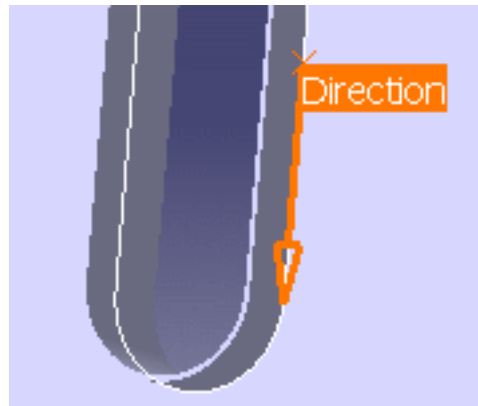

Important: The two split points must not lie on the same straight segment of the coaming. They must be created such that a virtual line cutting the contour of the coaming at the two selected points can be drawn.

Correct:

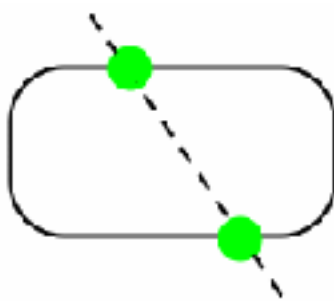

Incorrect: the coaming cannot be split.




9. Click OK in the System Split dialog box when done.




How Features are Managed


Original Shape

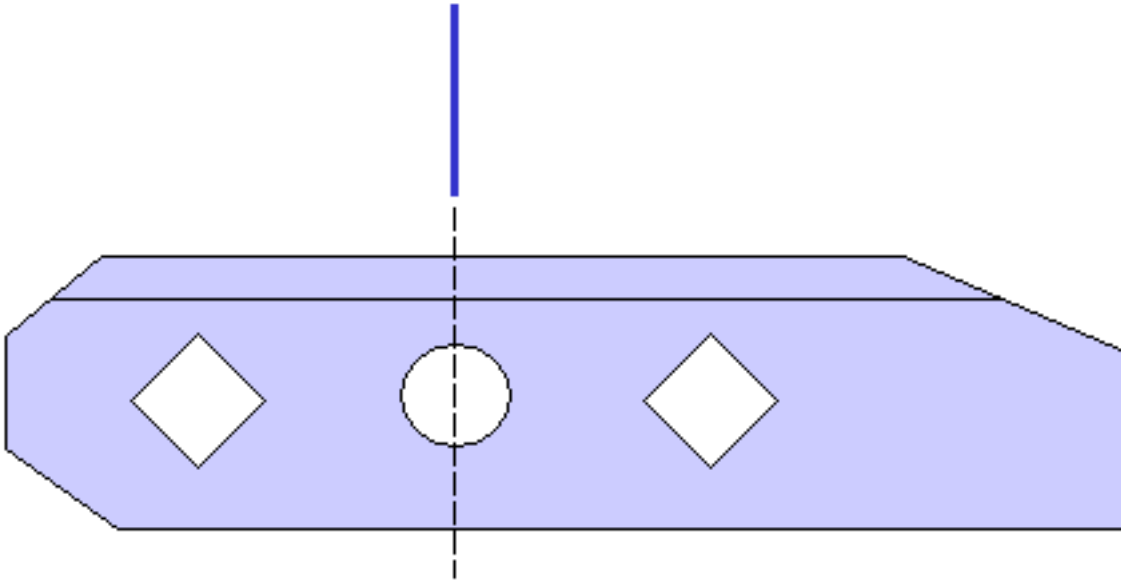

After Split; Absolute Positioning of Features (cutouts)

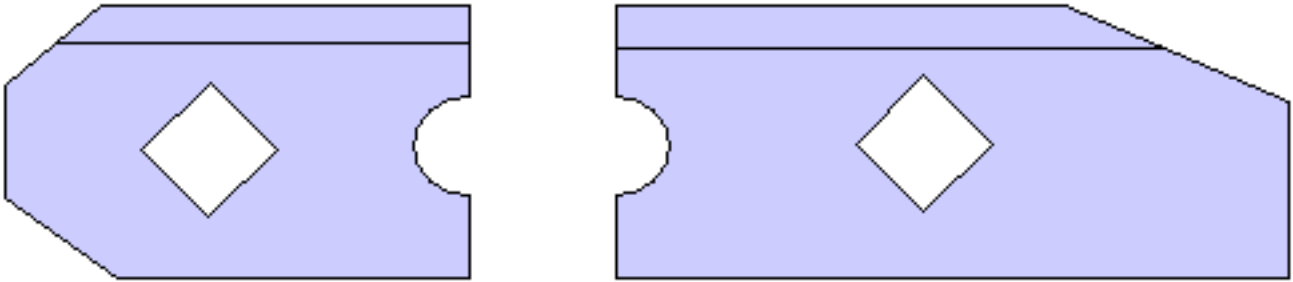

After Split; Relative Positioning of Features (cutouts)

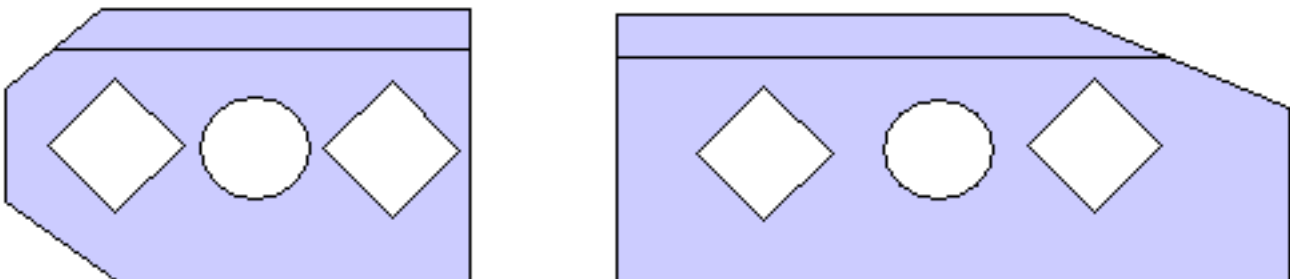

Straking



The Straking command lets you prepare plating or paneling systems for manufacturing. This can be done using:

- **Wireframe elements**

This method is particularly useful for paneling systems and non-planar plating systems. You can also strake planar plating systems.

- A **2D grid**.

You can only strake planar plating systems using this method.

You can edit or delete an existing straking strategy whether created via wireframe elements or a 2D grid.

Straking using 2D Grid



This task shows you how to strake planar plating using a 2D grid.

You cannot strake paneling systems or non-planar plating systems using this method.
No sample document provided.



1. Click the Straking  icon then select the planar plating you want to strake

Or,

Select the planar plating you want to strake, then click the Straking icon.



The Straking dialog box identifies the plating and the 2D Grid tab is active.

Note: A planar plating system can be straked using either method: **Wireframe** or 2D Grid.



On detection of a planar plating, the Straking dialog box automatically opens showing the 2D Grid tab. If, however, you then select a wireframe element, the dialog box automatically moves to the Wireframe tab.


If a straking strategy has already been associated to the selected plating, the dialog box opens at the appropriate tab and you can modify it, or delete it and start again.

- To modify a 2D grid, click the 2D Grid command
- To delete a 2D grid, click the Delete command.

2. Click the 2D Grid  command in the 2D Grid tab.

The 2D Grid dialog box opens. The plating surface is taken as the grid support.


Spacing is the default mode for defining your grid.

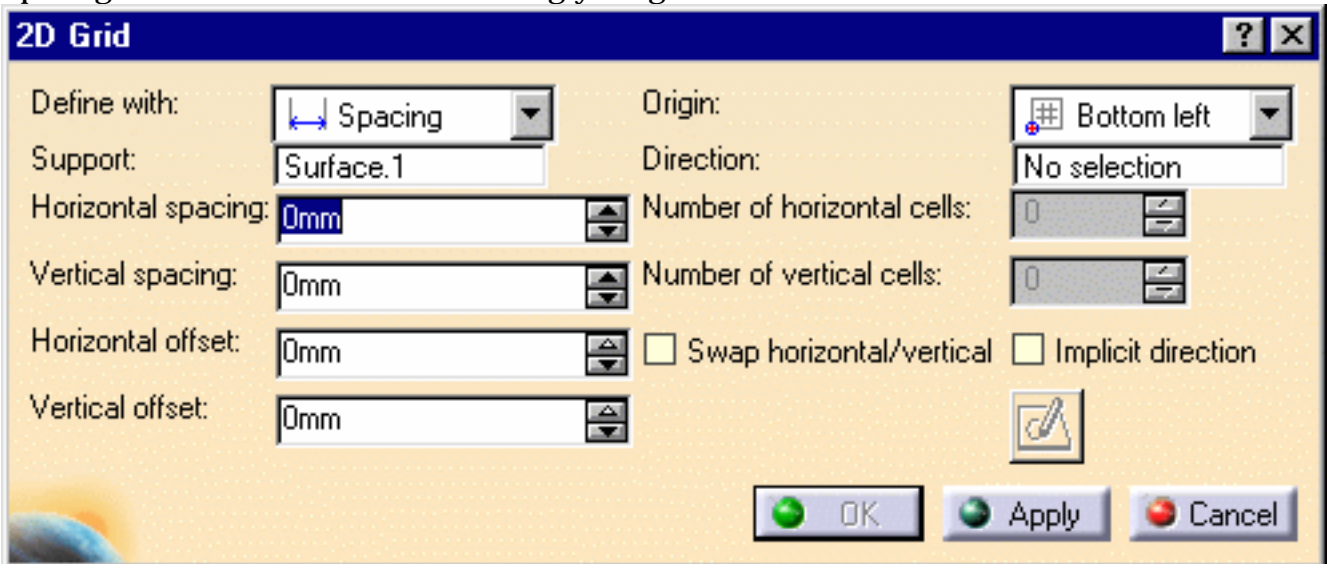

A bounding box is computed around the support.

A 2D axis system and grid anchor points are also visible in the geometry area.

By default the grid horizontal axis is oriented in the same direction as the horizontal axis of the selected support.

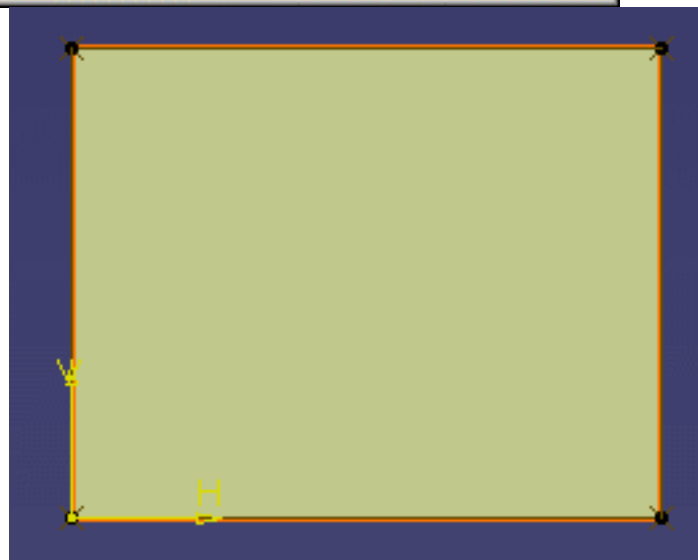

3. Select Spacing or Number in the Define with list box to set the grid construction mode.
- In Spacing mode, you will specify the distance between grid lines along horizontal and vertical directions.
 - In Number mode, you will specify the number of cells in horizontal and vertical directions.


Both distance and number of cells are computed with respect to the bounding box.

This task is done using the default mode.

4. Specify the distance between grid lines in horizontal and vertical spacing fields, then click Apply.

The system computes and displays the grid.


Note: An extra row and an extra column of cells is always added.

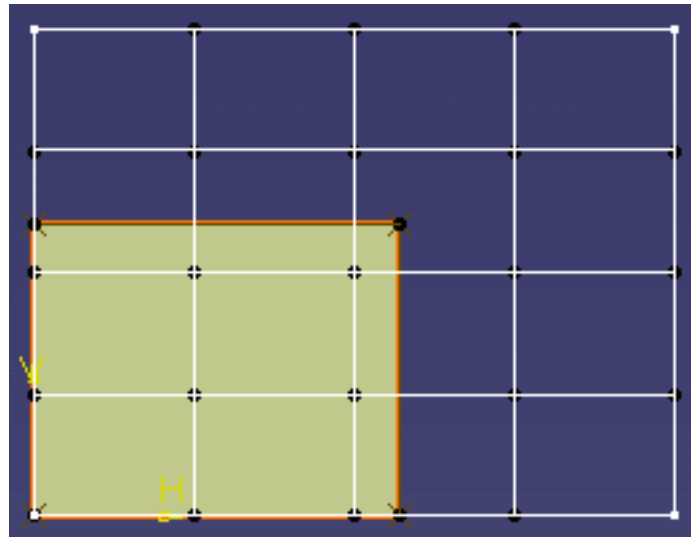

Right-click in Horizontal or Vertical spacing fields and change the step at which the box increments.


5. If necessary, select a direction.

The horizontal grid axis is oriented in the same direction as the selected direction.

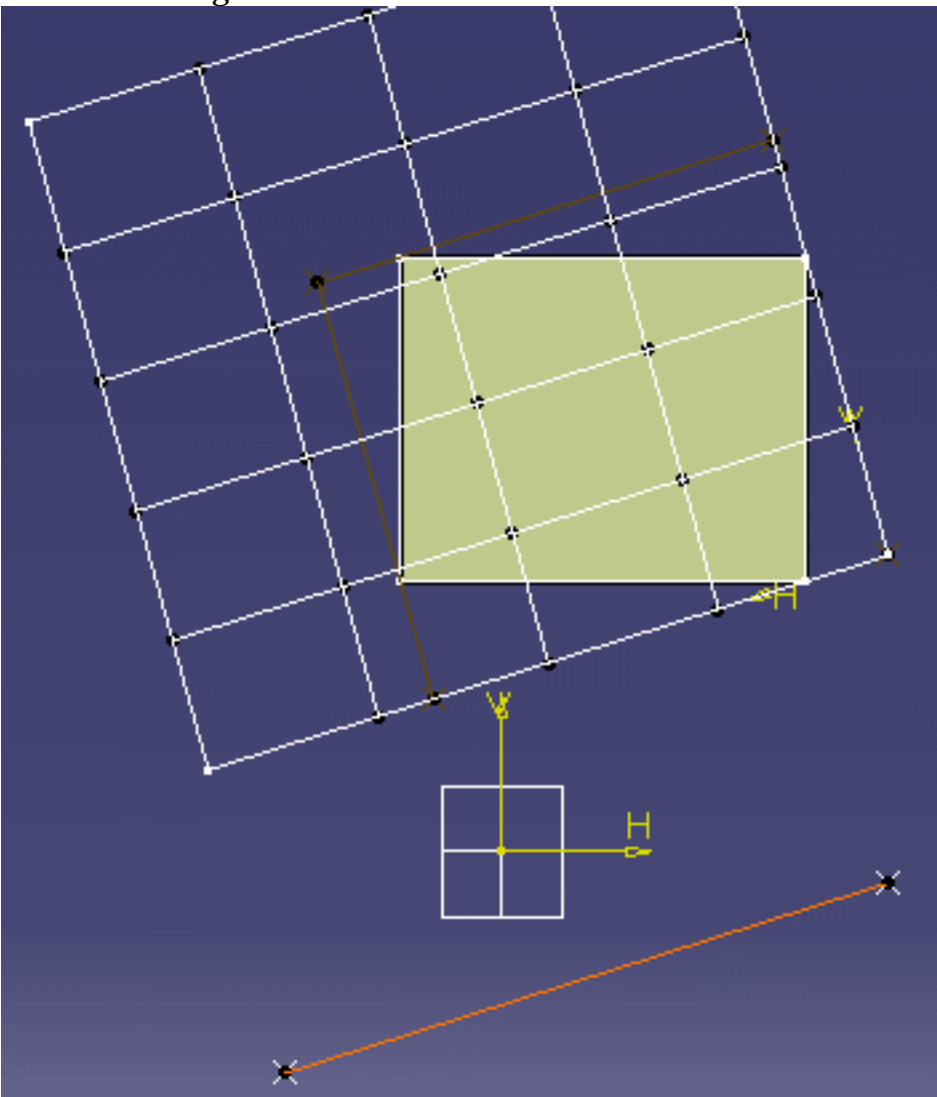


Checking Implicit direction re-orientes the horizontal grid axis back along the horizontal axis of the selected support.

6. Define the grid origin: select the origin from the drop-down list, for example Bottom right.

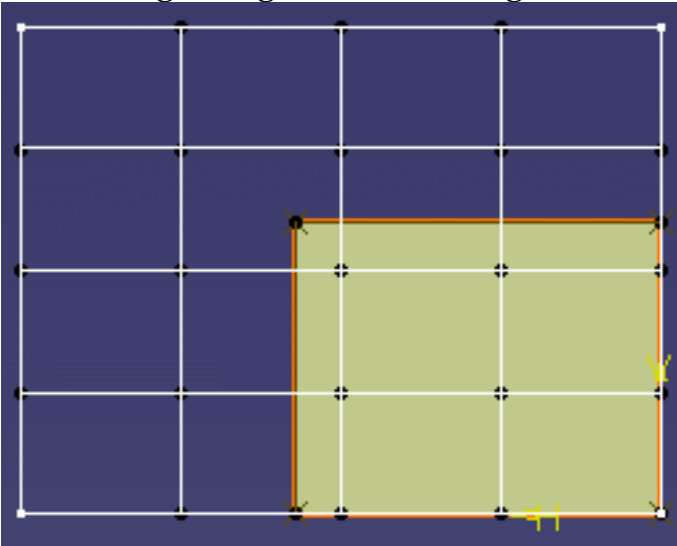


7. If desired, enter a negative horizontal and or vertical offset to offset the grid from its origin.

Note: You cannot enter a value greater than the corresponding spacing value.

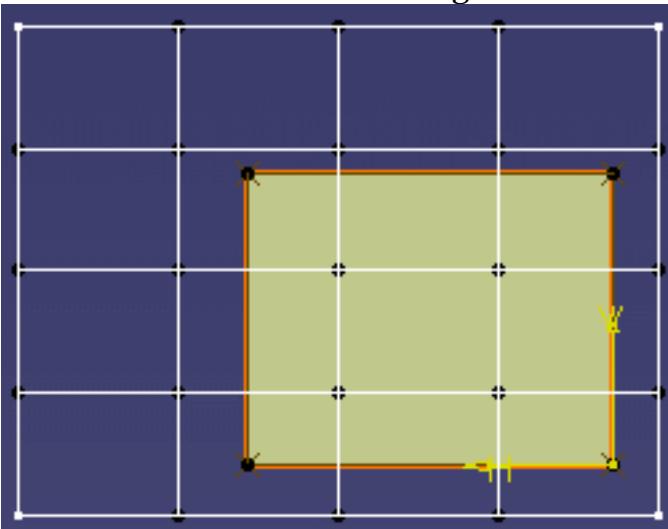



8. Check Swap horizontal/vertical to swap horizontal and vertical spacing.

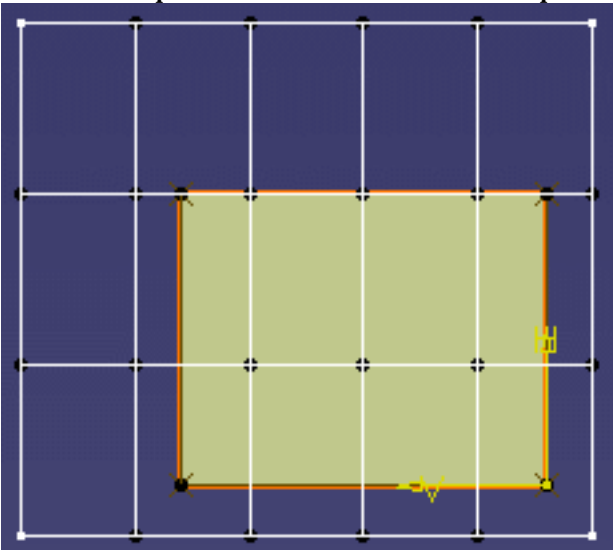

9. Click the Sketcher icon to tweak the shape of grid cells.

The Sketcher workbench opens.


- Click and drag one of the points on the grid to adjust cell shape as desired.
- Repeat if necessary.
- Exit the Sketcher when done.

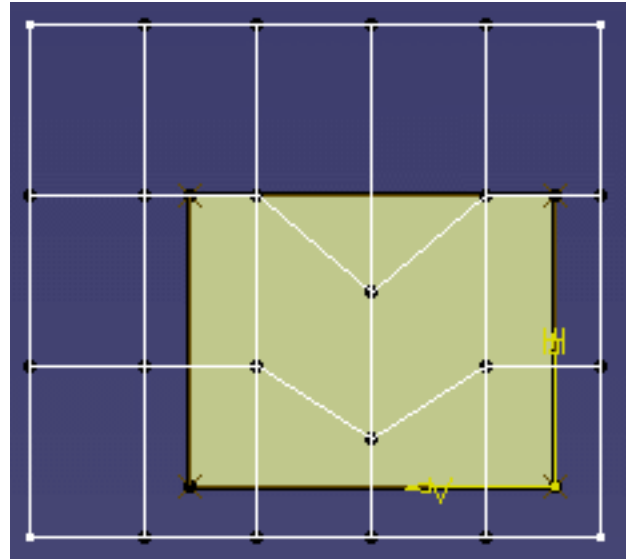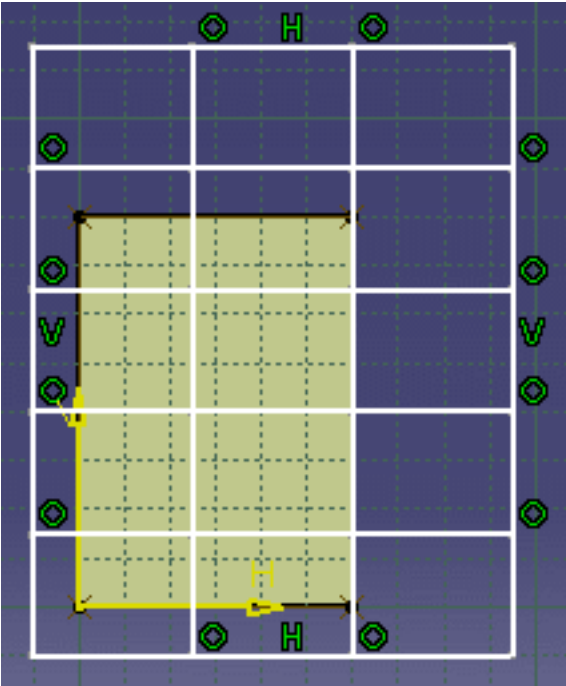

10. Adjust grid parameters until satisfied.
11. Click **OK** in the 2D Grid dialog box when done.

A progress bar is displayed letting you monitor the operation.

The grid is created under the active part of the selected plating.

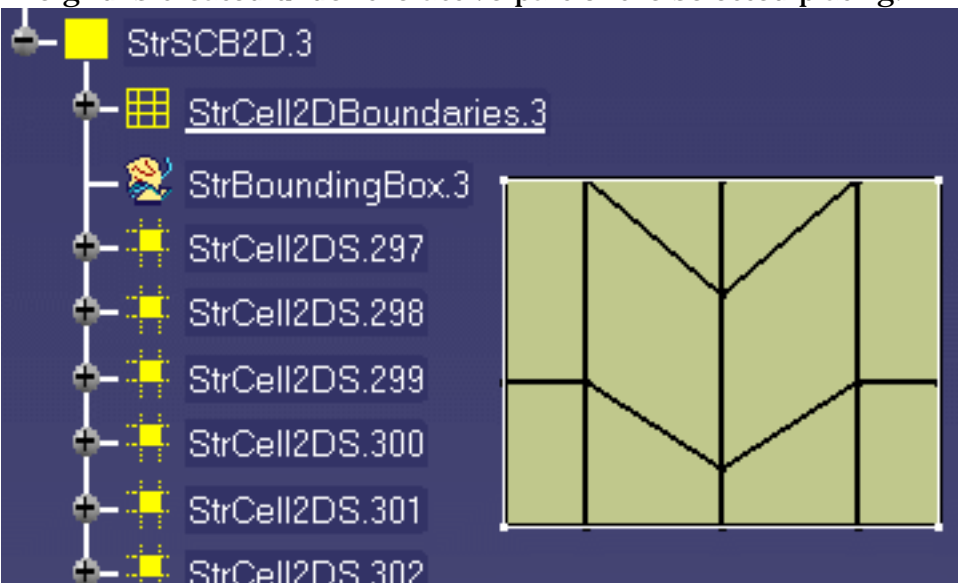

Use the 2D Merge command in the 2D Grid tab to combine two or more cells into one.



12. Click **OK** when done in the Straking dialog box.



Straking using Wireframe Elements




This task shows you how to strake shell plating using wireframe elements.

The wireframe method is particularly useful for paneling systems and non-planar plating systems. You can also strake planar plating systems.

No sample document provided.




1. Click the Straking  icon then select the plating you want to strake

Or,


Select the plating you want to strake, then click the Straking icon.



The Straking dialog box identifies the shell plating and the Wireframe tab is active.

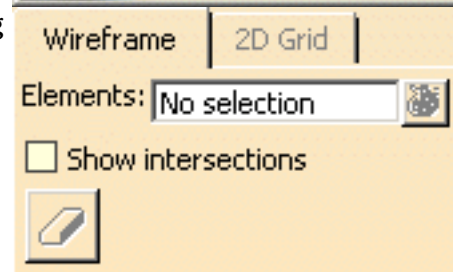

If a straking strategy has already been associated to the selected plating, the dialog box opens at the appropriate tab and you can modify it, or delete it and start again.


- To modify wireframe elements taken into account, click the List  command.
- To delete wireframe elements, click the Delete command.

2. Select wireframe elements.

You can select surfaces, planes and curves intersecting the support of the plating or paneling system. The number of elements selected is listed in the Elements field.

3. Click Show intersections to visualize intersection curves.

Blue curves represent the intersections between selected wireframe elements and the shell plating support.

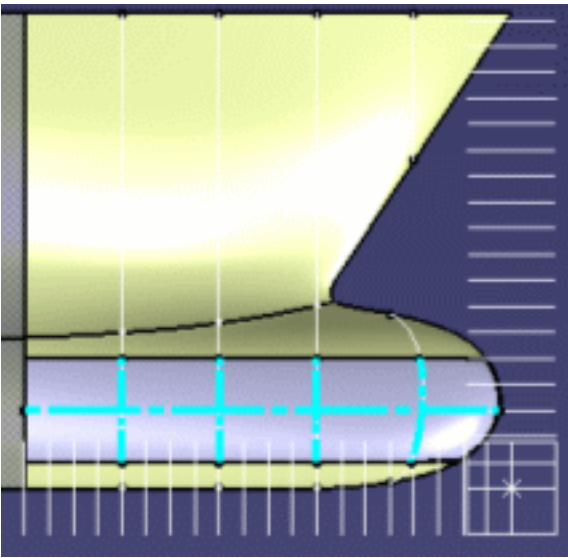

4. If necessary, adjust the result using the List command opposite Elements.

The Elements list dialog box opens letting you replace or remove selected wireframe elements.

5. Click **OK** when done in the Straking dialog box.



Merging



The 2D Merge command lets you combine two or more existing **2D grid** cells to make a larger cell.



This task shows you how to merge grid cells.




Have created a **2D grid**.




1. Click the 2D Merge command in the Straking dialog box.

The 2D Merge dialog box appears.

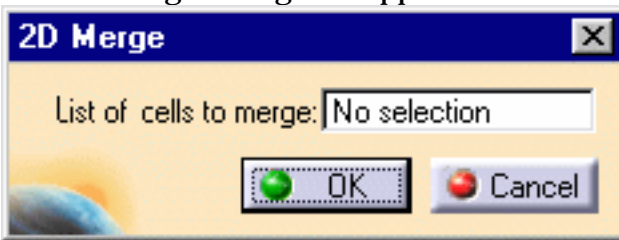

2. Select grid cells you want to merge in the specification tree or in the geometry area. Right-click in field and select Elements list from the contextual menu to browse and change list of cells to merge.
3. Click **OK** when done.

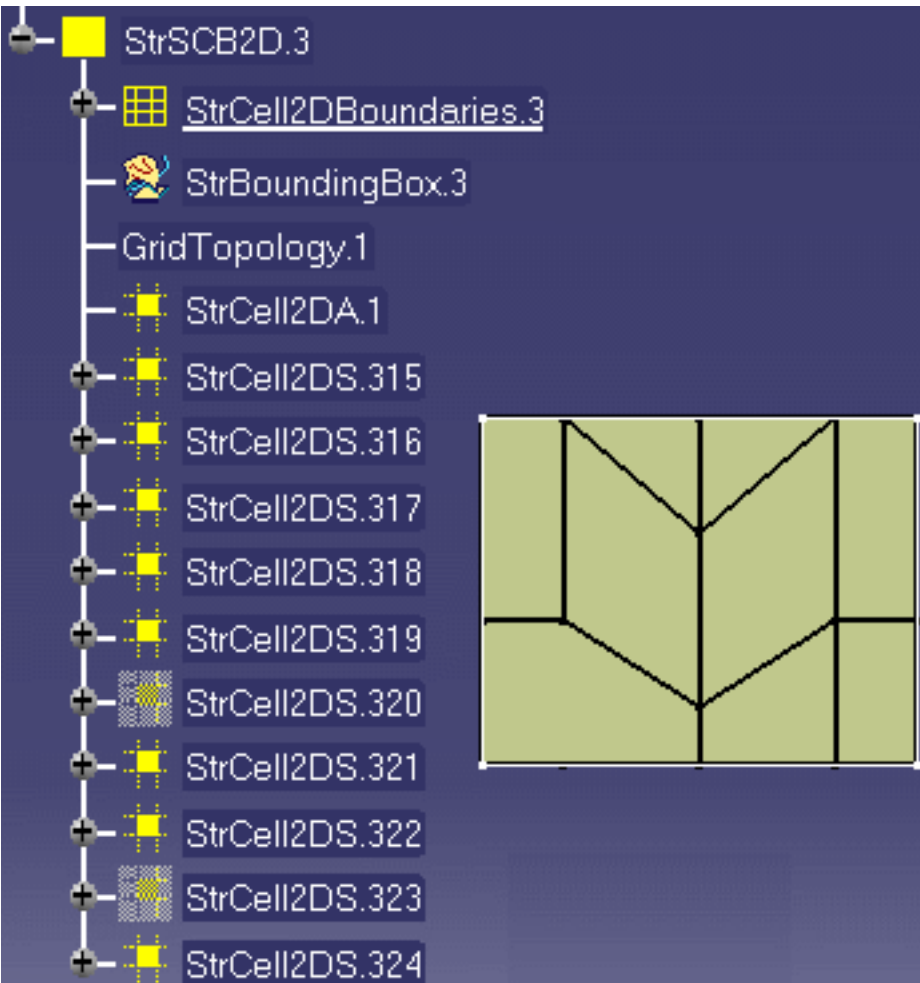

Merged cells are placed in No Show in the specification tree and a new entry is created for the new cell.



Generating Plates & Shapes



Generating shapes and plates is the last step in detailed design that marks the start of the manufacturing process. This command initiates a manufacturing view of your ship containing all the information needed for manufacturing that was included at the detail design stage.

Generating shapes and plates is done in two steps:

- **Straking** plating: this preparatory step can be performed during detail design whenever plating is ready.
- Generating plates and shapes: this step is typically performed when the detail design is finished.



This task shows you how to initiate your manufacturing view.




Have straked your plating systems and completed the detail design.



1. Click the Generating Plates & Shapes  icon.


The Generating Plates & Shapes dialog box appears.

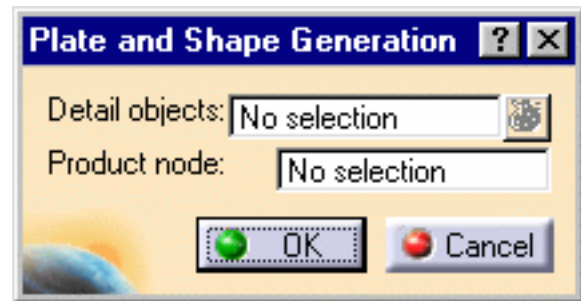

2. Make a multi-selection of detail design objects that you want to see in the manufacturing view.

Objects can be plating, stiffening, beaming, plates, shapes, and/or assembly templates. You can also select entire blocks or paneling systems and all constituent plating, stiffening, beaming, plates and shapes are taken into account.



Click the List  icon to view selected items in the Elements List dialog box.

3. Click the Product node field when done, then select the node in the specification tree where you want plates and shapes to be instantiated.

You can generate shapes and plates in:

- A new document
- An existing node of your document
- A new node of your document (insert a product).



4. Click **OK** when done.

Plates and shapes are generated under the selected tree node.



Connecting Structural Elements



Automatically connect structural elements: select a system, identify the impact then set other parameters in the dialog box.



Manually connect structural elements: select structural elements to connect in a single connection, identify the impact then set other parameters in the dialog box.



Refine or modify connections: select a structural connection then select geometrical elements of plates or stiffeners to refine your connection.



Provided you have the appropriate license, the Weld Design product can be used to create welded joints between physical plates and shapes.

Automatically Connecting Structural Elements



Establishing connectivity between structural elements is important. Many different types of connectivity may be found in a ship. These include plate to plate connections, plate to stiffener connections, stiffener to stiffener connections.

This connectivity captures the functional requirements and will be physically implemented downstream by means of joints and added piece parts (chocks, transitions, brackets, etc.).



This task shows you how to automatically connect all structural plates within a plating system.

You can also specify connectivity between two systems, for example between all stiffeners in a deck stiffening system and the deck itself (a plating system).


Have created a plating system with appropriate plates.



1. Click the Automatic Connection  icon:



The Automatic Connection dialog box appears.

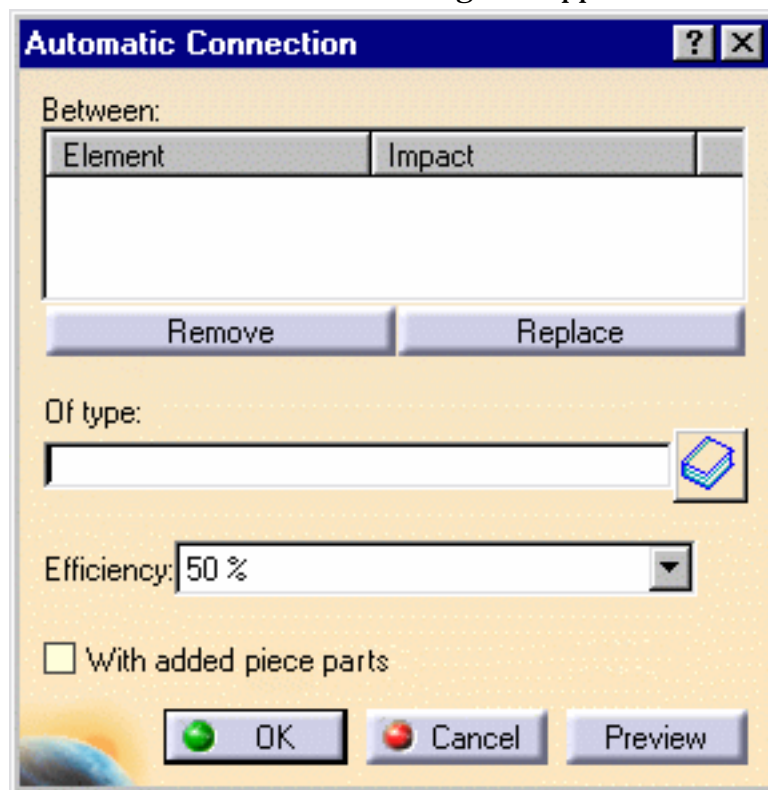

Automatic Connection [?] [X]

Between:

| Element | Impact |
|---------|--------|
| | |

[Remove] [Replace]

Of type:

[Text Input Field] [Icon]


Efficiency: 50 % [Dropdown Arrow]

☐ With added piece parts

[OK] [Cancel] [Preview]

2. In the geometry area or in the specification tree, select the plating system.

The system detects all plates in the plating system.

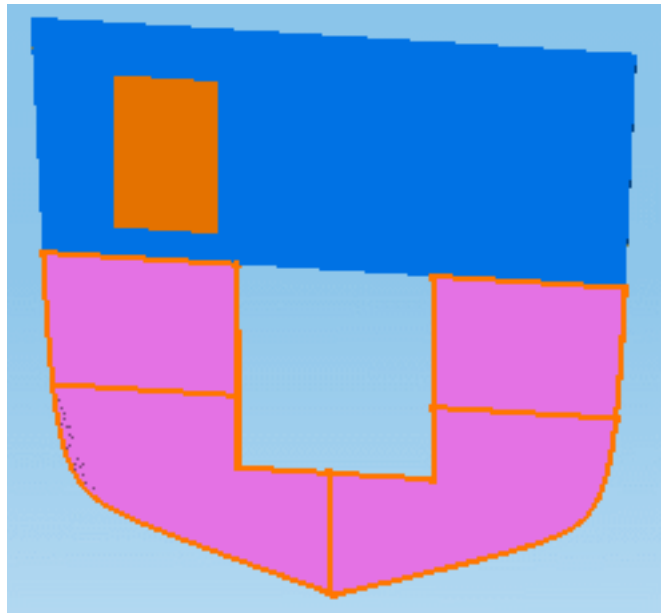


To specify connectivity between two systems, select systems of interest.

3. Systems can be stiffening, plating or beaming systems. In the impact column, right-click the plating system and identify the impact on this system by selecting it in the contextual menu displayed.

Four impacts are available:

- None: the connection has no impact on the system.
- Interrupted: the connection requires that the system be split into one or more sub-systems.
- Minor: the connection requires the addition of a feature, such as cutback, slot, endcut, bevel.
- Minor + Interrupted

Note: If two systems are selected, the impact on each system may be different.

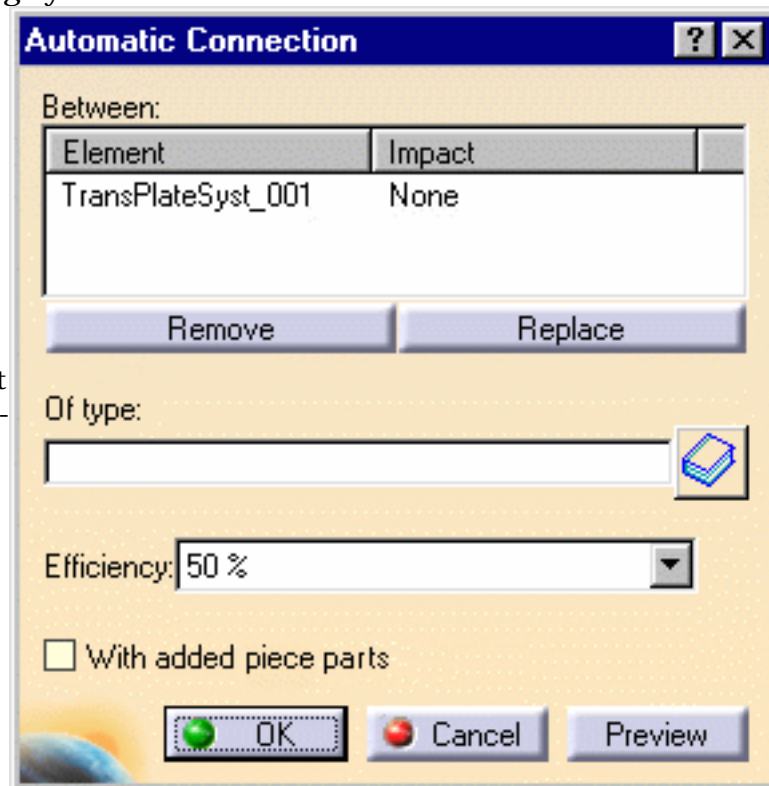


Impacts

Impacts are managed in a customizable CATNls file, **CATStrImpactConnectionCode.CATNls**. This lets you add other impacts or rename existing ones.

The default location of this file is: **downloaddirectory/OS/intel_a/resources/msgcatalog** where OS is the operating system, for example intel_a (Windows).

 Impacts can then be used as keywords in detail connection catalogs, letting the designer query for detail connections satisfying certain impact criteria when physically implementing functional connections.

4. Click the Catalog  icon opposite the Of type field and select a catalog connection or enter a comment directly in the Of type field.

Catalog Connections

A sample catalog of different connection types is provided with the product.

- Click the catalog icon.
The Catalog Browser opens letting you browse and preview the contents of the current catalog.
- Browse the families and double-click the family of interest.
- Browse the list of connections and select the one of interest.
- Click **OK** in the Catalog Browser.

For information on options in the Catalog Browser, see Using Catalogs in the *Infrastructure User's Guide*.

5. Set the efficiency, for example 75%.

The efficiency lets you assess the resistance of the connection.


Efficiency

Efficiency is managed in a customizable CATNls file, **CATStrEfficiencyConnectionCode.CATNls**. This lets you add other values or rename existing ones.

The default location of this file is: **downloaddirectory/OS/intel_a/resources/msgcatalog** where OS is the operating system, for example intel_a (Windows).

Efficiency can then be used as a keyword in detail connection catalogs, letting the designer query for detail connections satisfying certain efficiency criteria when physically implementing functional connections.

6. Check With added piece parts if you know that the physical connection detail will require the addition of features (cutback, slot, etc.).
7. Click **Preview** to visualize functional connections in the geometry area.

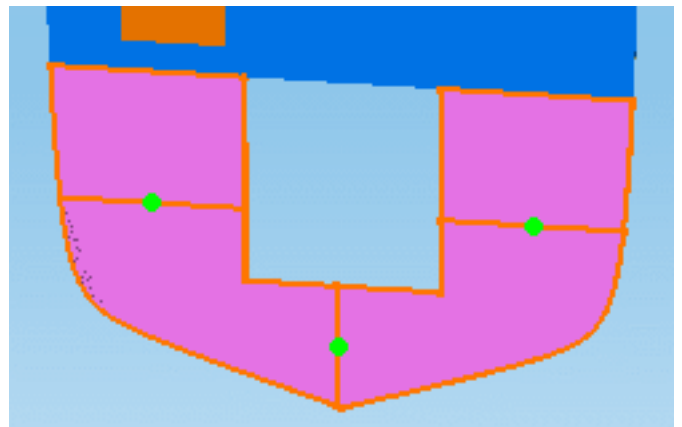


8. Click **OK** when done to create the connection.

The system automatically establishes the connectivity between all plates in the plating system.

Connections are added to the specification tree (one entry for each connection established). They are grouped under an Assembly Joints entry.

When connections are made within a plating system, between two plating systems or between a plating system and a stiffening system, a joint body is also created for each connection to identify the published faces at which the connection is established.

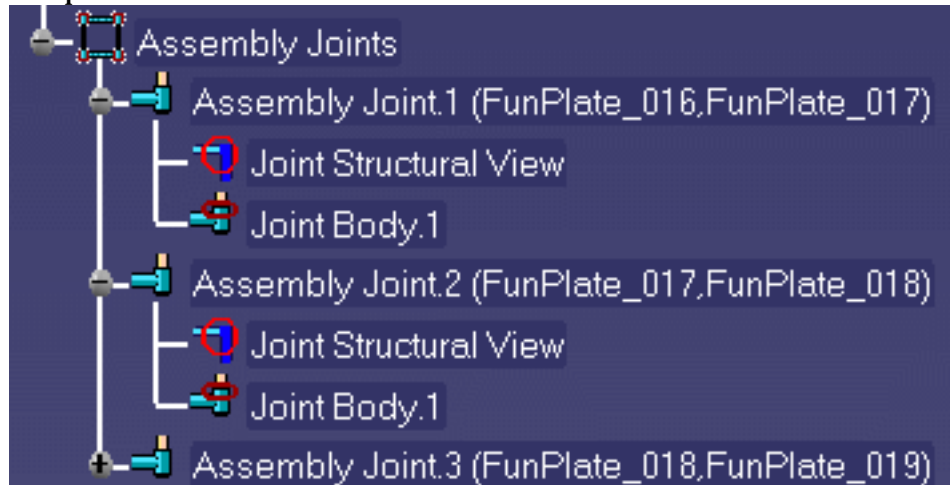


- A yellow symbol containing an exclamation mark in the specification tree means that the connections would be more judiciously placed elsewhere in the tree. For example, if connections are within a plating system, it is best to activate the plating system and create the connections under the plating system; if between a plating system and a stiffening system, it is best to activate the common tree entry just above these systems and create connections there.




- To edit the structural connection, double-click the appropriate Joint Structural View entry in the specification tree.

Typical Examples of Connectivity between Systems


A. None (stiffener) / Minor - addition of a slot (bulkhead)

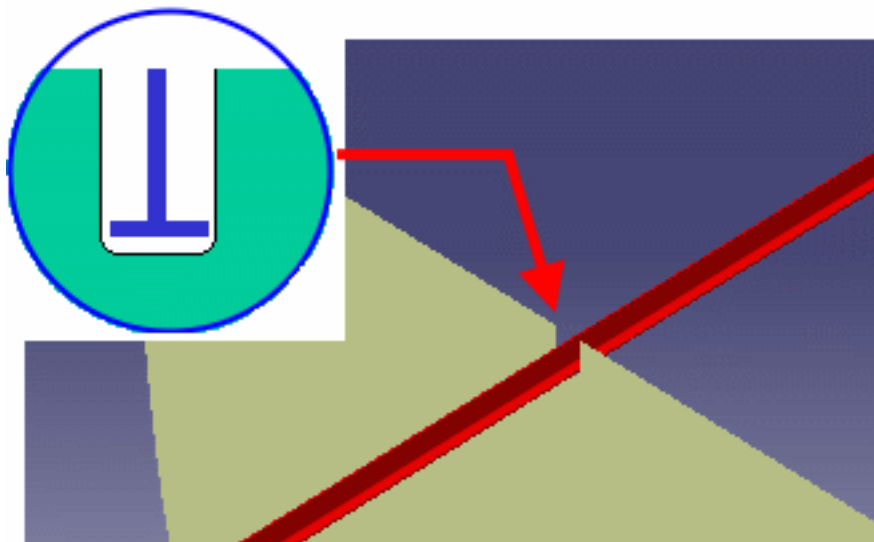

B. None (yellow stiffener) / Interrupted (red stiffener)

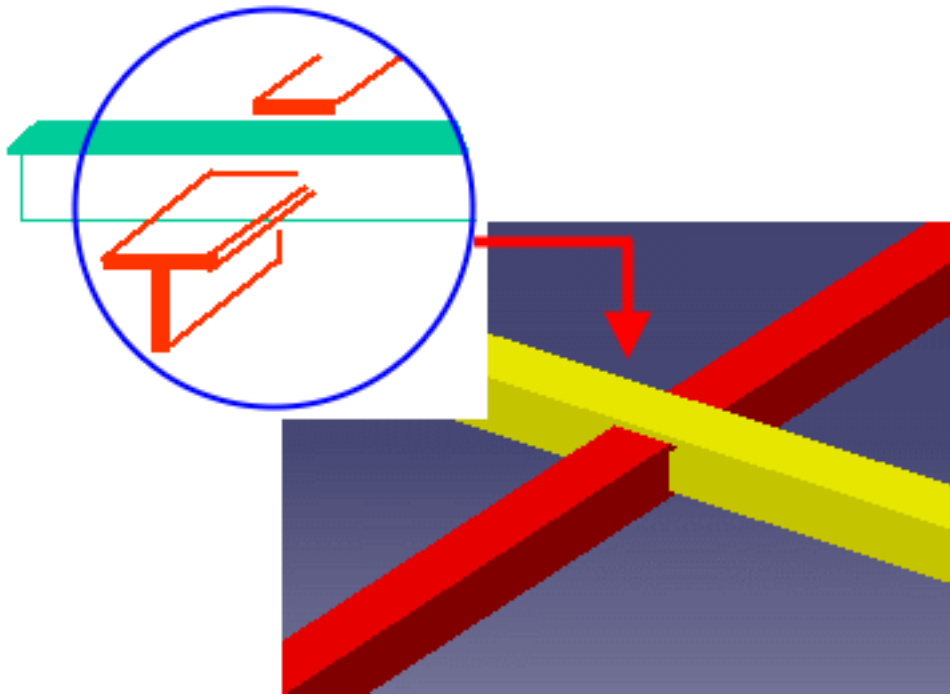

C. None (deck) / Minor - weld (wall)

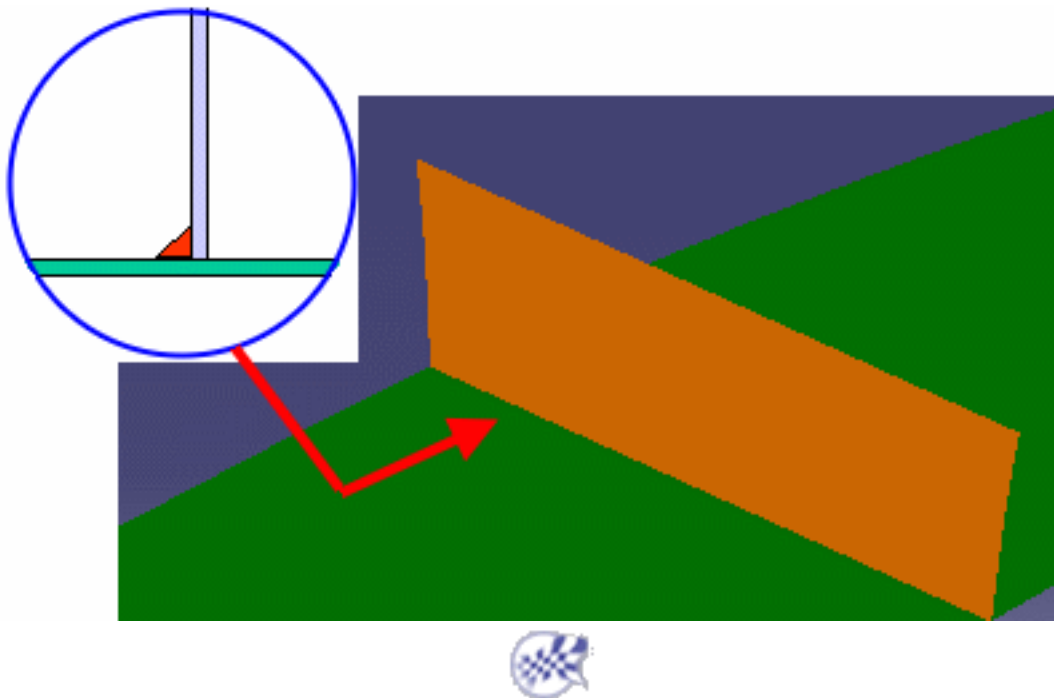

Manually Connecting Structural Elements



Establishing connectivity between structural elements is important. Many different types of connectivity may be found in a ship. These include plate to plate connections, plate to stiffener connections, stiffener to stiffener connections.

This connectivity captures the functional requirements and will be physically implemented downstream by means of joints and piece parts (chocks, transitions, brackets, etc.).

The Manual Connection command is used to make a single connection between compatible elements, i.e. elements that can be connected together in a single connection.




This task shows you how to manually connect individual structural elements.



1. Click the Manual Connection  icon:

The Manual Connection dialog box appears.

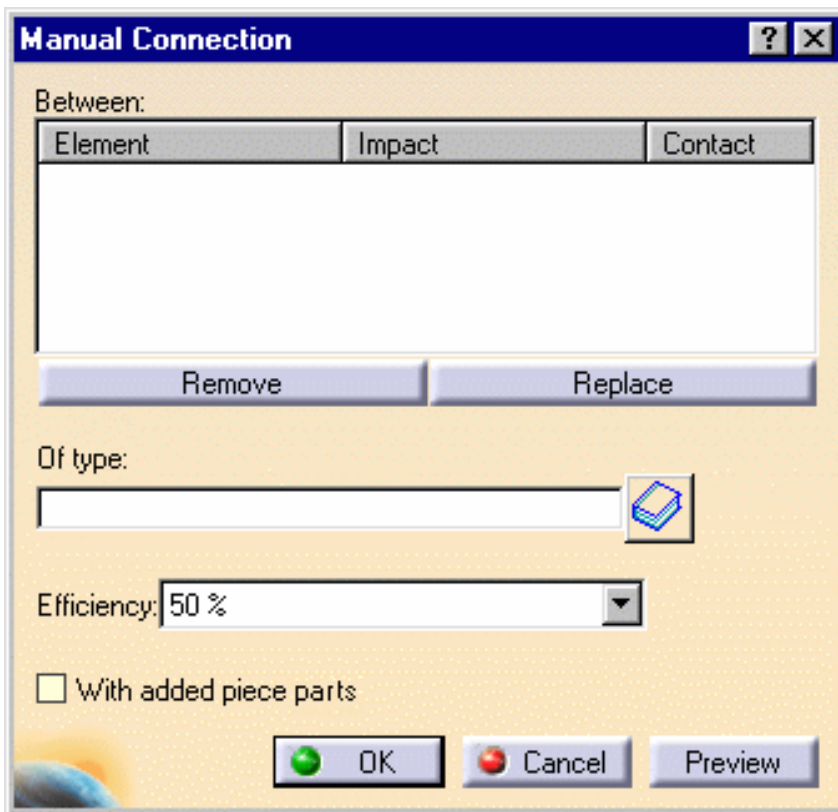


The dialog box is titled "Manual Connection" and contains the following fields and buttons:

- Between:** A section with three tabs: "Element", "Impact", and "Contact". The "Element" tab is selected.
- Remove** and **Replace** buttons.
- Of type:** A text input field with a dropdown arrow and a small icon of a book.
- Efficiency:** A text input field showing "50 %" with a dropdown arrow.
- ☐ **With added piece parts**
- OK**, **Cancel**, and **Preview** buttons.

2. In the geometry area or in the specification tree, select the structural elements you want to connect.

In our example, two stiffeners.

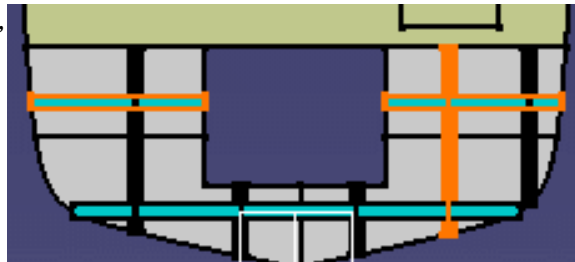


Any structural elements already connected are highlighted in the geometry area.

3. In the impact column, right-click the first row and identify the impact on the system by selecting it in the contextual menu displayed.

Four impacts are available:

- None: the connection has no impact on the system.
- Interrupted: the connection requires that the system be split into one or more sub-systems.
- Minor: the connection requires the addition of a feature, such as cutback, slot, endcut, bevel.
- Minor + Interrupted

4. Repeat for other rows.

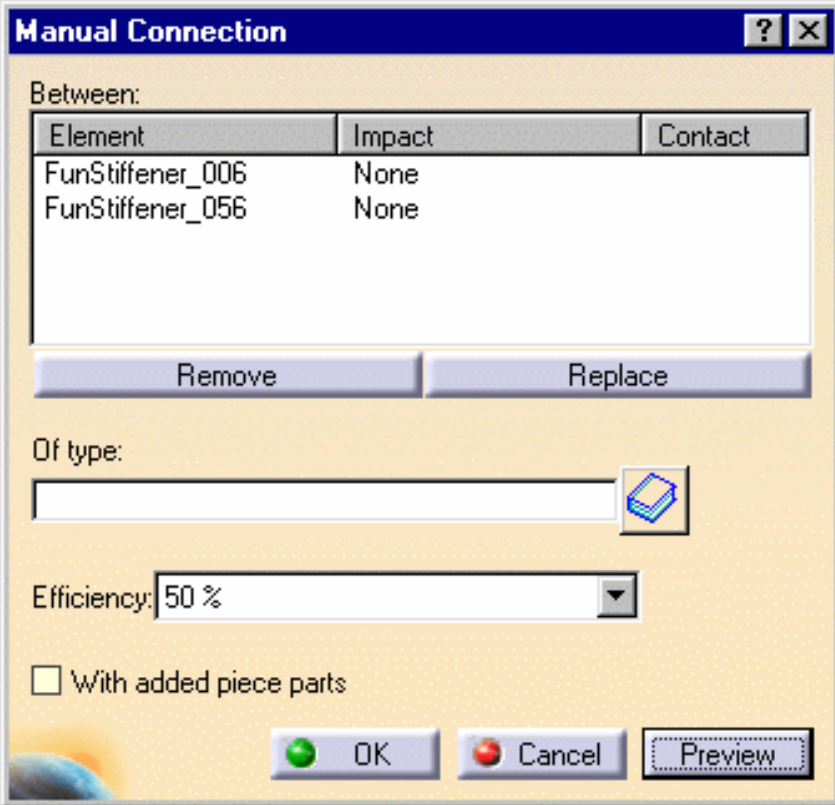

The 'Manual Connection' dialog box contains a table with three columns: 'Element', 'Impact', and 'Contact'. The table lists two elements: 'FunStiffener_006' and 'FunStiffener_056', both with an impact of 'None'. Below the table are 'Remove' and 'Replace' buttons. The 'Of type:' field is empty, with a catalog icon to its right. The 'Efficiency:' field is set to '50 %'. There is a checkbox for 'With added piece parts' which is currently unchecked. At the bottom are 'OK', 'Cancel', and 'Preview' buttons.

| Element | Impact | Contact |
|------------------|--------|---------|
| FunStiffener_006 | None | |
| FunStiffener_056 | None | |




Impacts

Impacts are managed in a customizable CATNls file, **CATStrImpactConnectionCode.CATNls**. This lets you add other impacts or rename existing ones.

The default location of this file is: **downloaddirectory/OS/intel_a/resources/msgcatalog** where OS is the operating system, for example intel_a (Windows).

Impacts can then be used as keywords in detail connection catalogs, letting the designer query for detail connections satisfying certain impact criteria when physically implementing functional connections.

5. Click the Catalog  icon opposite the Of type field and select a catalog connection or enter a comment directly in the Of type field.

Catalog Connections

A sample catalog of different connection types is provided with the product.

- Click the catalog icon.
The Catalog Browser opens letting you browse and preview the contents of the current catalog.
- Browse the families and double-click the family of interest.
- Browse the list of connections and select the one of interest.
- Click **OK** in the Catalog Browser.



For information on options in the Catalog Browser, see Using Catalogs in the *Infrastructure User's Guide*.

6. Set the efficiency.



Efficiency

The efficiency lets you assess the resistance of the connection.


Efficiency is managed in a customizable CATNIs file, **CATStrEfficiencyConnectionCode.CATNIs**. This lets you add other values or rename existing ones.

The default location of this file is: **downloadirectory/OS/intel_a/resources/msgcatalog** where OS is the operating system, for example intel_a (Windows).

Efficiency can then be used as a keyword in detail connection catalogs, letting the designer query for detail connections satisfying certain efficiency criteria when physically implementing functional connections.

7. Check With added piece parts if you know that the physical connection detail will require the addition of features (cutback, slot, etc.).

8. Click **Preview** to visualize functional connections in the geometry area and identify the contact type.

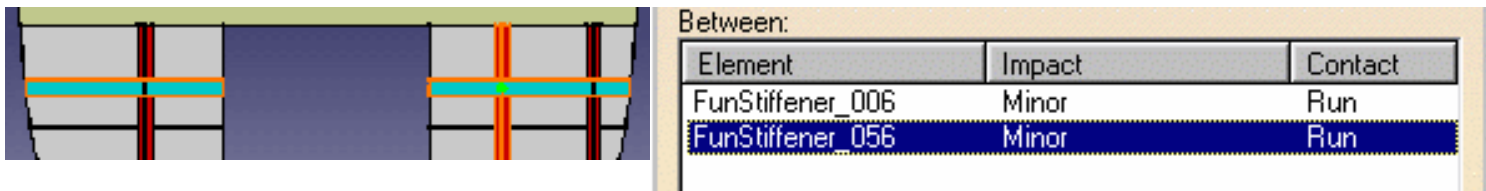

Contact

Contact types are managed in a CATNIs file, **CATStrFunCnxPanel.CATNIs**. You cannot add types to the existing list but you can rename types.


Four types are available:

- Edge and face for plates.
- End and run for stiffeners.

Note: A Warning dialog box informs you if the connection cannot be made because selected elements are not compatible.

9. Click **OK** when done to create the connection.

Structural elements are joined together in a single connection.

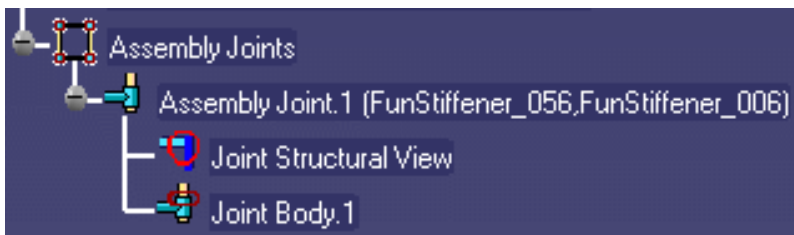


A structural connection is added to the specification tree under an Assembly Joint entry. Where possible, a joint body is also created to identify the published faces at which the connection is established



- A yellow symbol containing an exclamation mark in the specification tree means that the connections would be more judiciously placed elsewhere in the tree.

For example, if connections are within a plating system, it is best to activate the plating system and create the connections under the plating system; if between a plating system and a stiffening system, it is best to activate the common tree entry just above these systems and create connections there.

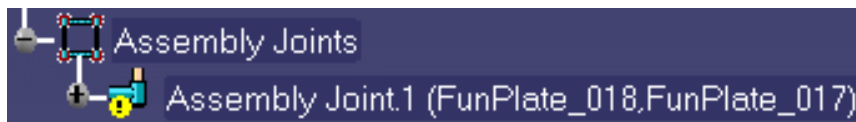

- To edit the structural connection, double-click the Joint Structural View entry in the specification tree.



Refining or Modifying Connections



The Connection Body command lets you:

- Further specify your connection by identifying on which geometrical element (face, vertex, edge, stiffener support or end, etc.) of the structural plate or stiffener the connection is established. This occurs typically when a gap exists between two structural stiffeners and the manual or automatic connection could not identify the geometrical element.
- Modify an existing connection, i.e. modify the geometrical element at which the connection is established.



In the case of plating systems, it is important to specify the faces on which the connection is established. This information is used downstream to generate weld seams on drawings.



This task shows you how to further specify a connection.



Have created a connection.




1. Click the Connection Body  icon.

2. Select a structural connection (Joint Structural View) in the specification tree.

The Connection Body dialog box is displayed.

Connected structural plates or stiffeners are placed in Show mode.

If modifying an existing connection, the dialog box lists published geometrical elements. These elements are also highlighted in the geometry area.

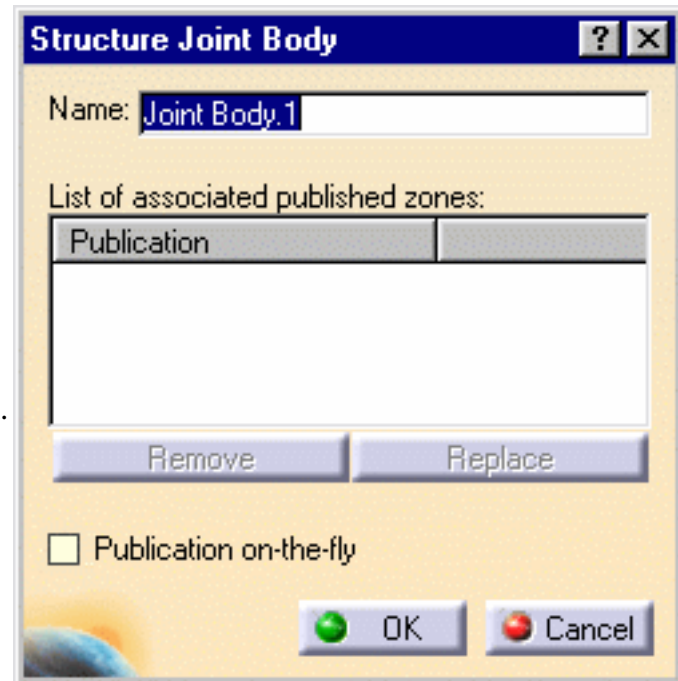

3. Select the geometrical elements of interest to refine your connection:

You can select faces, edges, vertices, stiffener supports and ends, etc.

Only published items can be selected. To select unpublished items and have them published on-the-fly, check Publish on-the-fly, then select geometrical elements of interest.

Note: There is no particular order when selecting geometrical elements.

Modifying Geometrical Elements

Select the geometrical element in the dialog box, then click Remove or Replace before selecting the new element at which to establish the connection.



4. Click **OK** when done.

A joint body is created and added to the specification tree.



Creating Physical Plates & Shapes



Create plates: set parameters in the dialog box then select a support plane or surface, and if necessary define a contour.



Create shapes: set parameters in the dialog box then select an existing support or define where the shape starts and ends.



If your design table path is not updating properly, see [About section catalogs](#).



Create small assemblies: select a catalog assembly then existing shapes or plates to position it.



Place cutouts: select a plate or shape, a cutting mode and a contour for the cutout.

Remove and modify cutouts: select a plate or shape then the cutout and click Remove or Modify.



Place standard endcuts: select a shape, then standard endcuts at the start and end of the shape.



Place contextual endcuts: select a contextual endcut, then inputs to define how it is positioned.



Place standard slots: select a plate, then the shape(s) penetrating the selected plate and a catalog slot.



Place contextual slots: select a contextual slot, then inputs to define how it is positioned.



Define cutback: select a shape then a plane.

Cope plates and shapes: select the strategy, the plate or shape to trim and then limiting elements.



Split plates & shapes: select one or more plates and/or shapes, then a wireframe element.



Merge plates & shapes: select two plates or two shapes.


Placing Standard End Cuts




An end cut is created on a shape to configure the mating ends for proper connection with another shape or profile and prior to applying a weld connection. A sample feature catalog containing end cuts is provided with the product. An end cut is a parametric object and, when you place one, it will size itself based on the formulas you defined when creating it.




This task shows you how to create a standard end cut, i.e. a feature with no contextual inputs. This end cut feature does not depend on any external objects (other plates, shapes, planes, etc.) to be placed.

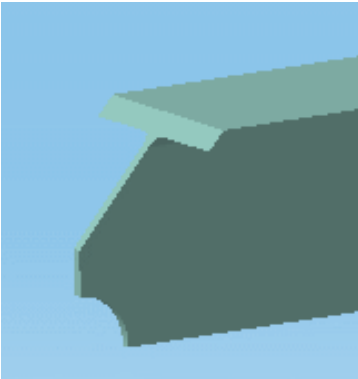


You can also [place end cuts with contextual inputs](#):

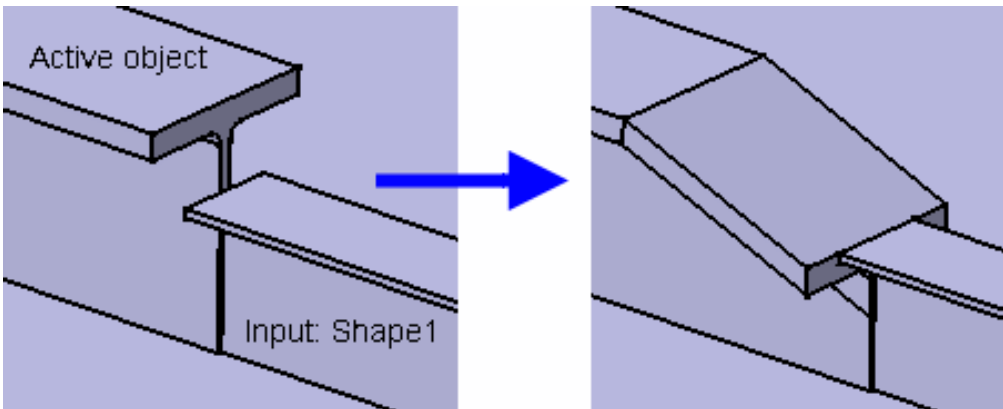

1. With your product open, click the **Endcut**  icon and select the shape to which you want to apply an end cut. *An alternative method is to select the shape first, then click the Endcut icon.*


The End Cut Type dialog box opens and the Begin and End points of the shape will be indicated.

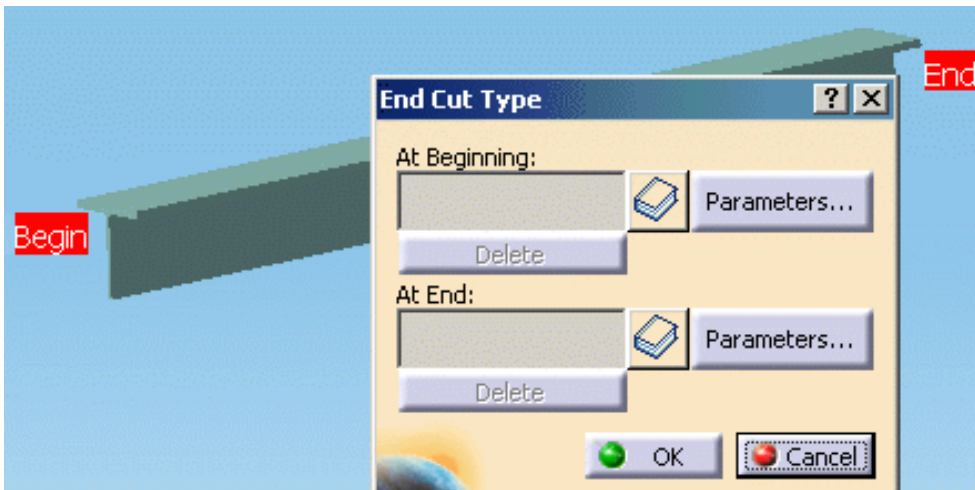

NOTE: If the shape you selected already has end cuts they will display in the At Beginning and At End fields. The Delete button will become active (selectable) only if end cuts are present.

2. Select the Catalog Browser button to define the Beginning end cut type in the At Beginning field.

The Catalog Selection for Endcut dialog box opens.

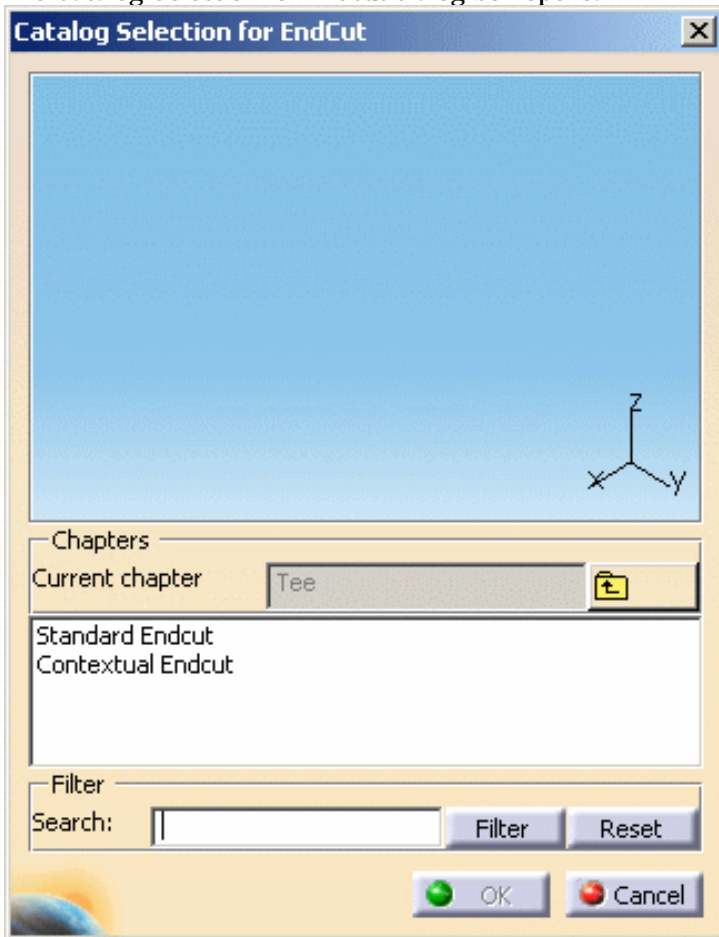


3. In the Catalog Selection for Endcut dialog box, double-click Standard Endcut, then navigate to the chapter and family that contains the appropriate end cut type for the shape being used.

Standard end cut refers to end cuts with one input. [Contextual](#) refers to end cuts with more than one input.

Use the Filter button to narrow your search. Use the wild card (*) symbol at the end of the keyword (e.g., ENDCUT*) to include all entries with the keyword "endcut".

The selected end cut type will preview in the Catalog Selection for Endcut dialog box. Zoom in to enlarge the image in the preview and to visualize the surface and edge parameters.

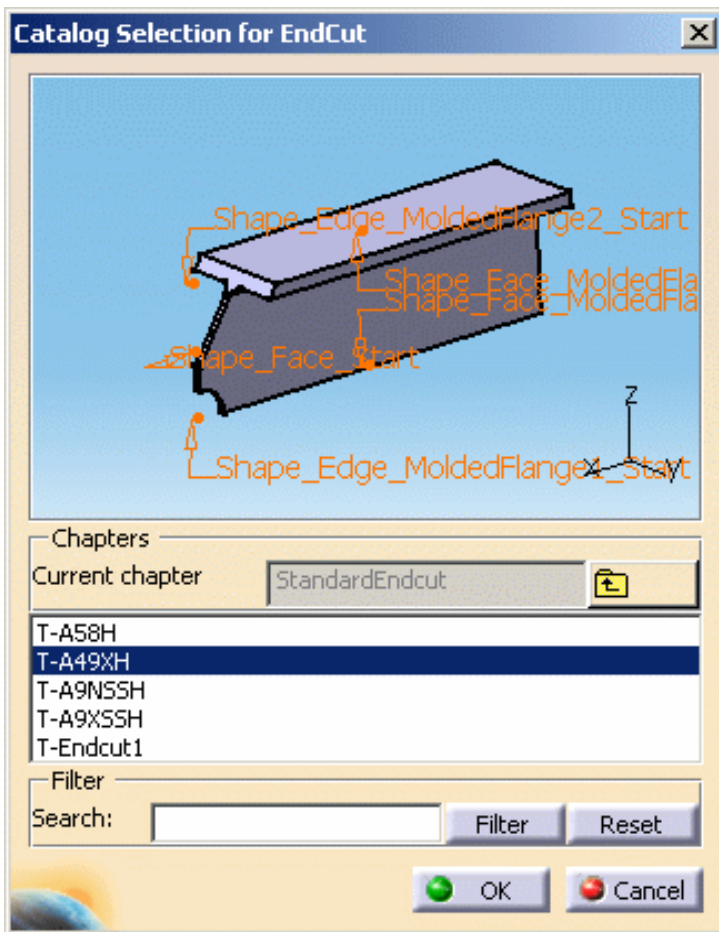


If the parameters of the end cut do not match those of the shape you will be advised of mismatched or undefined parameters. An end cut is a feature that resides in a CATPart; therefore this condition must be corrected using Part Design.




4. Click OK in the Catalog Selection dialog box when you have selected the end cut.
5. Click Parameters... in the End Cut Type dialog box.


The Parameters dialog box will open. This displays the default parameters for the end cut you selected. The number of parameters will differ depending on the end cut type. Change the parameter values as necessary, then click OK.

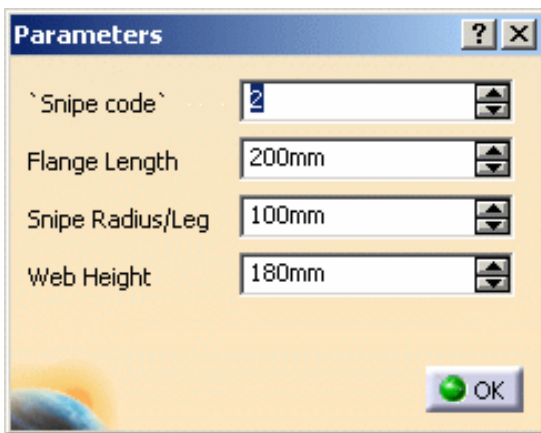

This will return you to the End Cut Type dialog box.

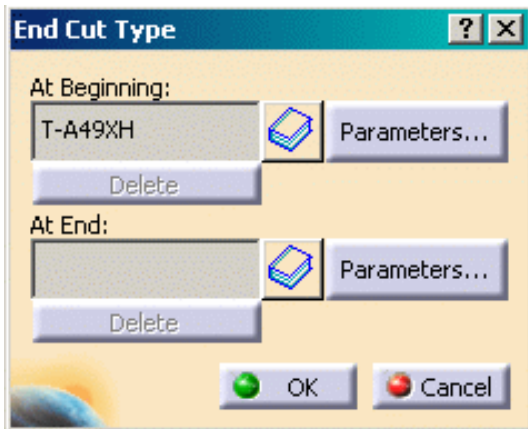

6. Repeat to define the end cut type at the other end of the shape (at End field).
7. Click **OK** in the End Cut Type dialog box when done. The end cut is created.

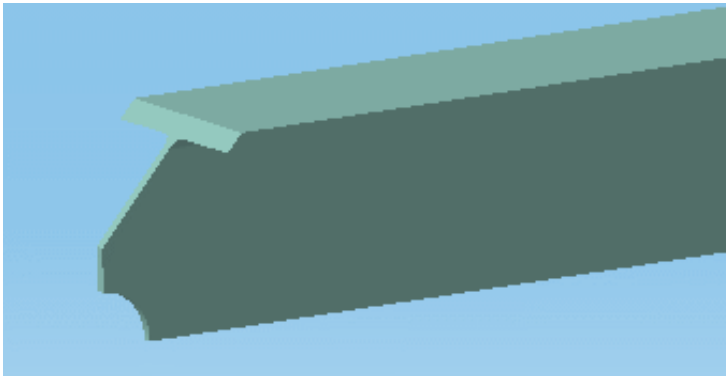

Defining Cutback

The **Cutback** command lets you define how shape ends are cut.

This task shows how to trim a shape to a plane.




No sample document is provided.



1. Click the Cutback  icon.

The Cutback dialog box appears.

The Trim to plane type is the default type.

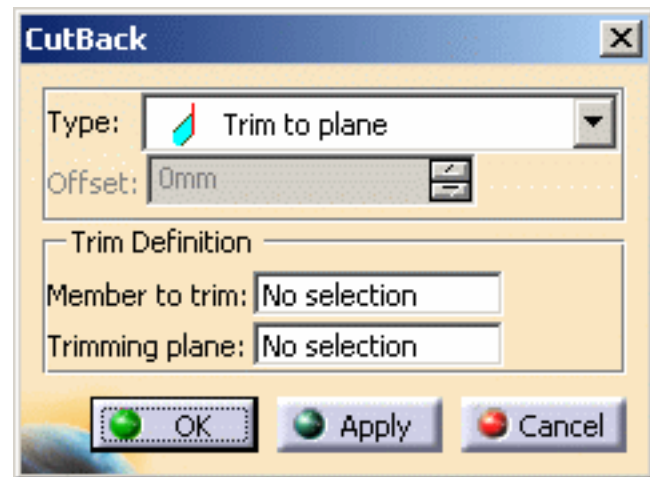

2. Select the shape you want to trim.
3. Select the plane to which you want to trim the shape:

The plane can be a plane, face, surface, plate or another shape.

4. Click **OK** to create the cutback.

Shapes are trimmed to the plane defined by the trimming member and the cutback is identified in the specification tree.



Curved shapes cannot be trimmed because the cutting plane may intersect the curve at more than one location.



About Section Catalogs



Sections can be created from the following big scale or standard scale catalogs:

- AISC_BigScale.catalog
- AISC_StandardScale.catalog
- EN_BigScale.catalog
- EN_StandardScale.catalog
- OTUA_BigScale.catalog
- OTUA_StandardScale.catalog
- DIN_BigScale.catalog
- DIN_StandardScale.catalog

If you get the following message when creating a section:

The source file of the design table AISC_XX wasn't found. The design table is in broken state while this file isn't found.

The design table path is not updating properly to reflect the catalog location.

You will have to enter the correct path for the design table. This is done in one of two ways:

A. Via Tools -> Options

1. Select **Tools -> Options -> General -> Document**
2. Click Other folders under Linked Document Localization, then click Configure...
3. Select the appropriate design table path from those listed below:

../OS/startup/components/StructuralCatalogs/AISC/DesignTables for AISC catalogs
../OS/startup/components/StructuralCatalogs/OTUA/DesignTables for OTUA catalogs
../OS/startup/components/StructuralCatalogs/EN/DesignTables for EN catalogs
../OS/startup/components/StructuralCatalogs/DIN/DesignTables for DIN catalogs

4. Click Add, then **OK** when done.

Or,

B. Via the Properties Command

You must change the design table path for each part linked to a parametric catalog. Parametric sketches are located in:

../OS/startup/components/StructuralCatalogs/AISC/Models for AISC catalogs
../OS/startup/components/StructuralCatalogs/OTUA/Models for OTUA catalogs
../OS/startup/components/StructuralCatalogs/EN/Models for EN catalogs

../OS/startup/components/StructuralCatalogs/DIN/Models for DIN catalogs

1. If needed, modify the rights of CATPart documents.
2. Update the design table path:

- Open the part (File -> Open)
- Right-click the Relations/Design Table entry in the specification tree and select Properties in the contextual menu.
- Update the path:

../OS/startup/components/StructuralCatalogs/AISC/DesignTables for AISC catalogs

../OS/startup/components/StructuralCatalogs/OTUA/DesignTables for OTUA catalogs

../OS/startup/components/StructuralCatalogs/EN/DesignTables for EN catalogs

../OS/startup/components/StructuralCatalogs/DIN/DesignTables for DIN catalogs

3. Update the part and then save it.



Design Assistant



This task shows you how to use the design assistant.

This feature aids the designer in identifying and analyzing the relational situation between objects, for example, in a ship structure. These situations are categorized into three basic groups; limits (contact), clashes, and connections. You can use the Design Assistant to display graphically a specific conflict and a proposed resolution on the fly.

 
These terms are defined as follows:

- Limit/Contact: contacting objects (connections may be missing)
- Clash: hard clashes with objects (requires attention or redesign)
- Connection: proper connection between objects



To reduce unnecessary computer processing time when analyzing object relations you will need to make some changes in the Tools - Options settings.


Go to Tools - Options, select Digital Mockup, DMU Space Analysis then click the DMU Clash - Detailed Computation tab. Change the settings if necessary for Level of Detail, Clash Result and Numeric Result to match those shown below.



The Design Assistant feature supports products designed in Structural Preliminary Layout, Structure Functional Design and Ship Structure Detail Design. A product (or model) may contain one or all of the following:

- Conceptual objects - associated with the Structural Preliminary Layout application
- Functional objects - associated with the Structure Functional Design application
- Detail objects - associated with the Ship Structure Detail Design application




1. With your product open, click the Design Assistant icon .

The Design Assistant dialog box opens.

Click the Tree tab.

In the example, below, the (relations) tree expands at the Product level to show the related Conceptual objects. In the preview window you can zoom and rotate the image just like in the 3D viewer.

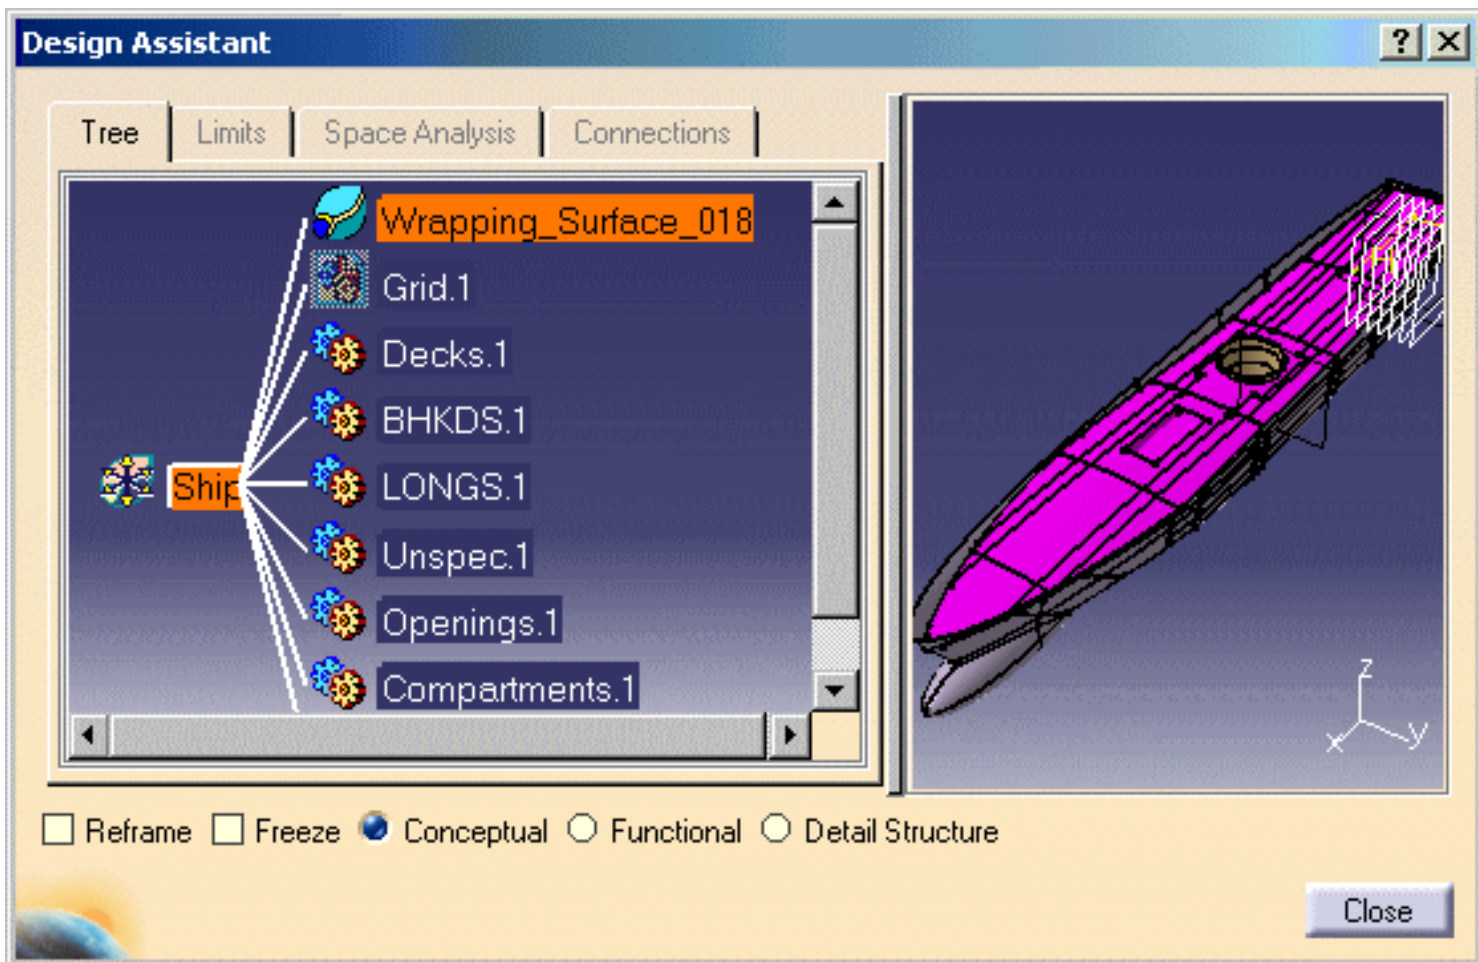

An object can be selected (picked) in the main product, from the specifications tree, or from the relations tree that displays when the Tree tab is selected.

The Tree tab will display up to three levels; parent, current object and children. You can navigate in the tree structure or select a new object in the main product while the Design Assistant is open.


The Limits, Space Analysis and Connections tabs will become active only when the selected object is an individual element, i.e., it is a child of a parent group.

If the current selected object is not of the corresponding product type (Conceptual, Functional, Detail Structure) the Tree view will only display the current object (no parent or children relations are displayed). For example, if the current selected object is Deck_001 (conceptual) but the option Functional is active, only the current object, Deck_001 will display.


2. Activate the Functional option to view related functional objects.

3. Navigate in the specifications tree, the relations tree or pick from the main product, and select an object of interest. As the tabs become available you can view the Limits, Space Analysis and Connections situations for that object.

In the example below, a deck has been selected to view Limits. In the Visualize column, toggle the Y/N to show or hide an object.

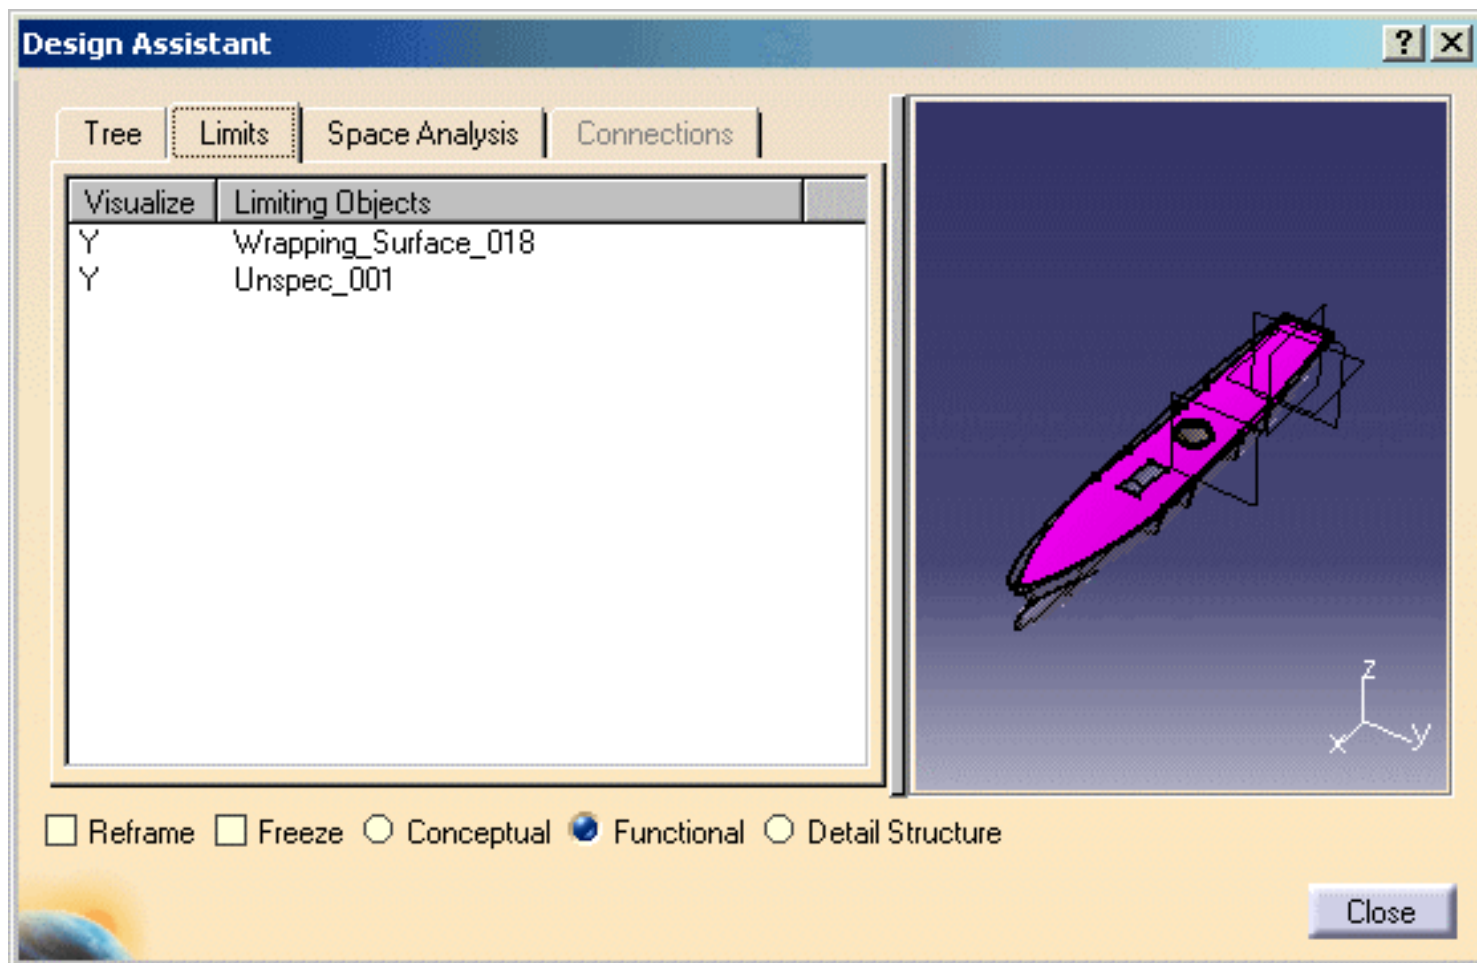

4. Click the Space Analysis tab to display the analysis of related objects at the selected level (in the tree). You can filter the list by selecting All Type, Contact or Clash.

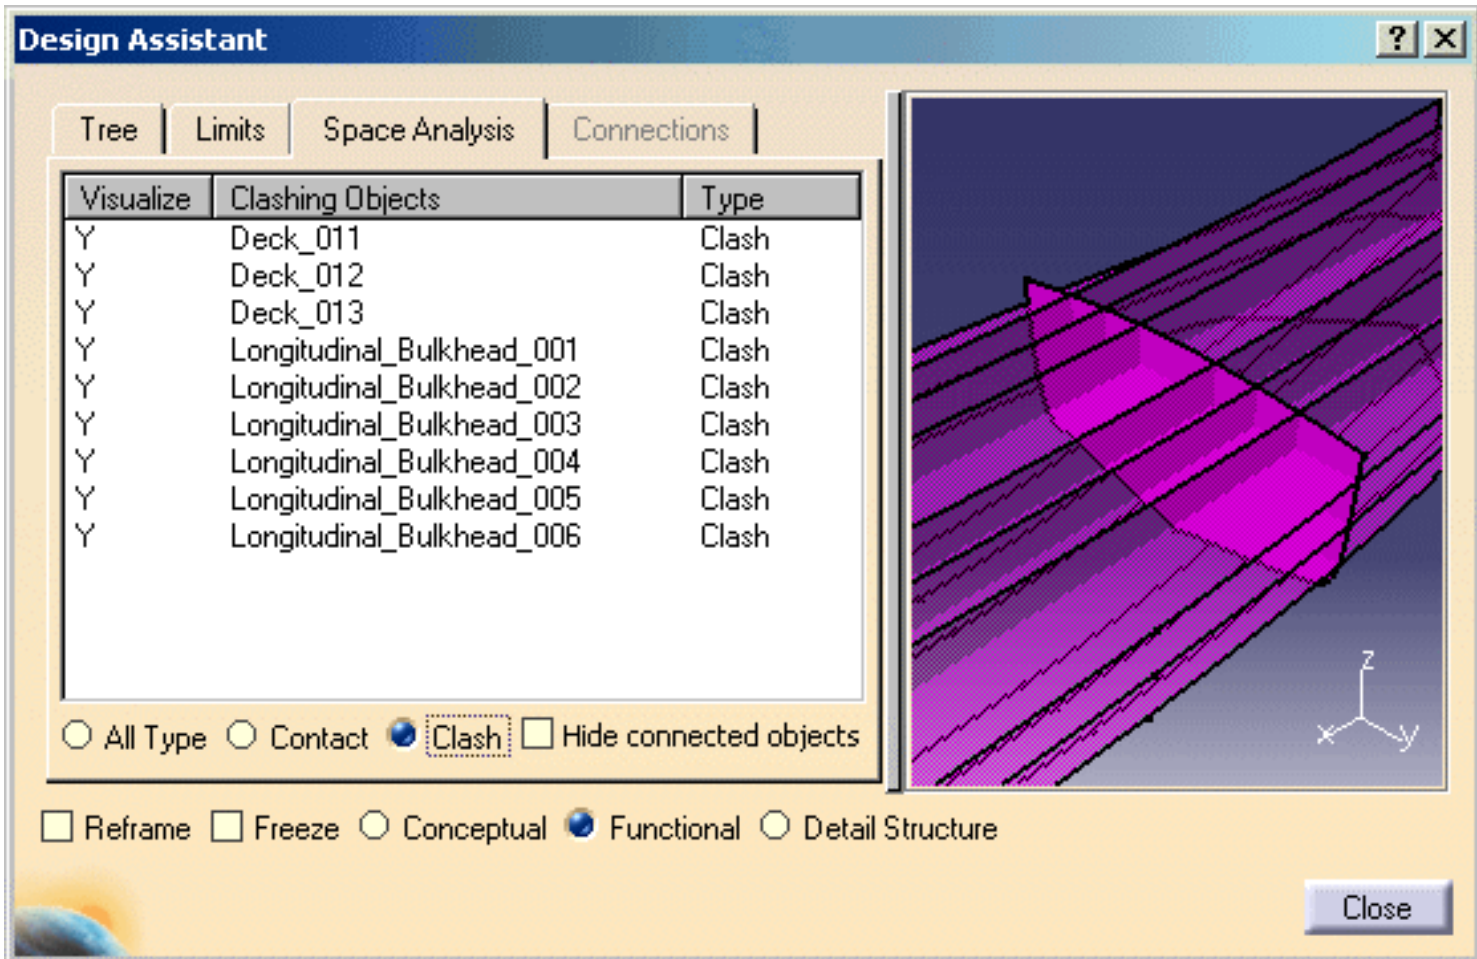

5. In a similar manner, select an object in the specification tree so that the Connections tab displays.

Take some time to experiment with the several combinations of tab selection, object type and filter selections and observe the available information.

6. Click Close when done.



Managing Your Project

[Managing Project Resources](#)
[About the Feature Dictionary](#)
[About Object Naming Rules](#)
[About Molded Conventions](#)
[About Project Parameters](#)

Managing Project Resources



Project resources are typically managed by system administrators. Typically this involves entering information such as folder paths for resources, like user dictionaries such as the feature dictionary, without which the application cannot function. What administrators enter will be visible in the Browse tab of the Project Resource Management dialog box (**Tools -> Project Management -> Select/Browse...**), but it cannot be changed there.

A sample project resource management file is provided and by default, the application will start with this file. The following Ship Structure Detail Design-related resources are managed in this file.

Project Resources

- **Feature dictionary** managing object classes
- Discrete values for attributes: directory used to store discrete values of attributes.
- **ID schema** managing object naming rules
- ID sequence number directory: contains the last sequence number that was generated for an object.
- Reference grid system: a CATPart containing default sets of reference planes in each of the three ship directions.
The default location for this resource is
`...OS/startup/EquipmentAndSystems/Structure/ReferenceGridSystem.CATPart`

Structure Discipline Resources

- **Project parameters**: contains setup parameters for ship directions and characteristic planes

The default location for this resource is `../OS/startup/EquipmentAndSystems/Structure`

- **Molded conventions**: contains a set of rules that give default orientations when placing structural elements

The default location for this resource is `../OS/startup/EquipmentAndSystems/Structure`

- Orientation conventions: contains naming conventions for ship directions. Default conventions are USA conventions contained in sample `CATStrOrientNamingUSAConv`.
Sample naming conventions for European conventions is also supplied:
`CATStrOrientNamingEURConv`.

The default location for these resources are `.../OS/resources/msgcatalog`

- **Structure detail design openings catalog**: contains two chapters, one for positioning features and one for opening shapes.
The default location of this resource is

`.../OS/startup/EquipmentAndSystems/StructureDetailDesign/
FeatureCatalogs/Parametric/Openings/SddOpenings.catalog`

- Structure openings catalog. The default location of this resource is `.../OS/startup/components/StructuralCatalogs/OPENINGS/SFD_OpeningsBigScale.catalog`
- **Naming section characteristics**: a file mapping user names for section characteristics to different categories of shape (I, C, T or L).
The default location for this resource is `CATStrSectionNamingKeys`
- Structure sections catalog: contains structure sections identified in accordance with user names for section characteristics.
The default location of this resource is `.../OS/startup/components/StructuralCatalogs/AISC/AISC_BigScale.catalog`
- Structure sections path: identifies the path of the folder in which the list of available sections will be stored. You will note that this entry has been commented out. The system detects the location of this folder in transparent fashion for the user.

However, you can customize this location to, for example, have all sections centrally located or override the default behaviour. If you do so, do not forget to uncomment this entry. In this case it is recommended that you create an empty folder for available sections and that you identify the path to this folder in a customized project resource management file.
You can also, if desired, initialize a section list for the user.

- Structure materials catalog: defines all materials and grades available to the structural engineer.
The default location for this resource is `.../OS/startup/components/StructuralCatalogs/Materials/StructureMaterials.CATMaterial`

Note: No tiffs letting you view objects in the Materials mode have been delivered.

- Thickness table: defines all plate thicknesses available to the structural engineer. A sample table in text format is supplied. The system administrator can modify or add to the sample thickness table, or, if needed, create a new table.

The default location for this resource is `.../OS/startup/components/StructuralCatalogs/ThicknessTables/ThicknessListSample.txt`

Important: If you change a thickness value in an existing design table, all plates of this thickness linked to the design table will be updated to the new value. With this in mind, you may prefer to add a row for the new thickness or create a new table.

- Structure drawing symbols catalog
The default location for this resource is `.../OS/startup/components/StructuralCatalogs/DrawingSymbols/Structure2DSymbols-Customization.catalog`
- **Structure detailing features catalog**: contains slots, endcuts and assembly templates. The default location of this resource is `.../OS/startup/EquipmentAndSystems/Structure/DetailingFeatures/FeatureCatalogs/Parametric/DetailingFeatures.catalog`

Ship Structure Detail Design Application Resources

- Structure connection details catalog: contains structure connection details. The default location of this resource is `.../OS/startup/EquipmentAndSystems/StructureDetailDesign/FeatureCatalogs/Parametric/StructureConnectionDetails.catalog`

Note: .../OS where OS is the operating system, for example intel_a (Windows) to be found in the download folder.



ENOVIA-based Resources


When you change from using file-based resources to ENOVIA-based resources, you must go through the PRM file and change the "Driver" entry to "ENOVIAV5" and the "Location" entry to the file name of the resource without the file extension. This must be done for all resources, typically the structure materials catalog and the sections catalog, that have been placed in the ENOVIA database.




- If there is more than one project at your site, then a project resource management (PRM) file is made for each project. You can select another project using the [PRM command](#) (**Tools -> Project Management -> Select/Browse...**).
- For more information on [resources and how the resource management file is organized](#).




Using the PRM Command

 This task shows how you can select a project for your session.

-  **1.** From the appropriate CATIA workbench, launch the project resource management (PRM) command by selecting **Tools - Project Management - Select/Browse** from the menu bar.

The Project Resource Management dialog box is displayed:

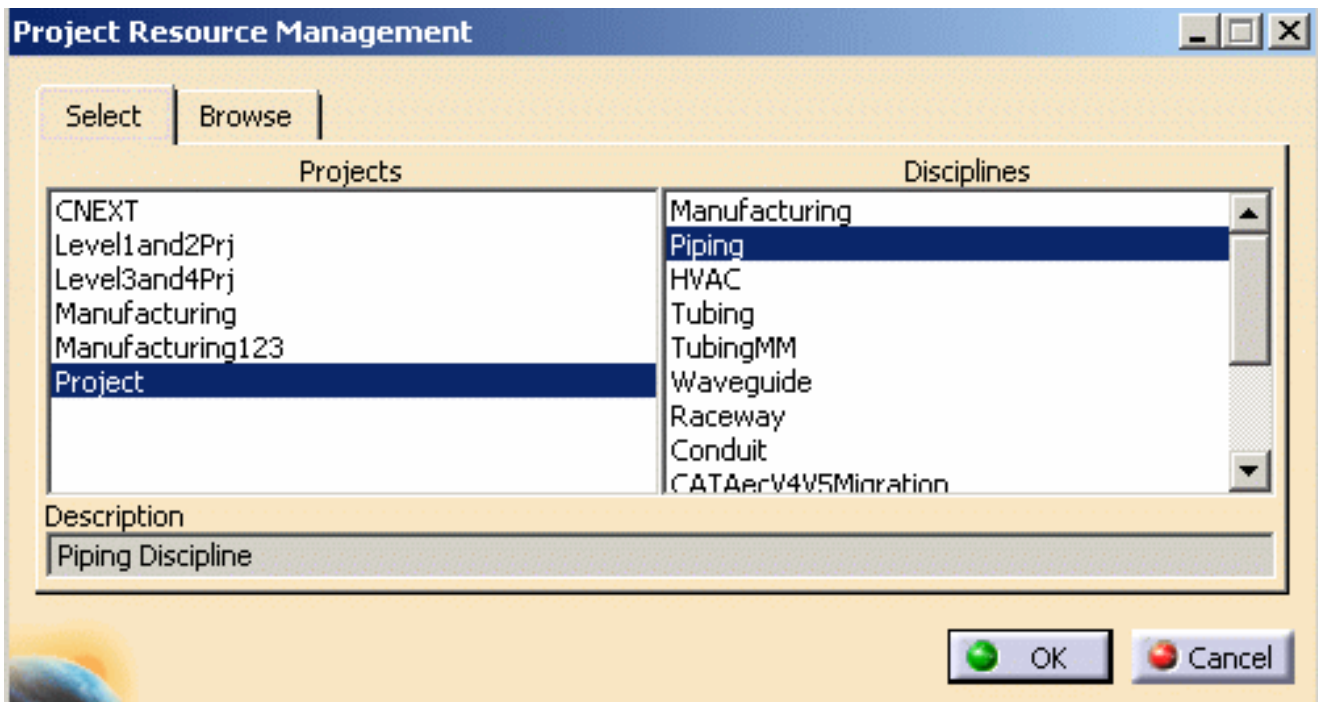

Note that when the dialog box opens the last project that you used is selected.


The **Select** tab lists all the XML projects setup found in the directory defined by the environment variable **CATDisciplinePath**. This list begins with a CNEXT project which contains only the applications with their resources as defined and delivered with CNEXT.


- 2.** Select the project of your choice, here Project.
The corresponding PRM file is read and the disciplines it contains are listed.
- 3.** Select the corresponding discipline, here Piping. Click OK to use the project and discipline you have selected.

4. The following step is used for informational purposes only - to see a list of resources for a particular discipline. To select a project you only need to take the steps explained above.

Select the **Browse** tab. Once a project and a discipline have been selected, the dialog box lists all the applications defined for the chosen discipline, the description of the active application, and the list of resources of that application. *The list of resources displayed is always that for the active application.*


You should also note that the applications displayed include the applications under that particular discipline, and any applications that are at the project level, which means above the discipline in the PRM hierarchy. In the example below, the Piping discipline displays Piping Design and PID, which are part of that discipline. It also displays the Equipment, Hanger Design and Penetration Management applications, because some of their resources have been placed at the project level. The reason for placing them at the project level is that most disciplines make use of these applications.

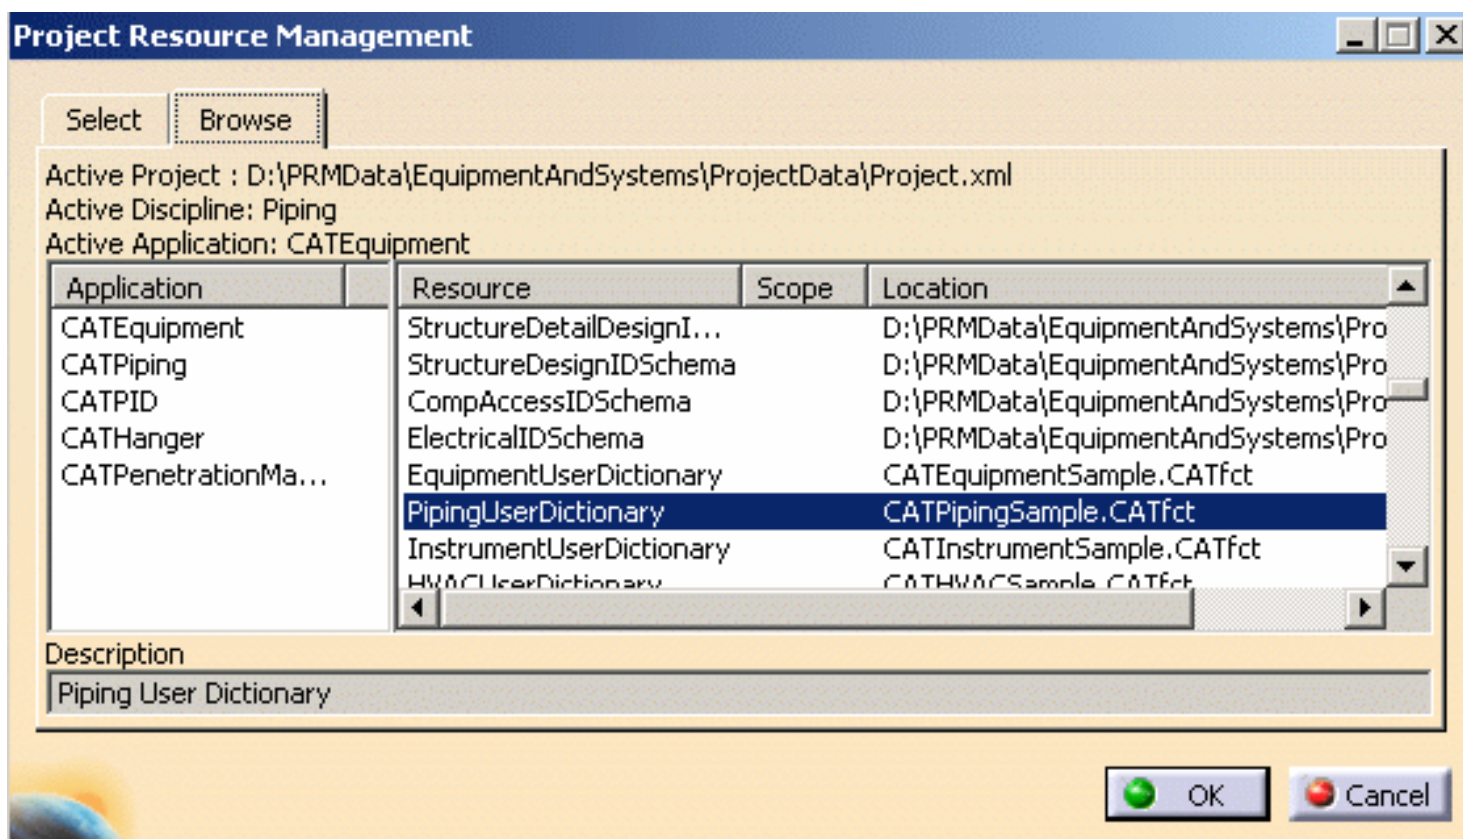

 When the Project Resource Management dialog box first displays, as explained in Step 1, it may contain a third tab - **XML Parsing Error**. This indicates that there is an XML syntax error in the file that corresponds to the Project you have chosen.



Click the XML Parsing Error tab to display the error, as shown in the image below.

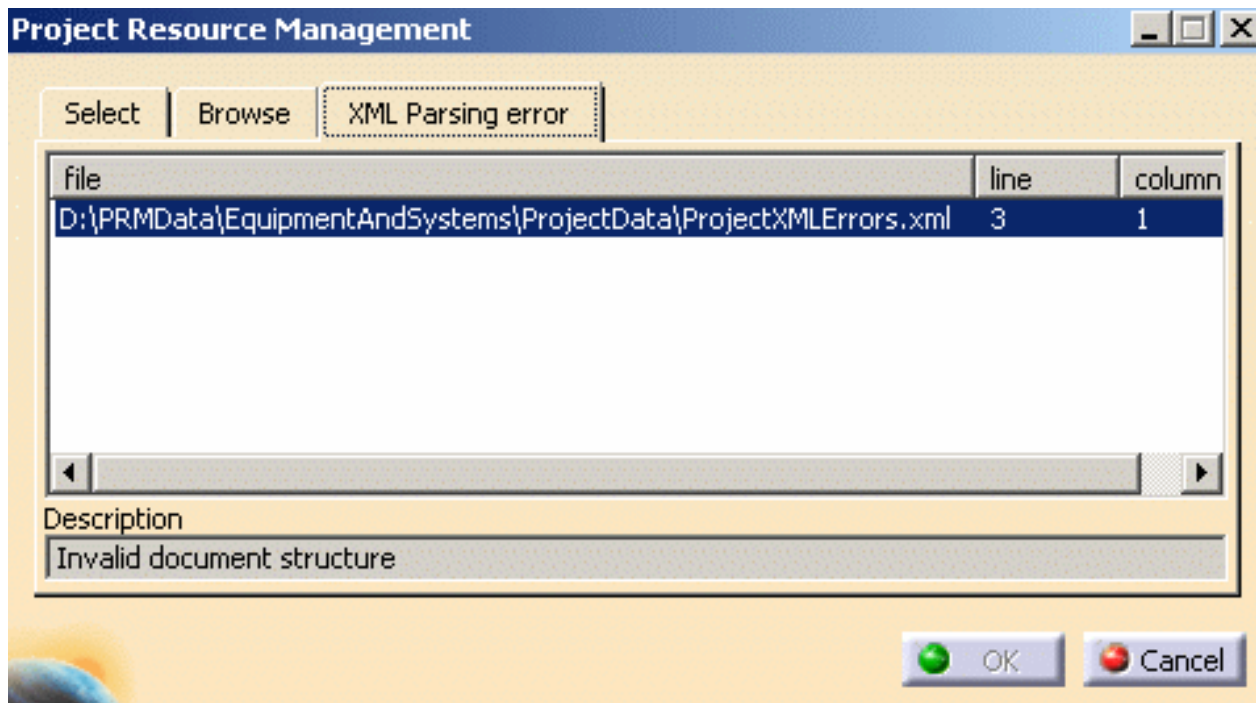

You will need to correct the PRM file to get rid of the error.

Errors in defining resources in the PRM file are explained in [Checking a PRM File for Errors](#).



Understanding Project Resource Management



This task shows you how to manage project resources like catalogs and dictionaries. These changes can only be made at system administrator level.

For a more complete list of resources and flags see [List of PRM Resources and Flags](#).



The project resource management (PRM) file identifies resources (such as line list catalogs, user dictionaries, etc.) to the application. Specifically, the PRM file identifies each resource and its location (directory path). The PRM file also organizes the resources by discipline and application, associating resources to specific applications. Therefore, you get the correct resource, equipment catalog for instance, for the resource you are working in.

It's hierarchical structure allows you to share resources, so that you do not have to place duplicate copies of the same resource in several directories.

The PRM file is also used for certain other purposes, such as setting flags. These are explained below.

A sample file is provided with this application, and it is best to make a copy of it and edit it. The default location is ...intel_a\startup\EquipmentAnd Systems\ProjectData and the file is named **Project.xml**.

The application will function even if the user does not enter information particular to his site, but nothing can be saved. *Therefore, the first task an administrator needs to do is enter information relevant to his site or project.*




1.If there is more than one project at your site you will need to make a project resource management file for each project. You can name the file anything you want to and change its location too (see below). However, you must set the variable in the Environment Editor. You do this by opening the Environment Editor dialog box and entering against the line **CATDisciplinePath** the directory in which your project resource management files are:

| | |
|-------------------|--|
| CATReport | CSIDL_LOCAL_APPDATA\DassaultSystemes\CATReport |
| CATDisciplinePath | g:\V5R8Dev\prjapa8\intel_a\startup\EquipmentAndSystems\ProjectData |
| USER_HOME | CSIDL_PERSONAL |

If you have more than one project resource management file then by default the application will start with the file named **Project.xml**, if there is such a file, *or the last file used*. If you wish to select another resource management file you must open it by clicking **Tools - Project Management**. Go to the **Select** tab and select the file and discipline you need. This dialog box shows each resource available to you, unless the value of "**Visible**" (see below) against a resource or application is set to No.

2.The resource management file is organized into several sections to make it easier to manage and utilize resources. The image below shows its hierarchical structure, with an exception, which is explained below. "Other disciplines" refers to other disciplines like Tubing, or AEC V4 to V5 Migration Discipline, that are placed at the same level. They are not shown in this image for reasons of space.

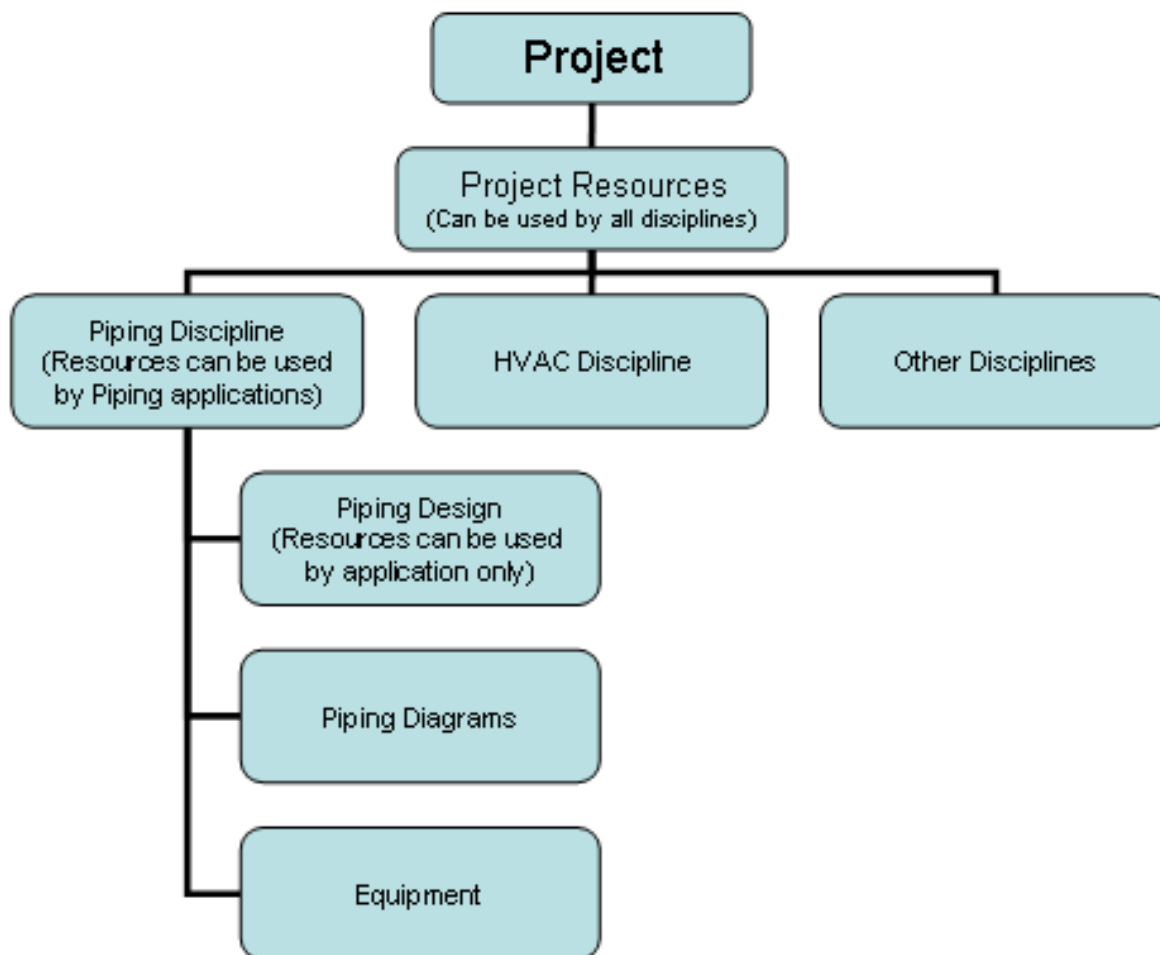

The **Project** box refers to the project for which the PRM file has been created, and will frequently be identified by the file name. In this case it is Project.xml.

When you look at the Project.xml file you will see that the resource listings begin with **project resources**. Any resources you place under the heading Project Resources can be used by all applications that are included in the file. In the sample file you will see items like zones, feature dictionary and application-generated object names in this section. All disciplines and applications shown under project resources will be able to access the resources identified under the heading project resources.

The next level is the **discipline** level. All resources placed under a discipline, such as Piping, can be used by all the applications which are listed under it. In the example above, Piping Diagrams, Piping Design and Equipment applications are shown under the Piping Discipline. Resources such as various catalogs and report definitions are listed at the discipline level and can be accessed by all applications that belong to that discipline.

The next level of resource management is the application itself. Any resource referred to at this level can only be used by that application. Resources like catalogs, files that contain connector attributes and resolved parts directories are listed at this level.

Equipment Arrangement and Hanger Design have been placed under several disciplines. These applications are considered multi-discipline because their resources are used by all disciplines. When you are working in these disciplines you may need Equipment or Hanger resources. However, in different disciplines you may not use the same resources from Equipment Arrangement or Hanger Design and this structuring allows you to place different different resources under each discipline. For instance, under the Piping Discipline, Equipment Arrangement may have a different catalog (with Piping related equipment only) than under the HVAC Discipline.

Equipment and Hanger applications have *also been placed at the project resource level*, primarily to allow sharing of resources, under the headings "Equipment Application Resources" and "Hanger Design Application Resources."

To explain: If you are working in Piping Design you are in the Piping Discipline. You select the discipline by clicking Tools - Project Management, or simply by opening an application, which will activate the correct discipline. For this to happen your PRM file must be set up correctly.

Now, while in the piping workbench, you want to place equipment in your document, and you launch Equipment Arrangement. When you do so you will only have access to equipment resources that are identified in the PRM file under the piping discipline, for instance the "piping equipment catalog," containing piping related equipment. But let us assume that in your project you have certain types of equipment that are used by all disciplines. You can create a catalog that contains all this common equipment and identify it under "Equipment Application Resources" at the project level (it should **not** be identified under discipline also). When you do this you will have access to this catalog when you open Equipment Arrangement under any discipline.

Some applications have the entry "Visible = yes". If you set the value to No then this application cannot be used and will not be visible in the **Tools - Project Management** dialog box.

3. A resource entry looks like this:

```
<Resource Name="PipingIDSchema" Description="Piping ID Schema Directory">
```

```
<ID Type="Path" Driver="File" Location="..\..\EquipmentAndSystems\Piping\DataDictionary"/>
```

```
</Resource>
```

- You should not change the **Resource Name**, even if you replace a resource with a different one.
- You can change the **Description** if you want to - this is a brief explanation of the resource.
- The **Type field** refers to file type. If the Type field says Catia, it refers to a file type unique to Catia, such as **.catalog**. The type Misc is used for resources which are of a type not unique to Catia and must be opened in another way. The type Path is similar, except that in the Location field only the directory in which the resource is located is named.
- If your resources do **not** reside in Enovia, enter File in the **Driver field**. Define the Location field as follows: As shown in the resource example above, the location entry is relative - it is relative to the entry you made in the Environment Editor as shown in Step 1. The entry in the location field will be *added* to the entry you had in the Environment Editor and it is in that location that the application will look for the resource. *Which is why it is preferable to enter absolute paths - including the drive letter - in the location field.*
- If your resources are **Enovia-based**, enter EnoviaV5 in the Driver field. For Enovia-based resources, all you need to enter in the Location field is the file name of the resource without the file extension. For instance, the catalog **PipingParts.catalog** would be entered as **PipingParts**.
- The **Location** field usually gives the location of the resource. If this is a directory path then you can change the location, with an associated change in the PRM file. This entry is sometimes used to enter a value for a flag or behavior, such as 0 or 1, or True and False.
- Some resources have the entry "**Visible = yes**". If you set the value to No then this resource cannot be used and will not be visible in the **Tools - Project Management** dialog box.
- Some resources have the entry **Access="RW" or "R"**. These refers to file permissions: read-write or read.

When you change from using file-based resources to Enovia-based resources: You must go through the PRM file and change the "Driver" and "Location" entries as noted above. This must be done for all resources that

have been placed in the Enovia database.

4. The **Project Resources** listed in the sample Project.xml file are described in following sections, beginning with the resources referred to under Project Resources:

- **ID schema resources:** The "location" lists the directory where the rules for naming objects are stored. Use the default location provided in the sample file. You need to have this for every application you use. In addition, there is an entry for "MultiDisciplineIDSchema." This location is used for objects -such as zones - that are used by all disciplines.
- **User dictionary resources:** In the location field enter the name of the CATfct file for each application. You do not need to enter the location. The CATfct file is used to store all the classes and attributes created by you. The default names for CATfct files in each application are included in the sample project.xml file and you should use these names unless you have created a different CATfct file, or changed the default name. There is also a MultiDisciplineUserDictionary - this CATfct file can be referred to by all applications.
- **Zones catalog:** The zones that you create need to be stored in a catalog accessible to all users, because they are shared. The default location is CATMldZone.catalog. Even though zones are only created in schematic applications, other applications may use them when documents are moved from schematic to 3D. Enter a different name or location if you change them.
- **Discrete values:** Many attributes have discrete values and this directory is used to store them.
- **Schematic driven:** This is a flag that needs to be set for schematic driven routing and parts placement. If the value of "Location" is set to 0 then individual users can check or uncheck an option that allows schematic driven 3D design. If the value is set to 1 then the option "schematic driven" is always selected and users cannot uncheck it. *(In Equipment Arrangement, schematic driven parts placement is not possible if the Function Driven flag is set to 2.)*
- **Delete Part On Run:** This entry is used to control whether all parts on a run will be deleted when you delete the run. If you enter the value of "Location" as 1 then the parts will be deleted. If you enter the value 0 then the parts will not be deleted when you delete the run.
- **Graphic representations:** When you create graphic representations for a part you need a file in which to store the categories (single, double, etc.). That file is created within an application, as you will see later. There is also a file under Project Resources because the categories must be available to all applications. If you add a new category you must include it in this file too. Enter a new location and file name if you want to change them.
- **Penetration openings catalog:** The profiles of the holes you may want to make through walls and partitions to pass pipes and ducts are noted in this catalog. If you make a new profile you must enter it here too. Enter a new location and file name if you want to change them.
- **ID Sequence Number directory:** The IDSequenceNumbers directory contains the last sequence number that was generated for an object. You should specify a location for it.
- **Importer CATfcts:** This lists the location of your CATfct files, and is used when migrating V4 models to V5. If you change the location of the CATfct files you must enter the new location in the "Location" field. You do not need to do anything if you continue to use the default location.
- **Reference Grid System:** Location of the CATPart that contains the reference grid definition used by applications. You need to modify this entry if you change the location of the CATPart or rename it.
- **Discipline super class:** This is a text file that lists the object classes that will be visible in a class browser when you are in the Equipment Arrangement workbench. You can have files at project, discipline and application level. The filter will only work with a user-generated PRM file.
- **Computed attributes:** This entry shows the location of the ComputedAttributes.txt file. The computed attributes contained in this file will display in the Properties dialog box. You can change the location of this file, and update the PRM file accordingly. You can also change the entries in the file.
- **Unique reference part number options & partially resolved reference part number options:** These two entries define how a placed part will be named. 'Unique reference' parts are those that have at least one property (or all properties) that can have infinite values. An HVAC duct is an example. 'Partially resolved' parts are those in which the values of all properties are defined by a design table. Valves are an example. In this entry, if you enter 1 in the Location field then the name of the placed part will be derived from the design table. If you enter 2 then the name will be derived from the object naming rules.
- **Publication Based Connections:** This entry controls whether publication based connections will be used

when establishing connections between elements in different work packages. When this flag is on (the value in the Location field is 1), the system will use publication based link technology. This link technology is intended to improve support for configuration management, revision management and concurrent engineering. When working in an ENOVIA environment, publication based connections are used for all cross document connections, regardless of the setting of this resource.

5.The next level, as explained above, is the **Discipline** level. Resources placed under the **Discipline** category can be used by all the applications in that discipline.

The sample Project.xml file places the following resources at the Discipline level. Each entry names the file and gives its default location. If you intend to use different resources, which is likely, then you must enter the new file name and location, as appropriate. The following resources are referenced, but not all disciplines will have all of these resources.

- Specifications catalog
- Insulation specifications catalog
- Material specifications catalog
- Standards catalog
- Design rules: You need to use the default location and file name
- Parts catalog name and location: contains parametric parts
- Piping lines shared catalog: The file where shared piping lines are stored and its location.
- Sample data directory: This is the location where the reports you run will be stored.
- Report definitions directory: The formats (definitions) you create for running reports are stored in this directory.

6.In addition to resources placed at the Project and Discipline levels, resources are also placed at the **application** level and are only available to the application under which they are placed. **2-D applications** have all or most of the following resources.

- Component catalog: The parts catalog.
- Shared instrument lines catalog.
- Annotation catalog.
- Sample data directory: When you create graphic representations for a part you need a file in which to store the categories (open, closed, etc.). If you add a new category you must include it in this file too. Enter a new location and file name if you want to change them.
- Design rules for Equipment Arrangement: This is used when assigning a part type to a 2D part.
- The parts catalog for Equipment Arrangement: This is used when assigning a part type to a 2D part.

3-D applications will have most of the following resources or entries.

- Graphic representations file: When you create graphic representations for a part you need a file in which to store the categories (single, double, etc.). If you add a new category you must include it in this file too. Enter a new location and file name if you want to change them.
- Connector attributes file: This file lists the attributes that will be inherited (from the part) by a connector when you are placing it on a part. If you want to make changes to the attributes you want a connector to inherit you must do it in this file. Do not change the name of this file.
- Resolved parts: When you place a parametric part in a document it assumes specific dimensions. Once a part has specific dimensions it is placed in the Resolved Parts catalog. The location of the default Resolved Parts catalog is listed here.
- Design rules: You need to use the default location and file name.

- Parts catalog name and location: contains parametric parts
- Report definitions directory: The formats (definitions) you create for running reports are stored in this directory.
- Graphic 2D Symbols Catalog: For *Piping*, this is the catalog in which the 2-D equivalents of 3-D endstyles are stored. For *Equipment*, this catalog contains 2-D symbols for center of gravity. See Drawing Production for more information.
- Growth Factor: Some applications allow you to reserve space in some parts for future growth. You can, for instance, reserve space in a conduit for future growth. The space saved for future growth will be equal to the value you enter in the "Location" field. If you enter 0.2 it means that 20 percent of the space in a conduit will be reserved for future growth and you will only be allowed to use 80 percent of the space in it.
- Function Driven: This is a flag that controls parts placement in Equipment Arrangement. The value in the **Location** field dictates: 1 - Function driven equipment placement is possible; 2 - Only functionless equipment placement is possible. (*Schematic driven parts placement is not possible in Equipment Arrangement.*); 3 - Both function driven and functionless equipment placement are possible (a final Tools - Options setting is needed. See Functionless Parts Placement in Equipment Arrangement documentation.)
- Hanger Cable Clearance: The value in the Location field is the cable clearance, in millimeters. This value plus the diameter of the cable you are routing must be less than the tier spacing of the hanger. The cable clearance value is assigned when a hanger is placed.
- HVAC Up Direction: The value in the Location field determines the 'Up' direction of a part that is placed on a run. There are two numerals in this field - the first dictates the up direction for a part placed on a horizontal run, the second is for a vertical run. Thus, if the value is 00, the Up direction will be the same for both horizontal and vertical runs. The values are: 0 - follow the run's Up Direction; 1 - Up direction will follow the X axis; 2 - follow Y axis; 3 - follow Z axis.

7.The AEC Migration Discipline refers to a product that enables you to migrate V4 models to V5. It has Piping Design, Piping and Instrumentation Diagrams, Equipment Arrangement, Tubing Design and HVAC Design resources under it.

Most resources have been described above and do not need further explanation. Enter the location and file names if they are different from those in the sample Project.xml file.

In addition, under the heading AEC V4 V5 Migration there are several options you should know about. They are explained below.

AEC V4 V5 Migration

There are several options that you need to set to True or False. The first several are about migrating data to Piping and Instrumentation Diagrams, Piping Design, Equipment Arrangement, Tubing Design and HVAC Design and Structures. If a V4 model has data of all these types, but you have set two of them to False, then you will only receive V5 data relating to the applications set to True. If you want data of all types to be migrated then you must set all the options to True.

Other options are:

- Create runs without parts: If set to True a run will be migrated without the parts.
- ImportPipingLine (or other type of line): If set to True a line will be created in the V5 Piping Line catalog if it does not exist. When set to False, the migration process will stop if the line does not exist in V5.
- Mapping Table: You need to enter the location and name of the migration mapping table if you change the default name or location.
- MigratedPIDNoShowSheetFormat: The sheet format (also known as title block) will not be visible if the value of "Location" is set to False.
- MigrateXXXWithMissingLines: If set to True the sheet will be migrated even if some Lines cannot be. If set

to False the migration process will stop if missing lines are encountered.

- MigratedXXXSheetSize: Enter the size in the Location field: Letter, Legal, A0, ISO/A1, ISO/A2, ISO/A3, ISO/A4, ISO/A, ANSI/B, ANSI/C, ANSI/D, ANSI/E, ANSI/F, ANSI).

8.In addition to some of the resources explained above, the **Structure Discipline** includes the following resources or entries:

- Sections catalog: If you change the default location of the AISC_BigScale catalog then enter the location in this entry. The location should include the directory AISC in which the catalog should reside, so that the path reads:AISC\AISC_BigScale.catalog.
- Structure sections path: The path of the directory in which the available sections are stored. The default location is ...startup\components\StructuralCatalogs\ModelsResolved.
- Structure Thickness List: This is the location of the thickness list sample file, which contains the list of thicknesses that can be applied to a plate.
- Structure openings catalog: Location of the openings parts catalog.
- Structure materials catalog: Location of the structure materials catalog.
- Structure detail design: Location of the catalog that contains user defined features.
- Naming section characteristics: Location of the NLS file that lists names of sections whose names should *not* be changed. This is for internal use. Do not change anything in this entry.
- Structure Functional Connections Catalog: Location of the Structure Functional Connections Catalog. This catalog contains the names of connection types between objects.
- Project Bounding Box: This specifies the dimensions of your project - if you are designing a ship then it will be set within these dimensions. You can define the unit used for measuring - the default is millimeter - and change the default values for each direction. The values are measured from the origin (000).

9.Make sure to save your changes.



About the Feature Dictionary



The feature dictionary manages object classes. In the sample dictionary provided with the application, four object classes are managed: plating, inserting, rolled section grouping stiffening and beaming, and opening.


Note: In the application, these object classes are managed via the class browser.

To view the sample dictionary:

1. Open the CATStructureDetailDesignSample.CATfct file.


By default, this file is located in the install_folder under /resources/graphic.

The Feature Dictionary Editor opens showing the sample dictionary.

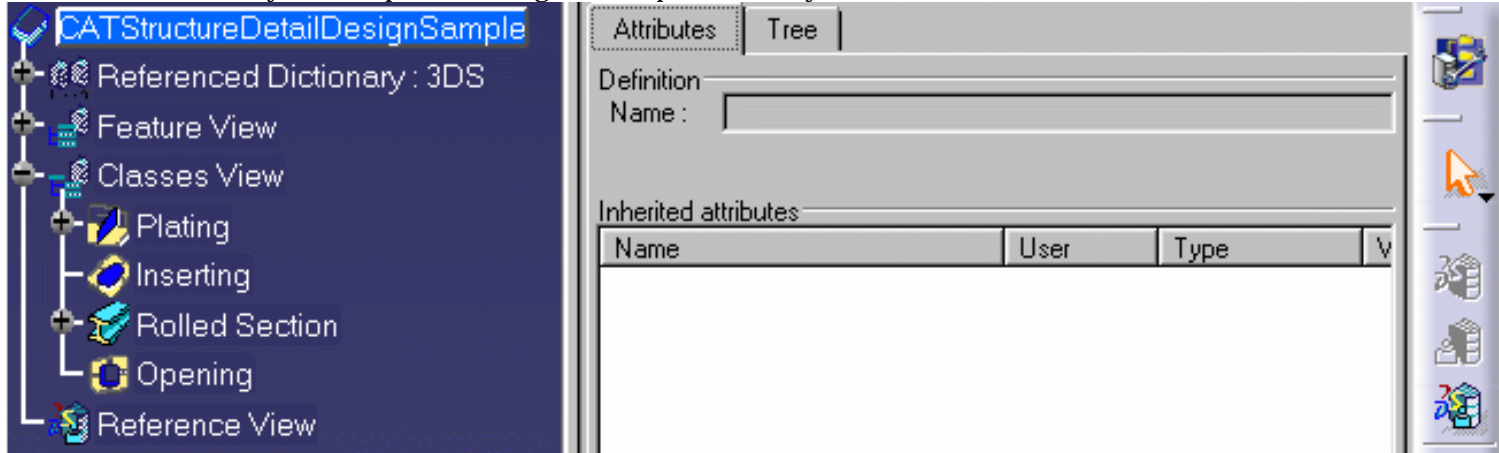

The Classes View displays all the classes available in the document, i.e. the predefined classes included in the application.

2. Expand the Classes View to display predefined classes.

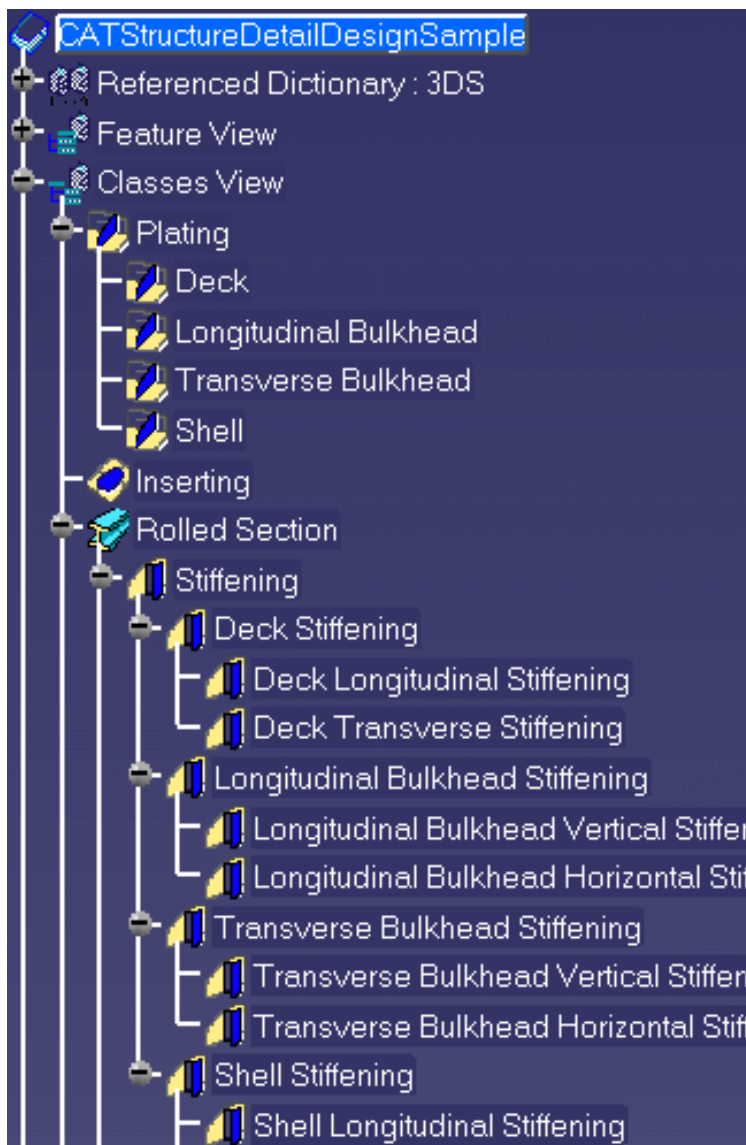

You can add sub-classes and attributes to the sample dictionary, or if you want, you can create a new feature dictionary.

For more information, see [Using the Feature Dictionary Editor](#) in the *Infrastructure User's Guide*.



About Object Naming Rules



Ship Structure Detail Design provides a set of default naming rules or unique identifiers for the objects you create. This identifier consists of a prefix that identifies the type of object it is, followed by a unique number.

You may want to modify these rules to suit your own requirements:

- For objects such as plating, stiffening, beaming, etc. integrated in the [feature dictionary](#), use the Define/Modify ID Schema command in the Feature Dictionary Editor application.
- For all other objects, you must edit XML files directly.
By default, sample XML files are located in the [install_folder](#) under [startup/EquipmentAndSystems/StructureDetailDesign/DataDictionary](#).



Modifying or defining object naming rules is typically performed by an administrator.



For more information, see [Modifying the Object Naming Rules](#) in the *Infrastructure User's Guide*.



More About Catalog Slots, Endcuts & Small Assemblies

Catalog slots, endcuts and small assemblies are managed by an administrator. Typically this involves enriching and updating the sample catalog of industry-specific features provided with the product. This is the catalog users access when placing features on physical plates and shapes and creating small assemblies.

[Creating Catalog Slots](#)

[Creating Catalog Endcuts](#)

[Creating Catalog Small Assemblies](#)

[Storing Slots, Endcuts and Small Assemblies in a Catalog](#)

[Rules and Recommendations](#)

More About Openings

[Defining Positioning Strategies for Openings](#)

[Defining Parametric Contours for Openings](#)

[Openings Catalog](#)

Defining Positioning Strategies for Openings




This task explains how to create a positioning strategy for openings. This is usually done by an administrator.


To customize the positioning of openings, the administrator can add his own positioning strategies to the sample catalog supplied with the product.

Positioning strategies are **user features** defined as follows.

Basically, user features can take any kind of geometry as input but must return the following outputs:

- 3 perpendicular planes representing an axis system named: Support, Plane_Normal_To_H and Plane_Normal_To_V
- 1 Axis named Axis representing the intersection of Plane_Normal_To_H and Plane_Normal_To_V.

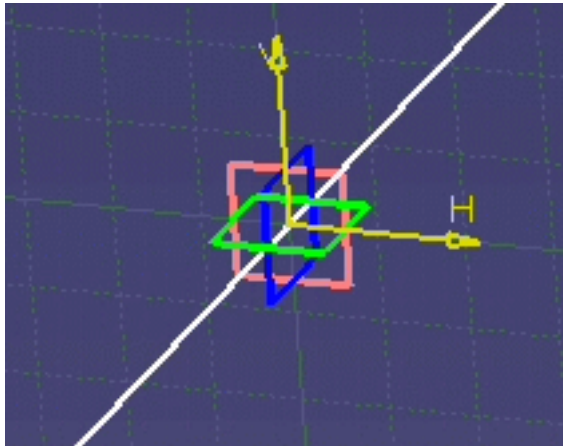


Note: The outputs of the positioning strategy are used to position sketches and the user feature contour when in the **Opening** command .




This task is based on a strategy using 1 support, 2 reference planes and 2 offsets.




1. Open a new CATPart in the Wireframe and Surface Design workbench and insert two empty openbodies named Inputs and Outputs.

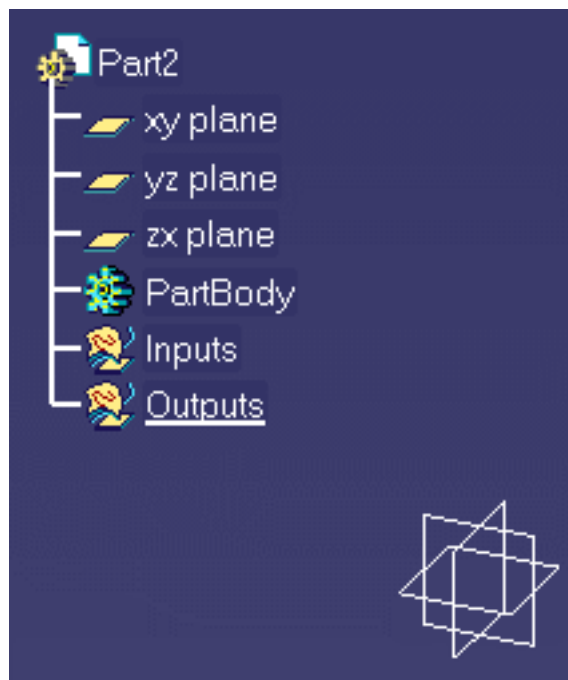

2. Define your input data in the first openbody. For this, we need 1 support and 2 reference planes.

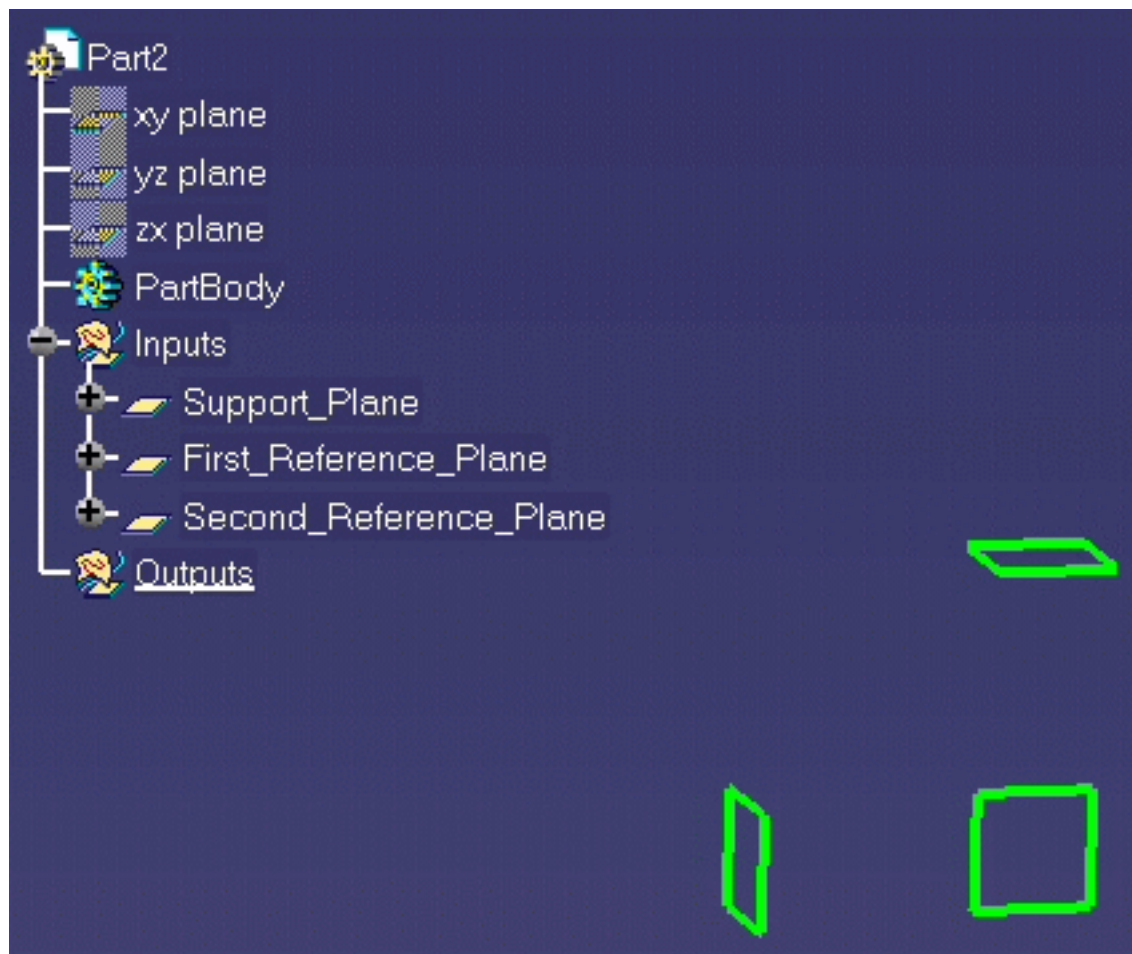


3. Define the output data :
- 1 Support (zero offset from the Support_Plane)
 - 1 Plane_Normal_To_H (at an offset from the First_Reference_Plane)
 - 1 Plane_Normal_To_V (at an offset from the Second_Reference_Plane)
 - 1 Axis (intersection of Plane_Normal_To_H and Plane_Normal_To_V)

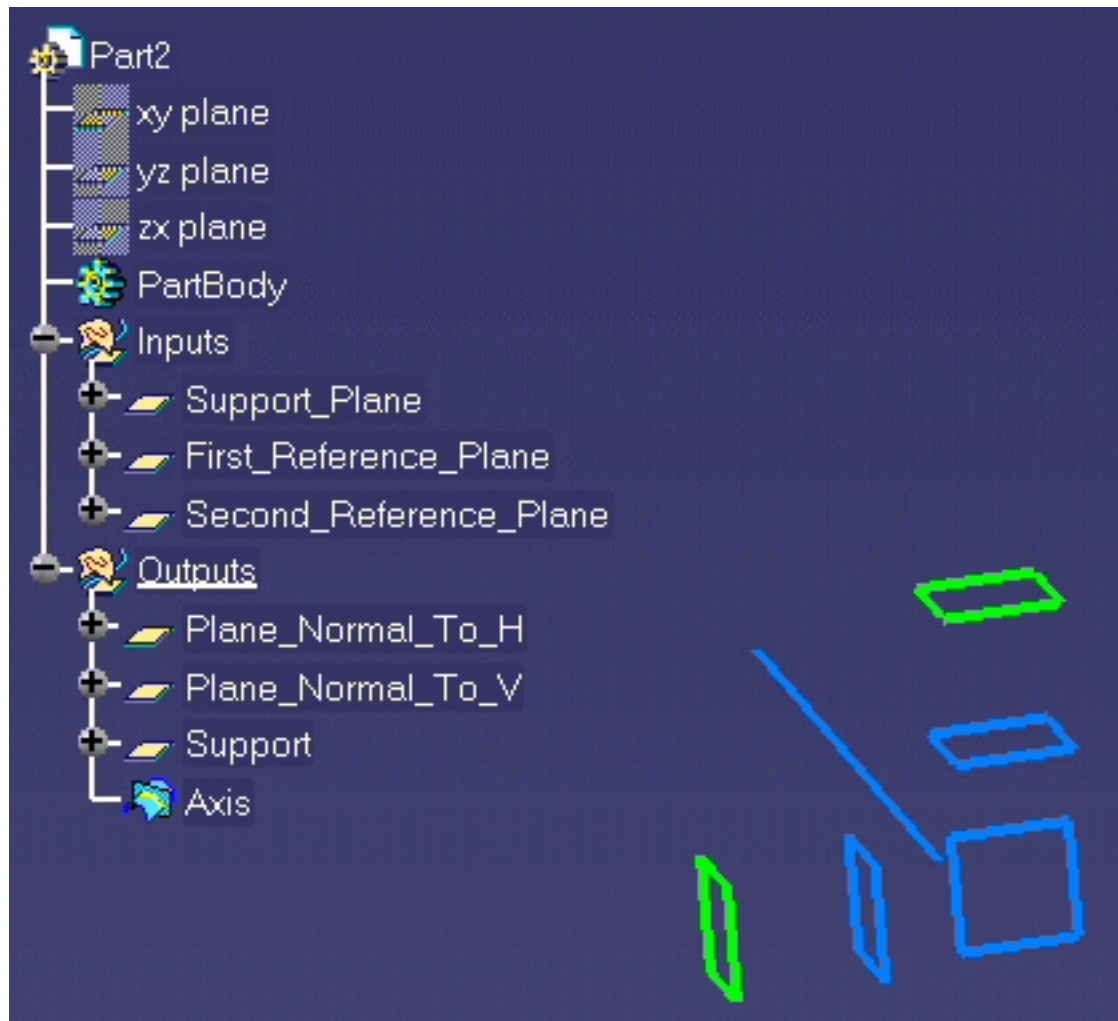


4. Select **Insert -> UserFeature -> UserFeature Creation...**


The Userfeature Definition dialog box opens.

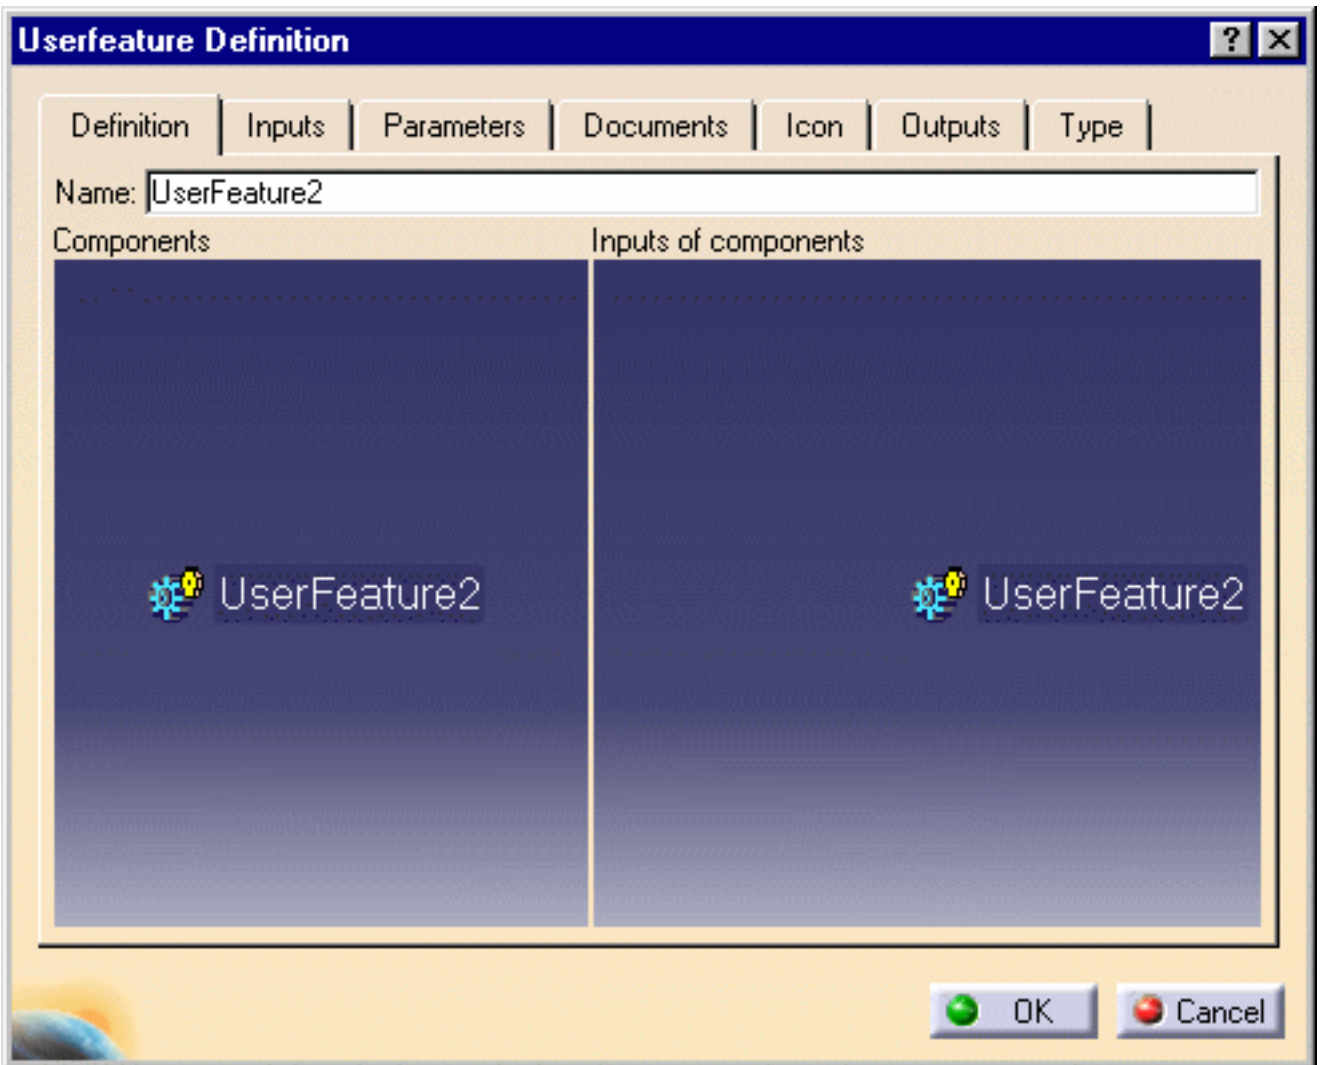


- Give the user feature a meaningful name
- Select the Outputs openbody.
In most of cases, the system should automatically retrieve the inputs defined in the Inputs openbody. If this is not the case select components in the Inputs of components column.

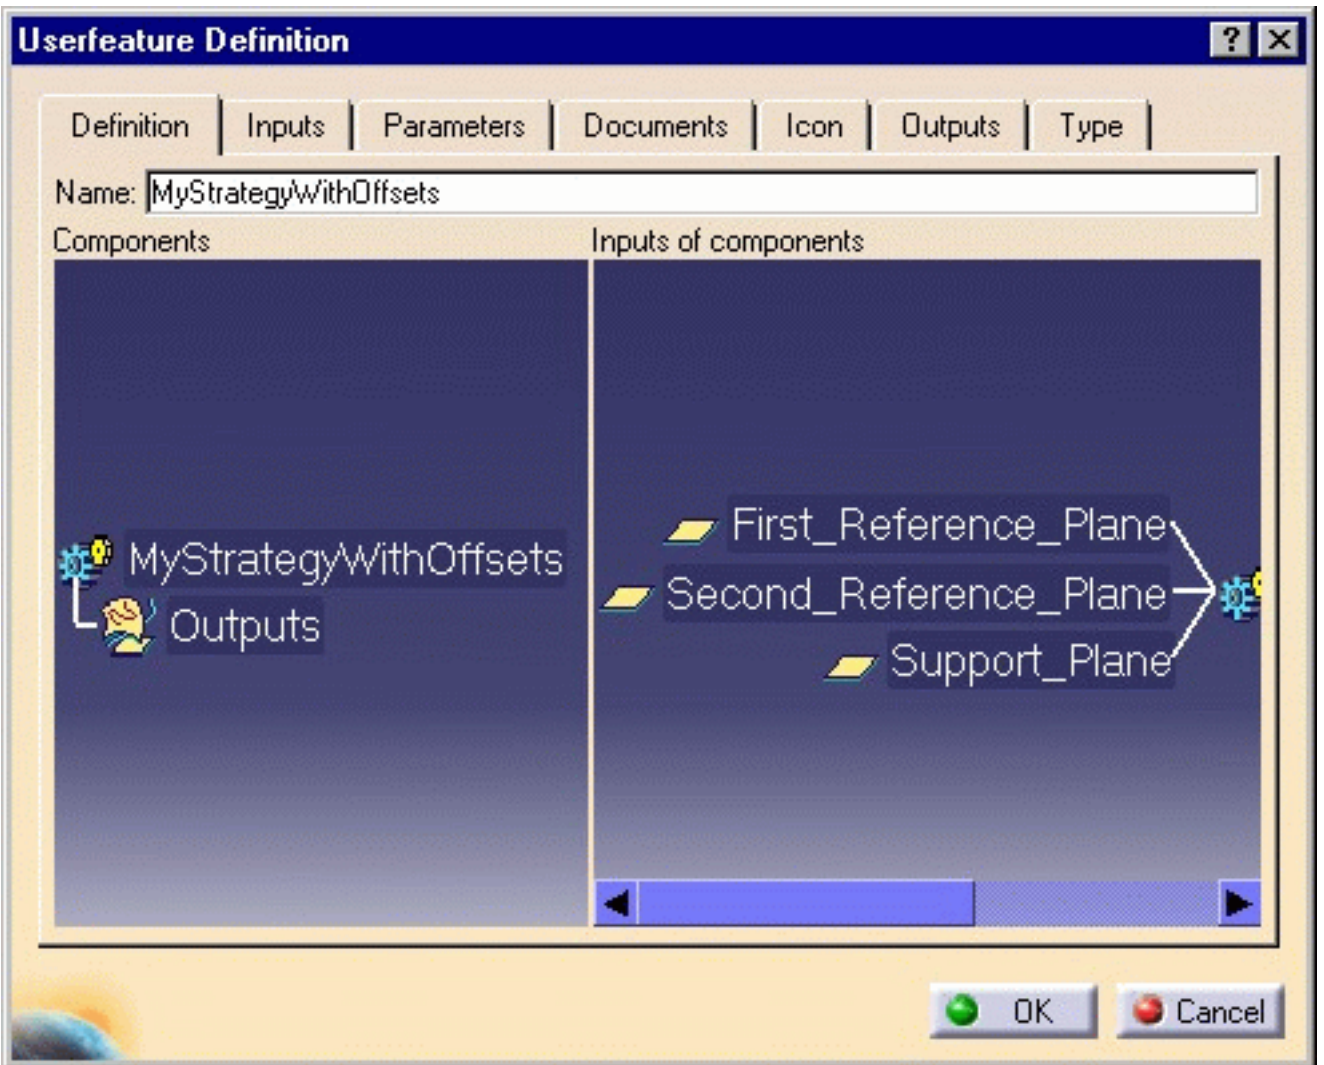

5. Select parameters to publish :
- First_Offset (offset between First_Reference_Plane and Plane_Normal_To_H)
 - Second_Offset (offset between Second_Reference_Plane and Plane_Normal_To_V)

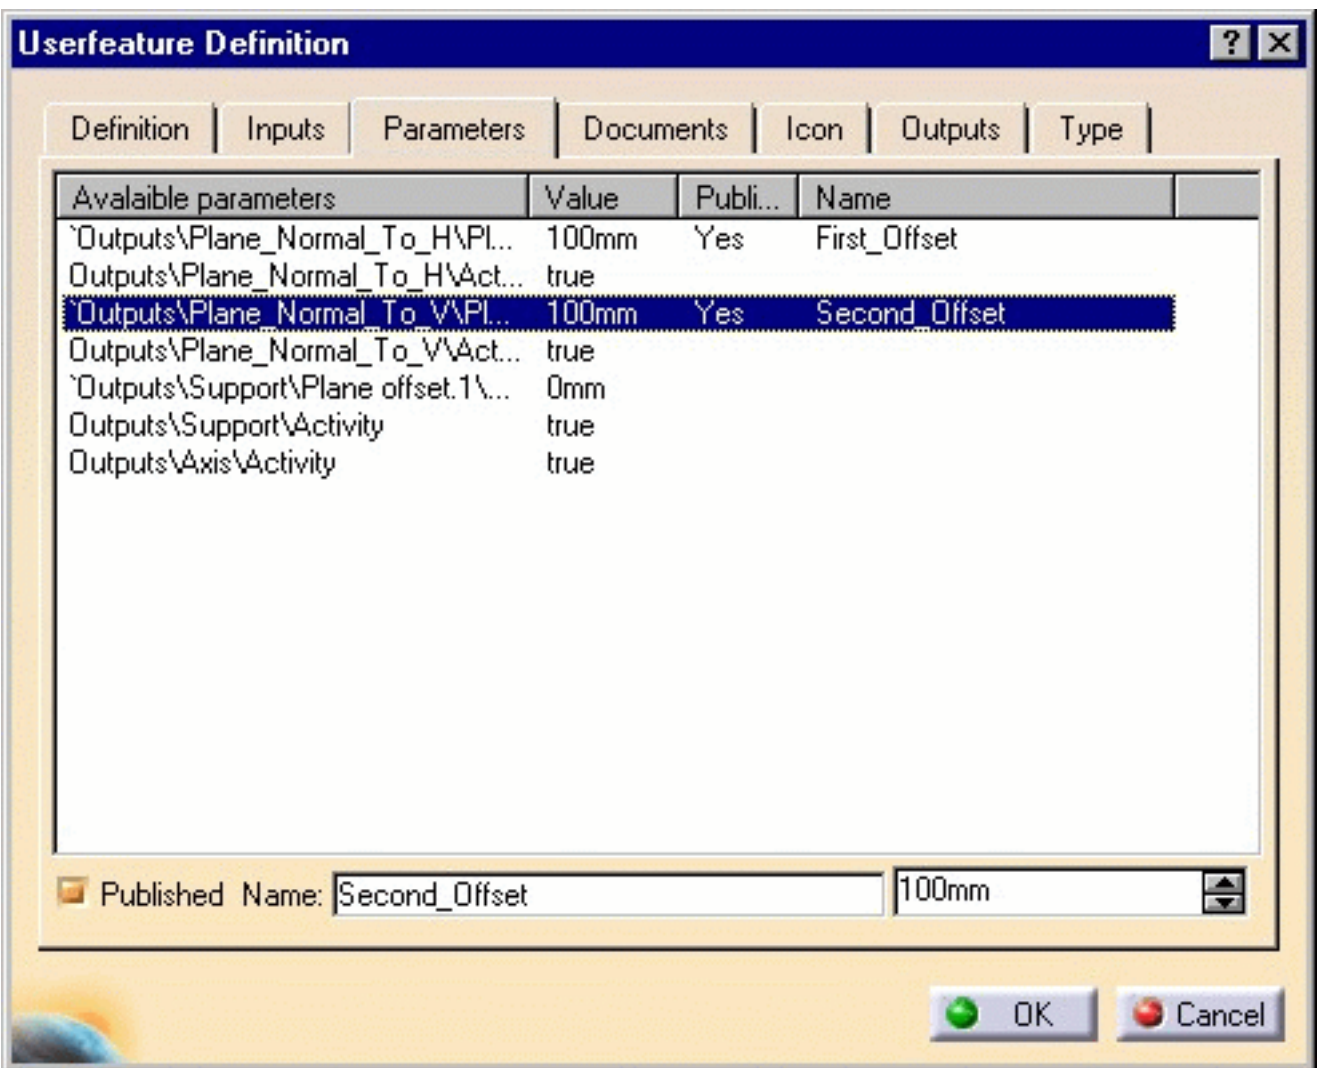


6. Select the four output elements:

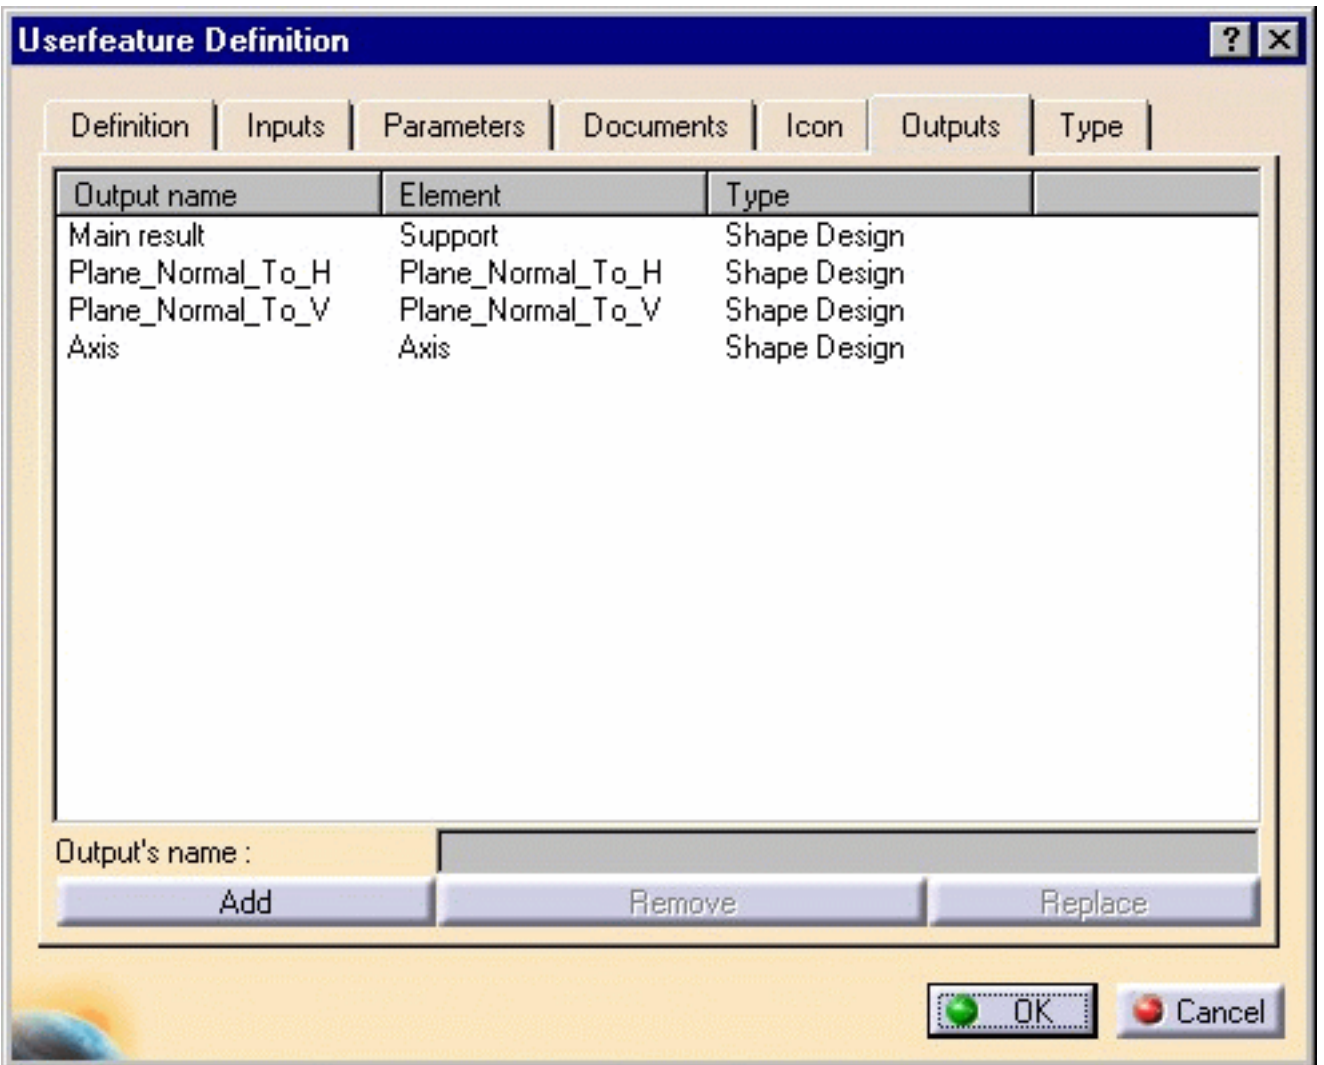

7. Click **OK** when done.

The user feature is created under the Knowledge Templates entry in the specification tree.

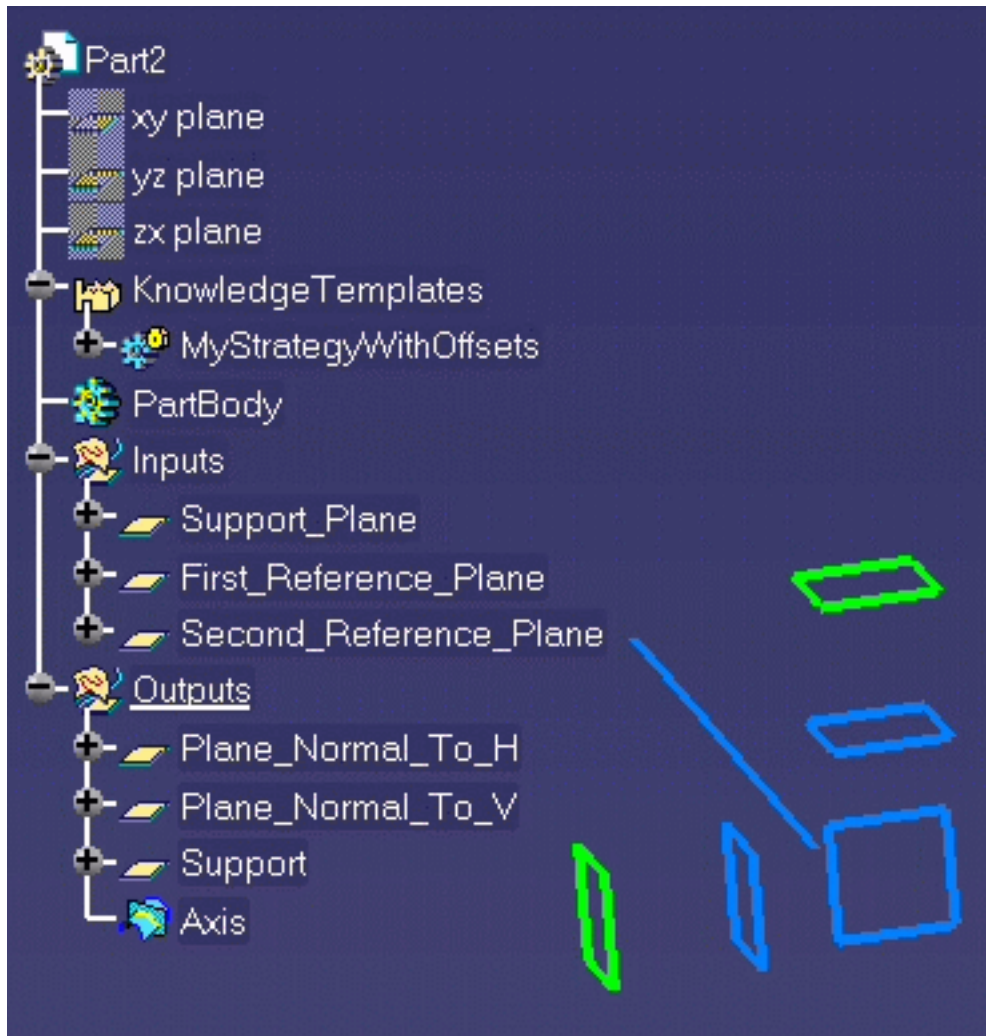

8. Save the document.
9. Store the user feature in the sample [catalog](#) **SddOpenings.catalog**.



Defining Parametric Contours for Openings




This task explains how to create a parametric contour for openings. This is usually done by an administrator.

This involves creating a **user feature** based on a parametric sketch which takes 3 planes as input. The sketch is constrained in position by the 3 planes.




1. Open a new CATPart and create your parametric sketch.

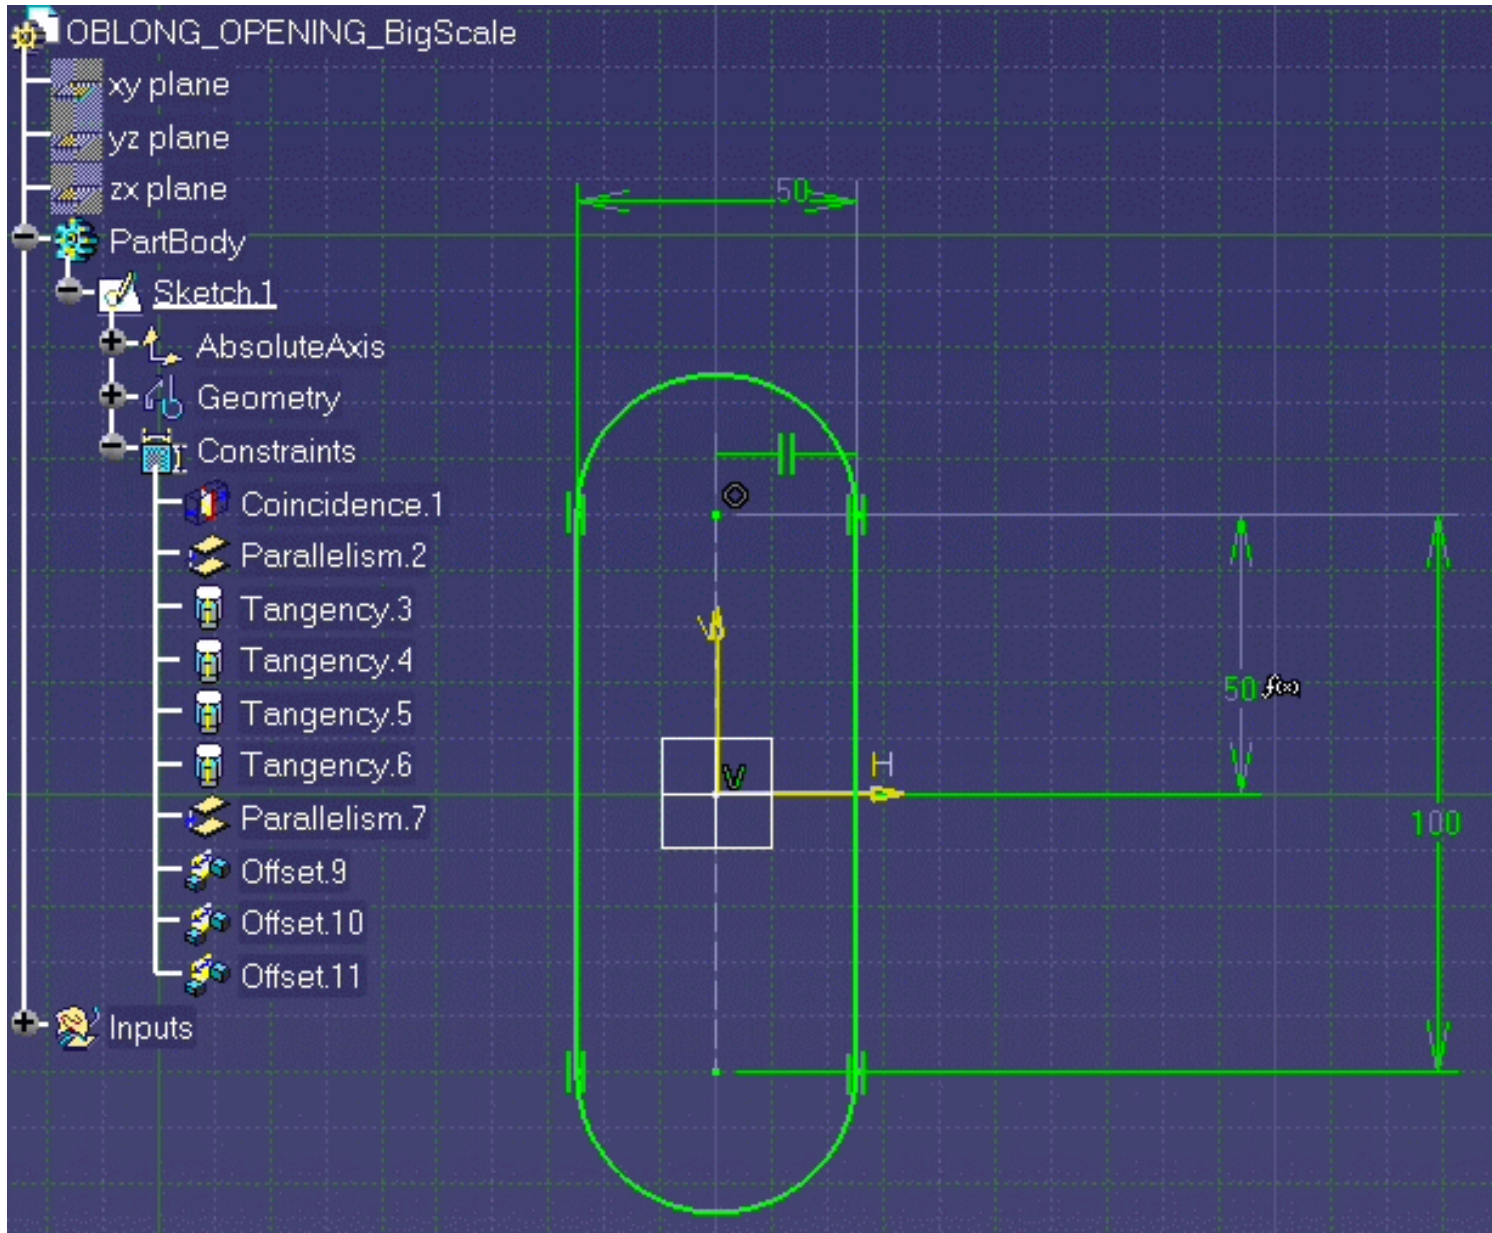


2. Insert a new body (**Insert -> Open Body**) named Inputs and create 3 planes and 1 axis under this openbody:

- 3 perpendicular planes representing an axis system named: Support, Plane_Normal_To_H and Plane_Normal_To_V
- 1 axis named Axis representing the intersection of Plane_Normal_To_H and Plane_Normal_To_V.

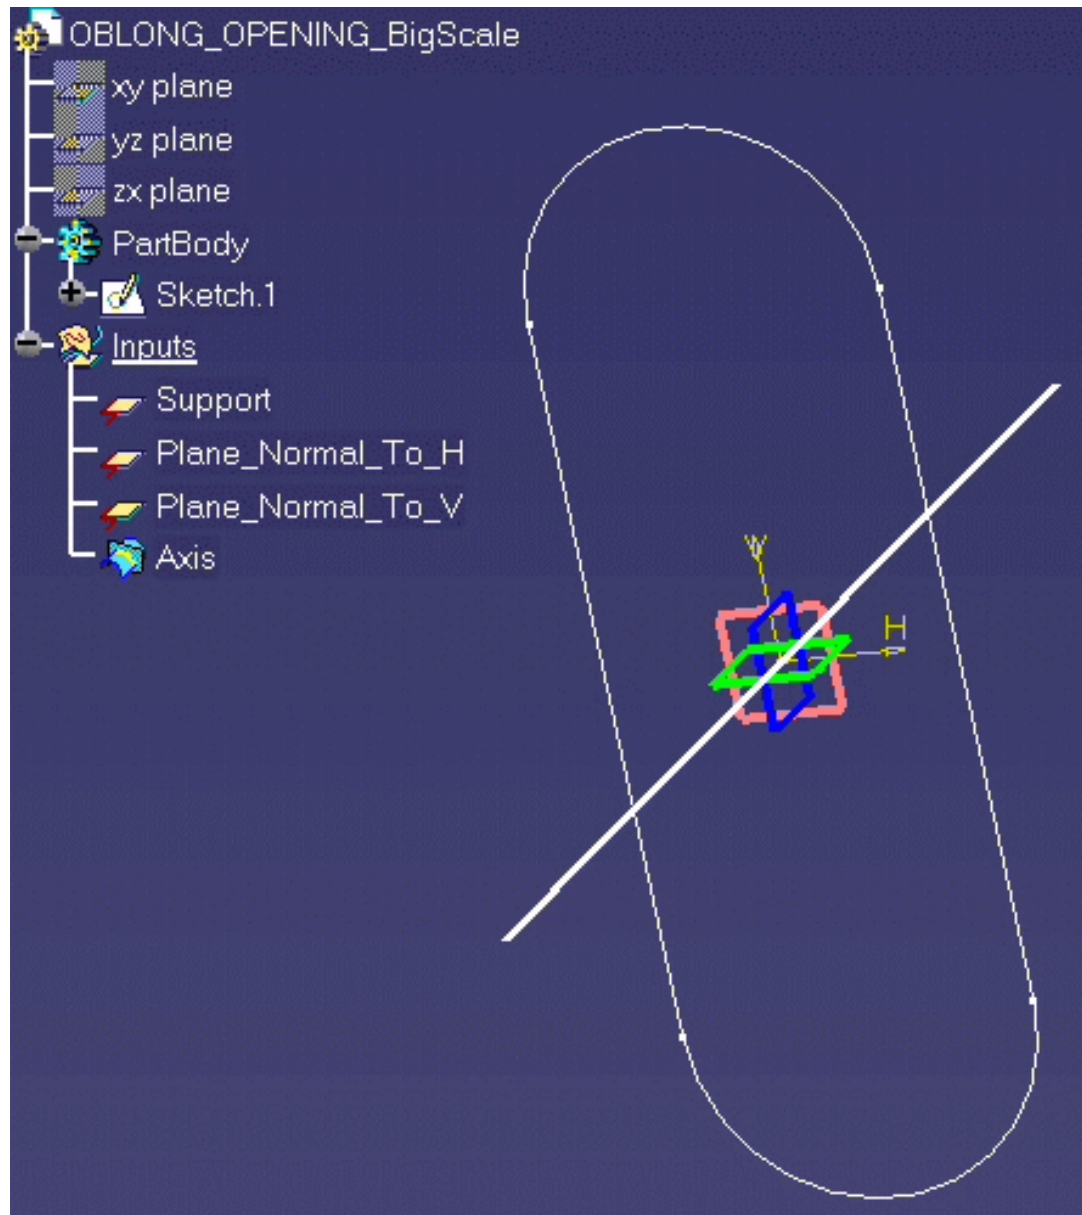


3. Constrain the sketch: right-click the sketch and select Change Sketch Support from the contextual menu.

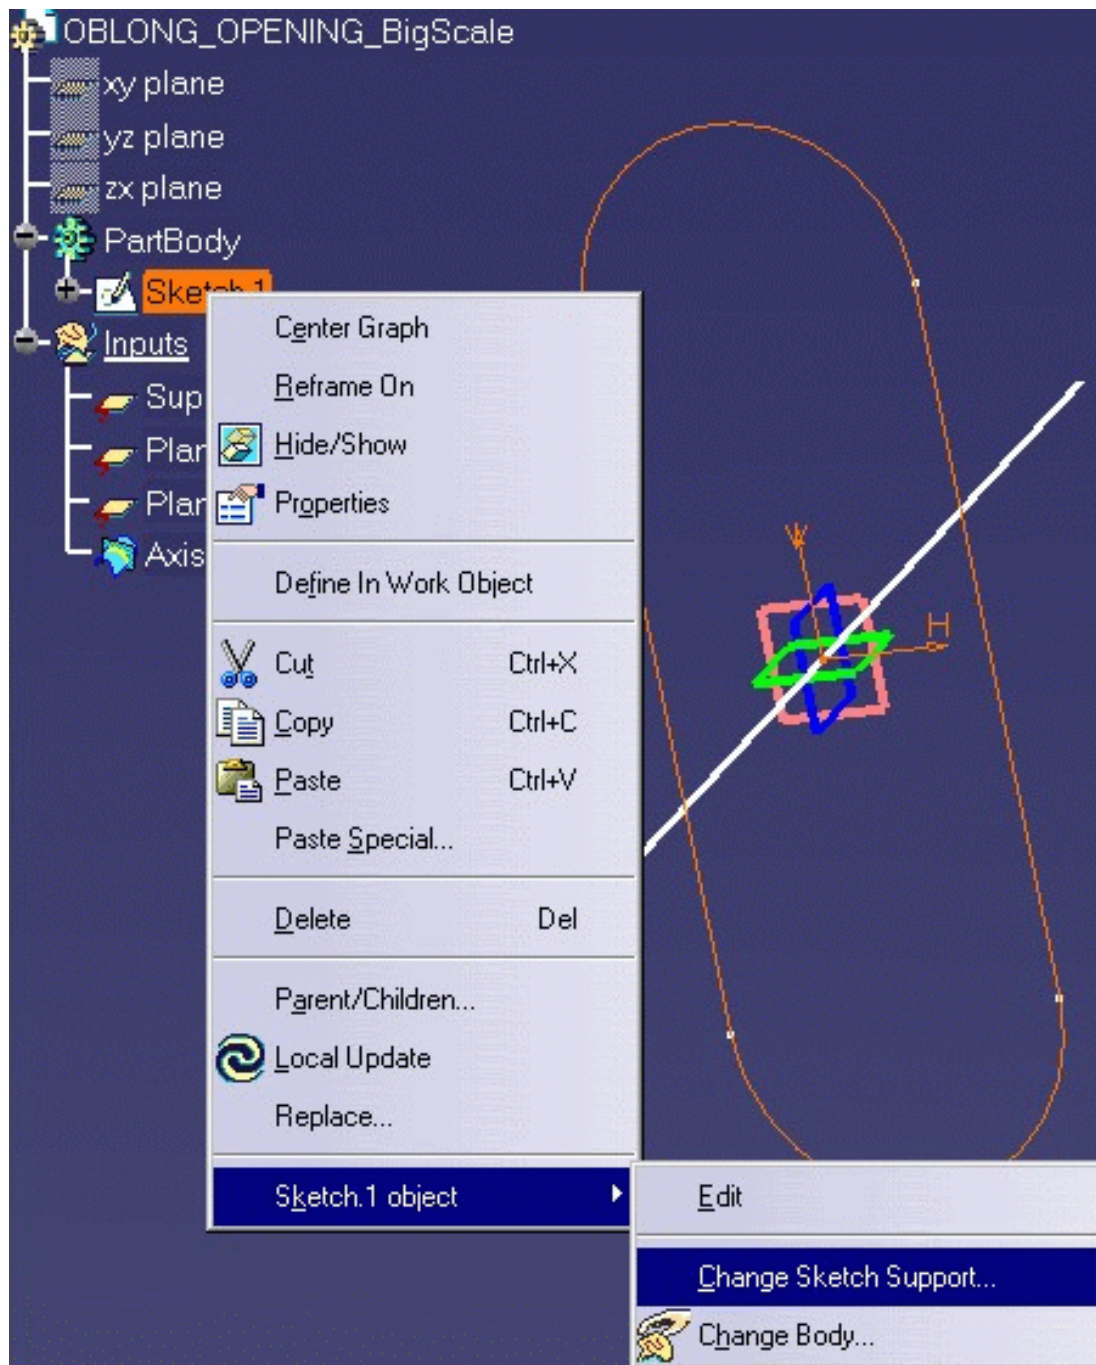


The Sketch Positioning dialog opens.

4. Complete the dialog as follows and click **OK** when done.

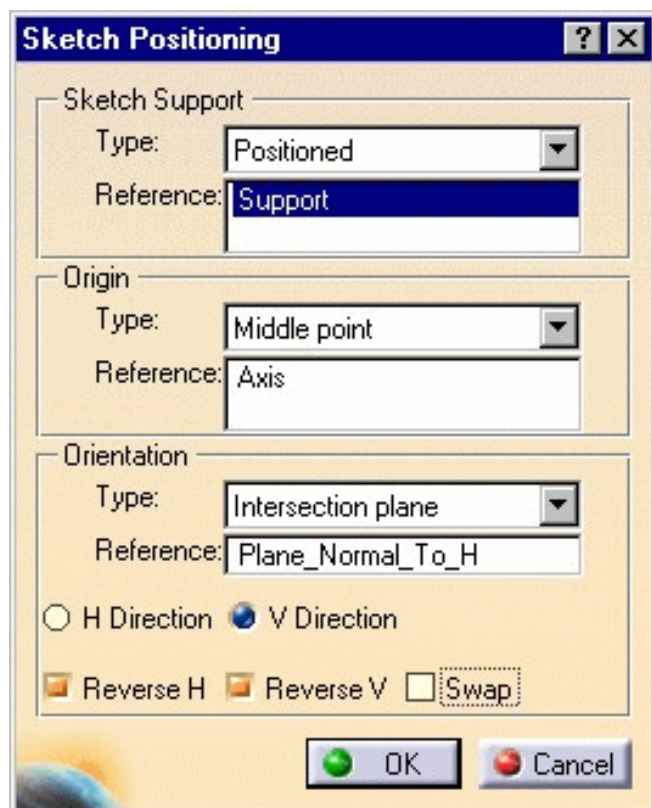


5. Select **Insert -> UserFeature -> UserFeature Creation...**


The Userfeature Definition dialog box opens

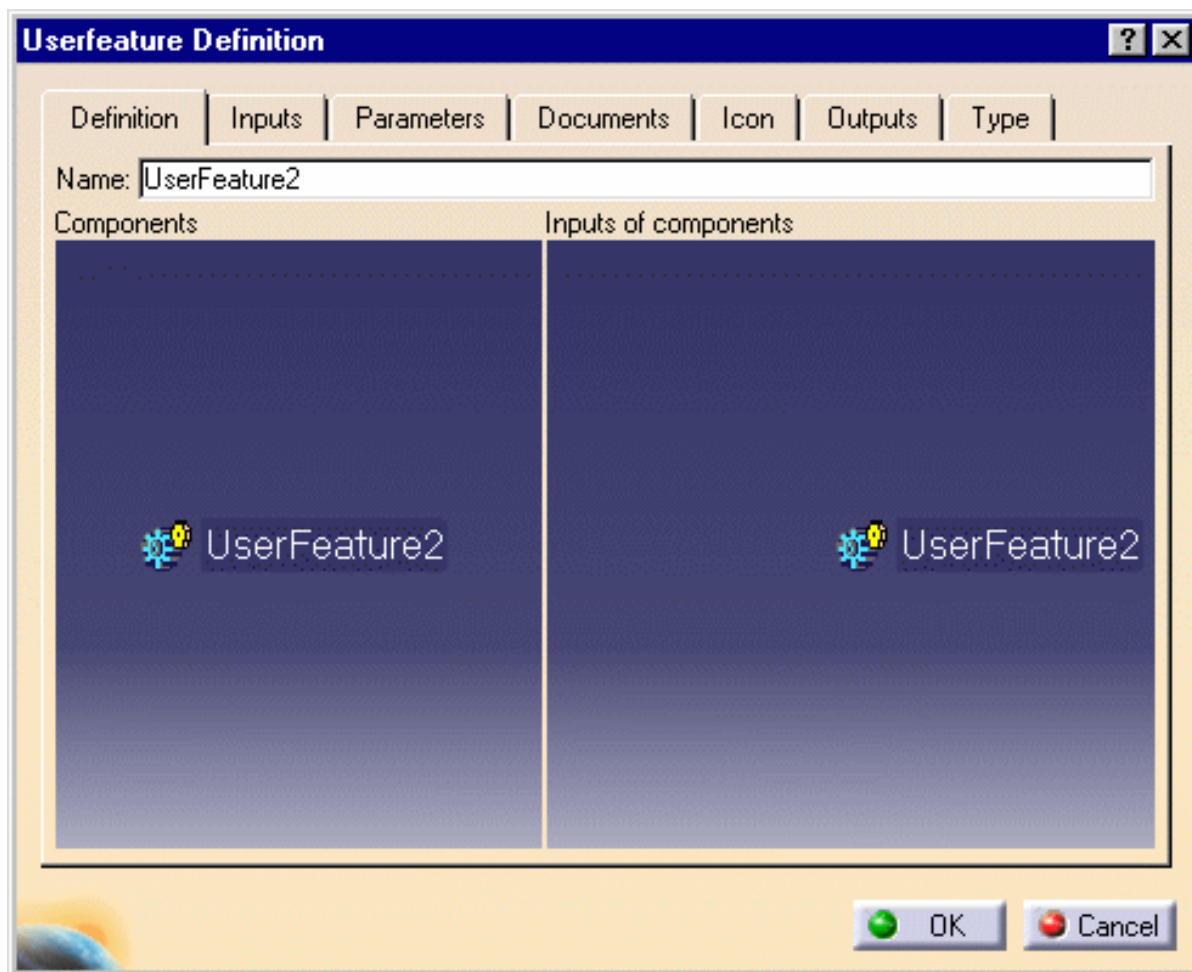

- Give the user feature a meaningful name.
- Select the sketch.
In most of cases, the system should automatically retrieve the inputs defined in the Inputs openbody. If this is not the case, double-click on Axis in the Inputs of components column to keep the 3 planes only.

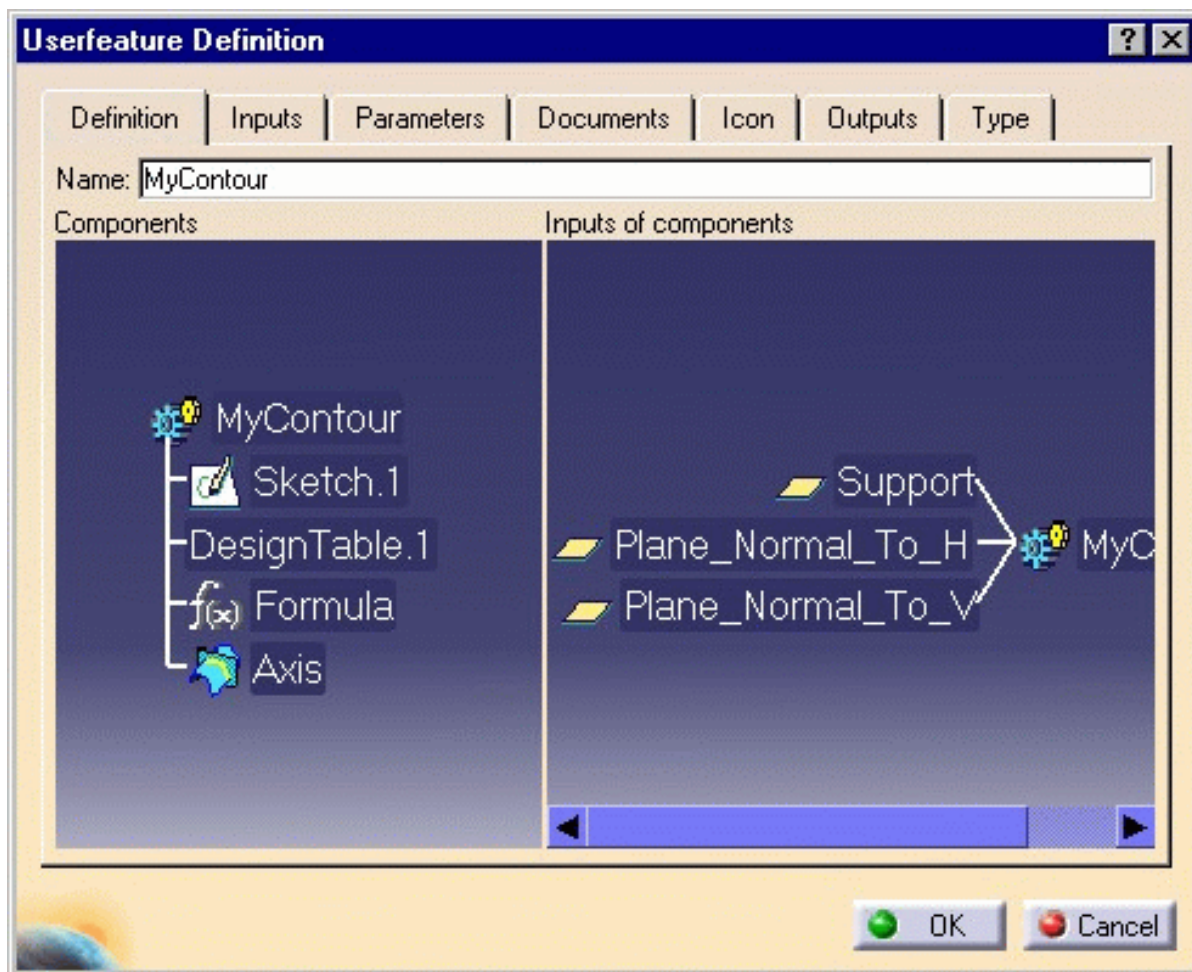


6. If you have defined a design table associated to your sketch then select the Parameters tab and publish the configuration.

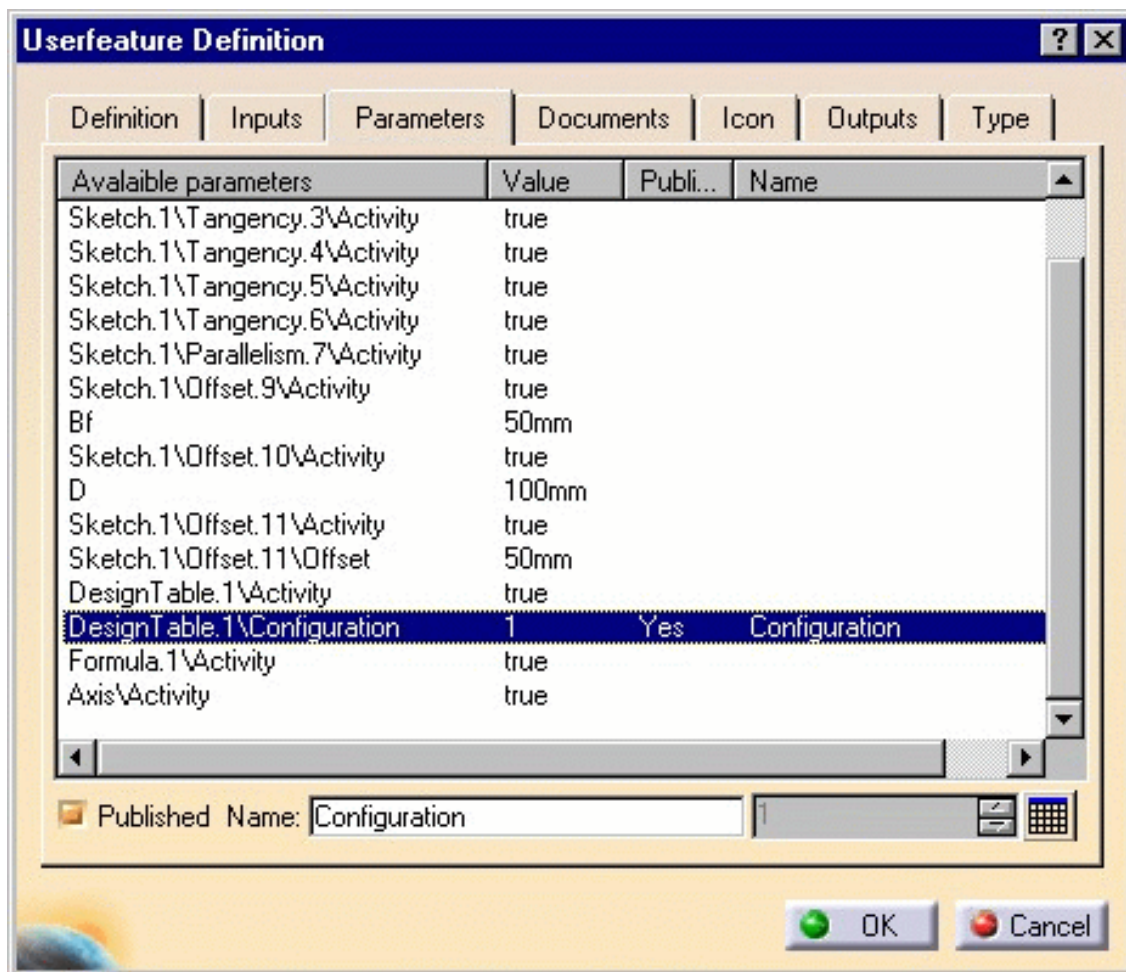

7. Click **OK** when done.

The user feature is created under the Knowledge Templates entry in the specification tree.

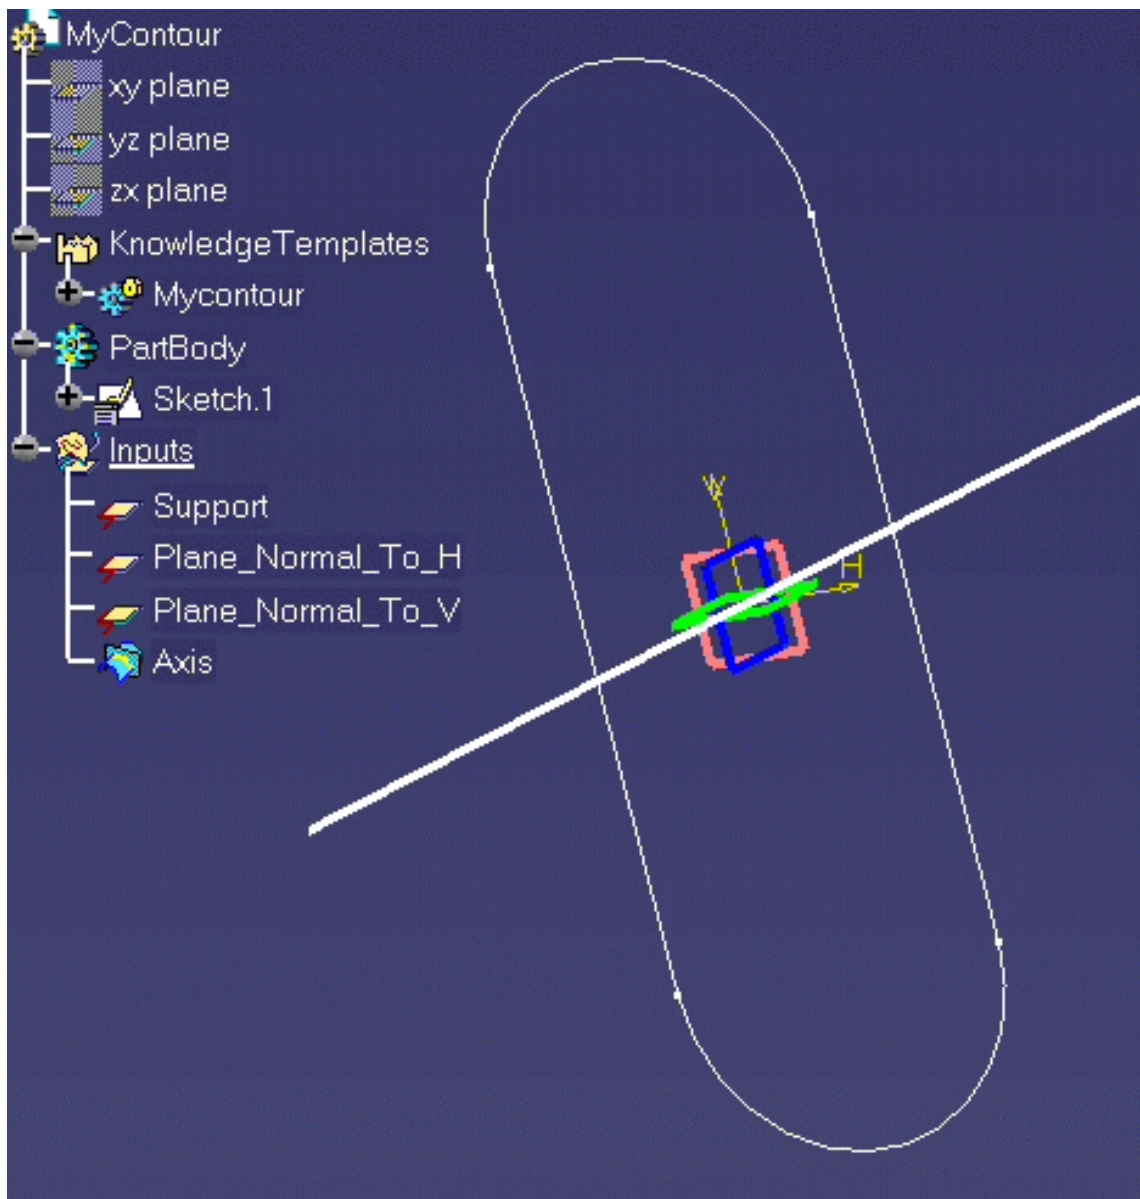

8. Save the document.

9. Store the user feature in the sample [catalog](#) **SddOpenings.catalog**.



Openings Catalog



A sample catalog, **SddOpenings.catalog** of positioning strategies and parametric contours is provided with the product. By default, this catalog which is managed as a **project resource** is located in folder `...\OS\startup\EquipmentAndSystems\StructureDetailDesign\FeatureCatalogs\Parametric\Openings`.




Enriching and updating the sample catalog is recommended. This is usually done by an administrator.



1. Open the sample catalog **SddOpenings.catalog**.

The Catalog Editor workbench opens showing the contents of the sample catalog.

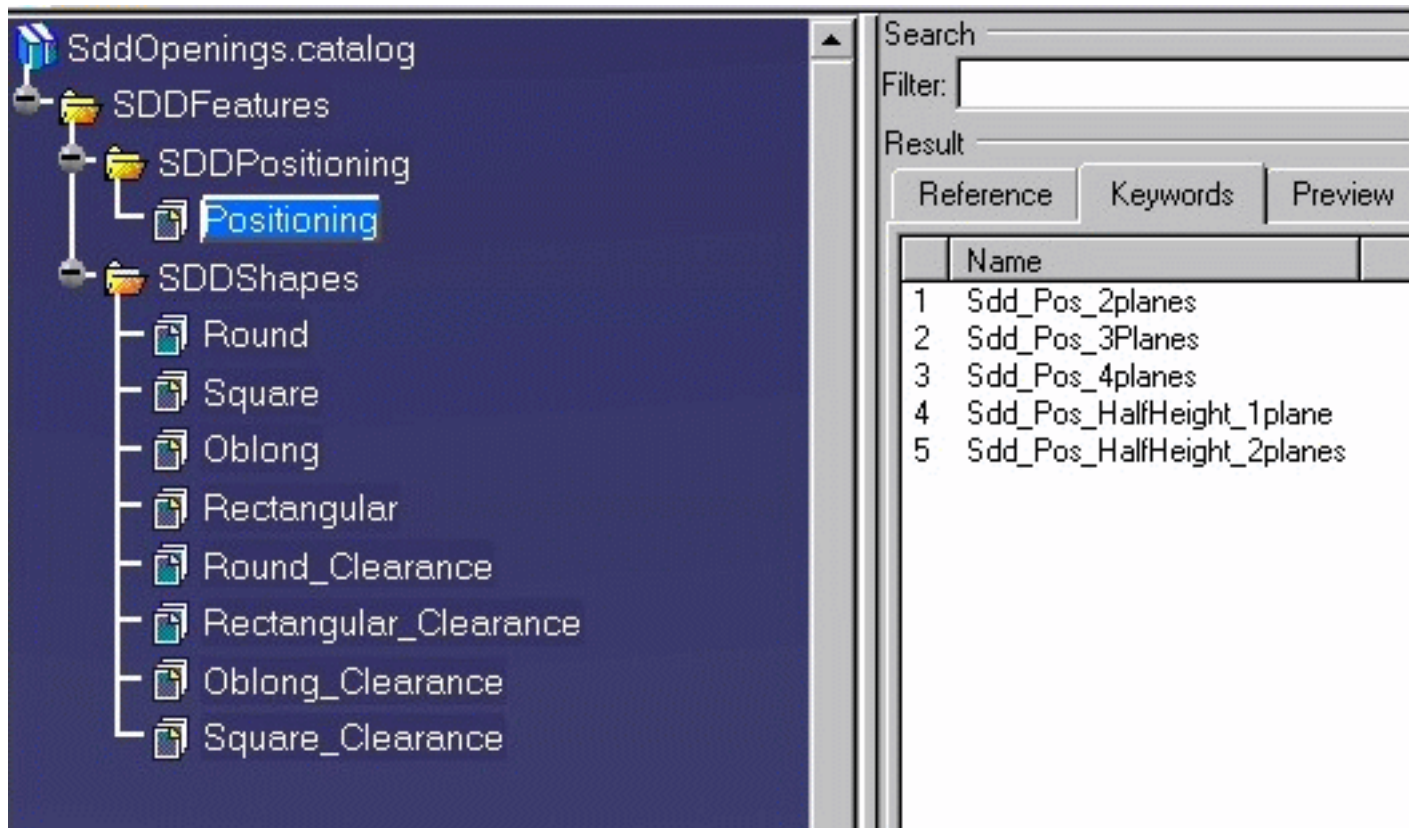

2. If necessary, expand the chapters to view their contents.

Two chapters have been defined: SddPositioning and SddShapes. Each chapter corresponds to a folder containing the associated features.



It is important to respect the tree structure and to add your new positioning strategy in the positioning family and to add your new family contour in the SDDShapes folder.




Structure Detail Design Package in Knowledge Expert



A Ship Structure Detail Design package is supported by Knowledge Expert. This package can be accessed via the object browser and objects, attributes and methods in the package used in expert relations. This package contains the following main objects:

- CATSddBeaming
- CATSddInserting
- CATSddOpening
- CATSddPaneling
- CATSddPlating
- CATSddStiffening
- CATSddStiffeningOnFreeEdge
- CATStrJointExt

All other objects listed in the browser derive from the above main objects, for example DeckPlate derives from CATSddPlating. These objects or sub-classes are managed in the [sample feature dictionary](#).

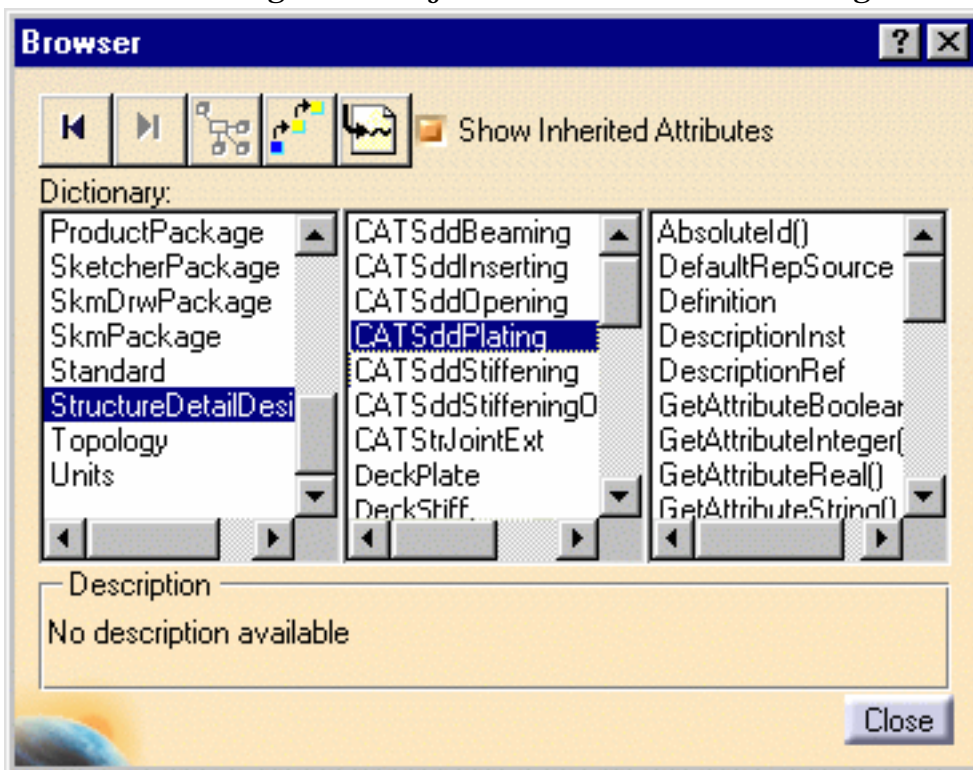

For information on object attributes and methods, see Ship Structure Detail Design in the Reference Information section of the *Knowledge Expert User's Guide*.



Interoperability with ENOVIA LCA

The ENOVIA product line provides the PDM component of the overall solution. With ENOVIA LCA, users can effectively manage the entire product life cycle of their data, including data management, work flow management, people and organization management, and many other aspects of their product and business.


Please refer to ENOVIA documentation for more detailed information on specific ENOVIA usage and functionality.

[Optimal CATIA PLM Usability
Recommended Methodology](#)

Workbench Description

The Ship Structure Detail Design Version 5 application window looks like this:

Click the hotspots to see related documentation.

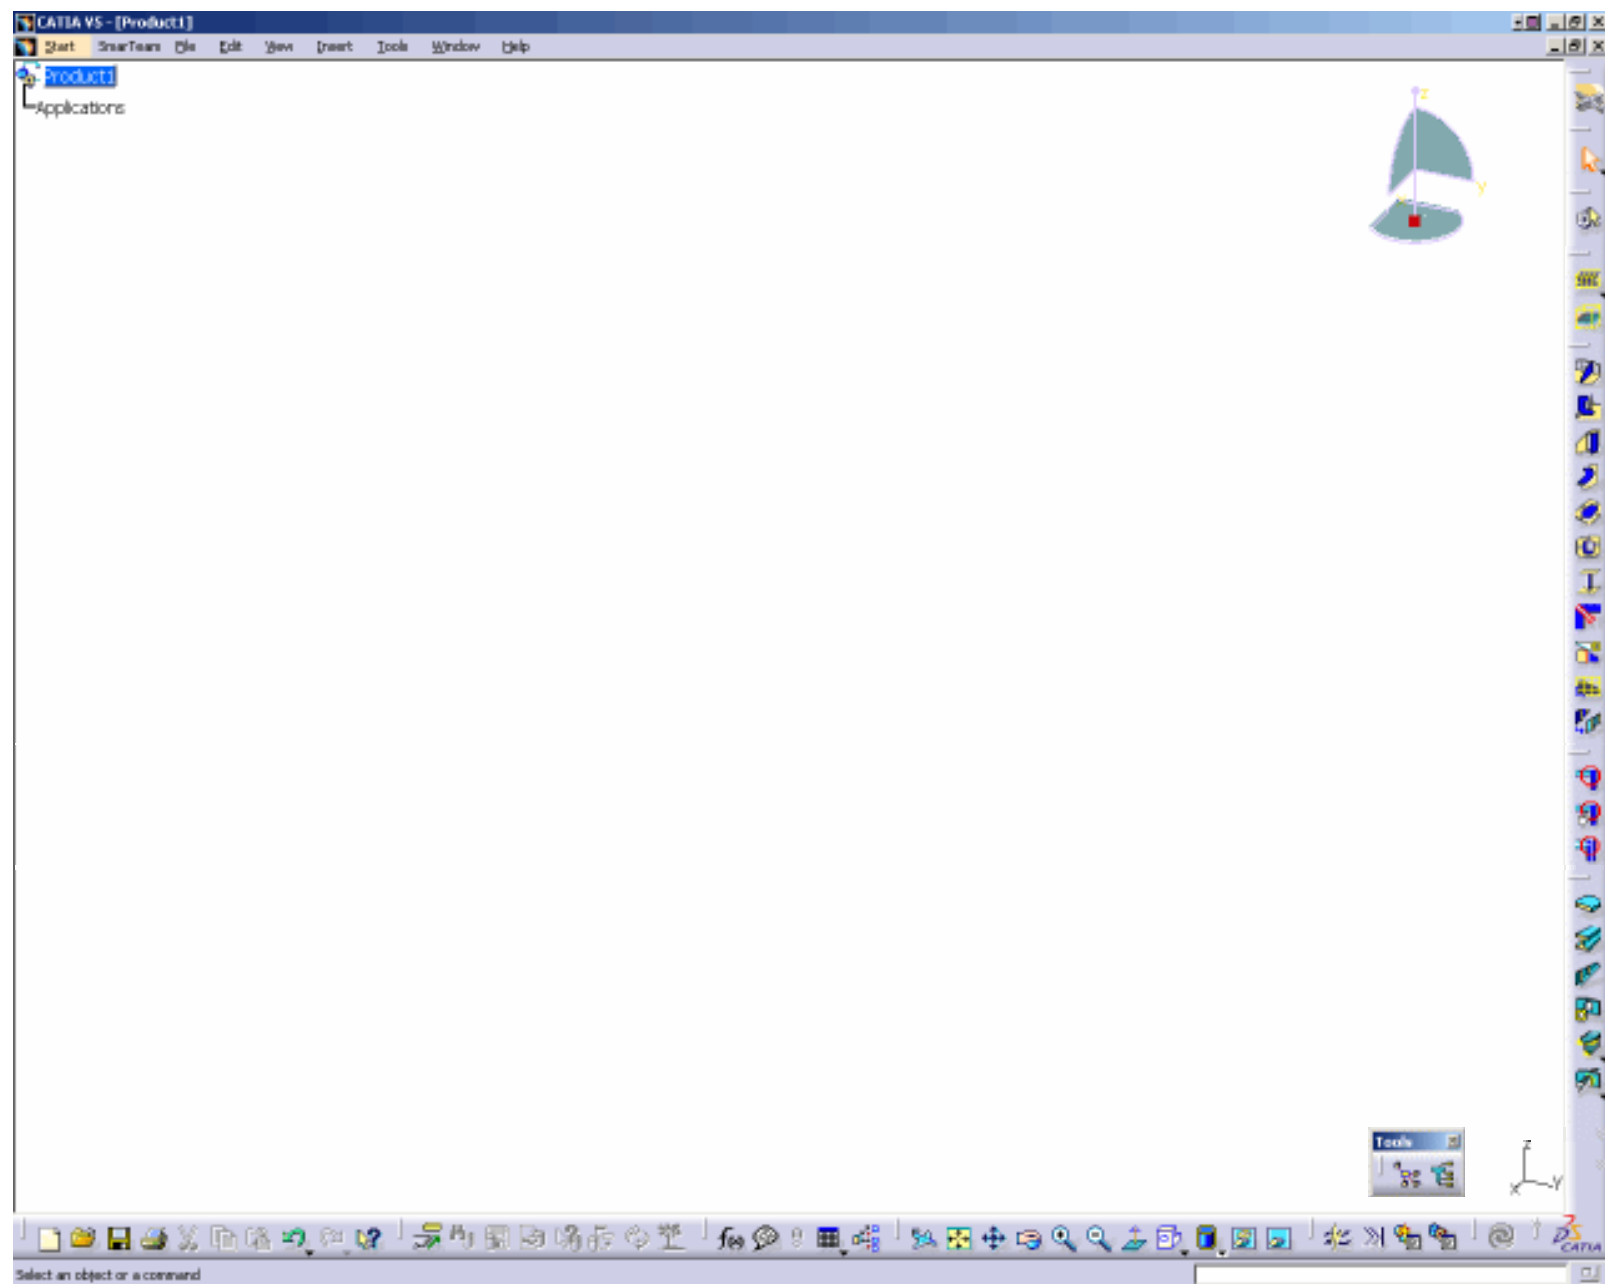

Menu Bar

Block Toolbar

Structural Systems Toolbar

System Interactions Toolbar

Physical Plates & Shapes Toolbar

Tools Toolbar

Keyboard Shortcuts

Menu Bar

This section presents the menu bar tools and commands dedicated to Ship Structure Detail Design.



Insert

For...

See...


A screenshot of the 'Insert' menu. The menu is open, showing options: Object, New Component, New Product, New CDM Component, New Part, Existing Component..., and Document Template Creation... Below these are four sub-menus: Block Scheme, Structural System, System Interactions, and Physical Plates & Shapes, each with a right-pointing arrow. The 'Insert' menu title is highlighted in a dark blue bar.

| | |
|----------------------------|---|
| Document Template Creation | Creating small assembly templates |
| Block Scheme | Splitting design into blocks |
| Structural System | Creating structural systems |
| System Interactions | Connecting structural elements |
| Physical Plates & Shapes | Creating physical plates & shapes |

Tools

For...

See...

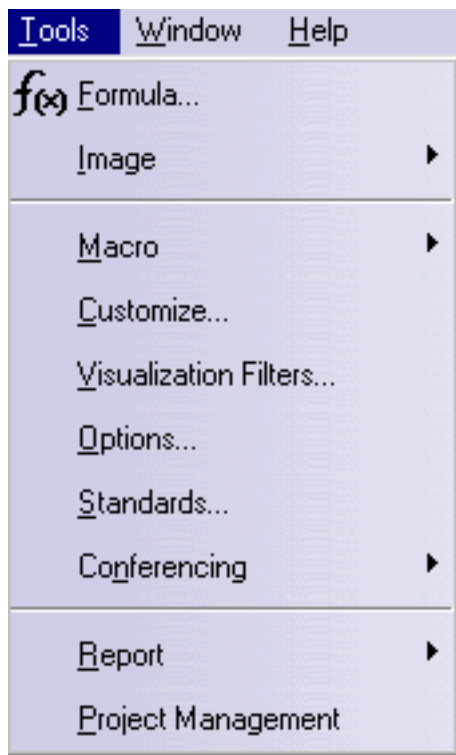

Project Management [Understanding project resource management](#)

Block Toolbar



Building the block scheme



also covers



Generating detail design blocks

Structural Systems Toolbar



Creating a plating system



Creating plating with free edge



Creating stiffening systems



Creating stiffening on free edge



Creating inserting systems



Creating openings



Creating beaming systems



Mitering



System split



Straking



Generating plates & shapes

System Interactions Toolbar




Automatically connecting structural elements

Manually connecting structural elements

Refining or modifying your connections

Physical Plates & Shapes Toolbar

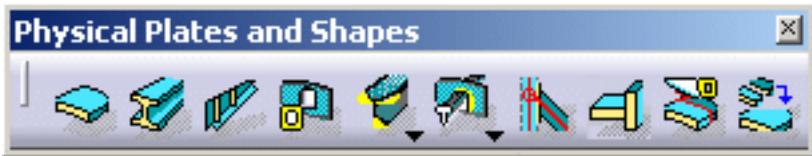

Creating Plates

Creating Shapes

Creating Small Assemblies

Creating Cutouts

Placing Standard End Cuts

Placing Contextual End Cuts

Placing Slots

Placing Generic Slots

Defining Cutback

Coping Plates & Shapes

Splitting Plates & Shapes

Merging Plates & Shapes

Tools Toolbar



Design Assistant



Naming section characteristics

Keyboard Shortcuts

Useful shortcuts for Ship Structure Detail Design commands are listed below. For general keyboard shortcuts, see the *Infrastructure User's Guide*.

Use this keyboard combination... To run...

| | |
|-------------|--|
| Alt + I + B | Block commands |
| + B | the Block Scheme command |
| + 3 | the 3D Grid command |
| + D | the 3D Merge command |
| + L | the Block command |
| + S | the Split by Block command |
| Alt + I + S | Structural systems commands |
| + P | the Plating command |
| + L | the Plating with Free Edge command |
| + S | the Stiffening command |
| + T | the Stiffening on Free Edge command |
| + I | the Inserting command |
| + O | the Opening command |
| + B | the Beaming command |
| + M | the Mitering command |
| + R | the Straking command |
| + G | the Generating Plates & Shapes command |
| Alt + I + Y | System interactions commands |
| + A | the Automatic Connection command |
| + M | the Manual Connection command |
| + C | the Connection Body command |
| Alt + I + H | Physical plates and shapes commands |
| + P | the Plate command |
| + S | the Shape command |
| + M | the Small Assemblies command |
| + E | the Endcut command |
| + C | the Contextual Endcut command |

| | |
|-----|---------------------|
| + L | the Slot command |
| + U | the Cutback command |

Another useful shortcut

Clicking an icon runs the command associated with the icon once only. However, double-clicking an icon lets you use the associated command as many times as you want without having to repeatedly click on the icon.

Reference Information

Reference information that is specific to the Ship Structure Detail Design product can be found in this section.

[User Features](#)

[Catalog Slots, Endcuts and Small Assemblies](#)

User Features



The information in this section concerns user features supplied with the Ship Structure Detail Design product that will help you in your design.

In the Wireframe and Surface Design workbench (**Start -> Mechanical Design -> Wireframe and Surface Design**), select **Insert -> Instantiate from Document...** from the menubar, then select the user feature of interest.

- [CurveOrientation.CATPart](#) to define a stable line
- [SurfaceOrientation.CATPart](#) to define a stable surface


Features are to be found in folder

..\OS\startup\EquipmentAndSystems\Structure\DetailingFeatures\SampleData.

CurveOrientation.CATPart

This user feature generates an oriented line (in bold blue) and two points, one at each end of the line. The start point is represented by a green circle and the end point by a white cross. CurveOrientation.CATPart has two inputs and one parameter:


- a curve or line you want to orient
- a reference surface
- a parameter determining line orientation by defining whether or not the starting point of the line is the nearest element to the reference surface. By default, the starting point is the point nearest the reference surface.

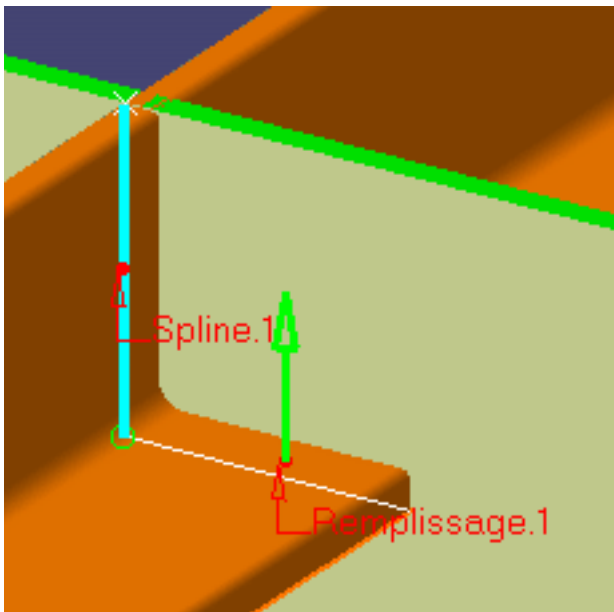

SurfaceOrientation.CATPart

This user feature generates an oriented surface (surface normal oriented in desired direction). SurfaceOrientation.CATPart has two inputs and one parameter:

- a. a surface you want to orient
- b. a reference point
- c. a parameter determining surface orientation towards or away from (outward) the reference point. By default, the surface normal is oriented away from the reference point.

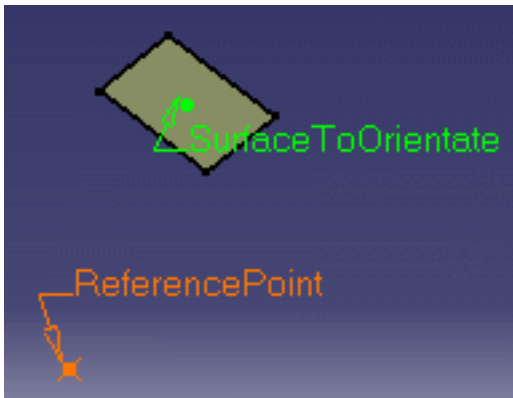

For more information, see [Managing User Features](#).



Catalog Slots, Endcuts and Small Assemblies

This section contains information on parametric features (slots, endcuts and small assemblies) supplied with product and ready to place in documents.

[T-Shape Endcuts](#)

[L-Shape Endcuts](#)

[Bulb-Shaped Endcuts](#)

[T-Shape Slots](#)


[L-Shape Slots](#)

[Bulb-Shape Slots](#)


T-Shape Endcuts

Name


T-A49H

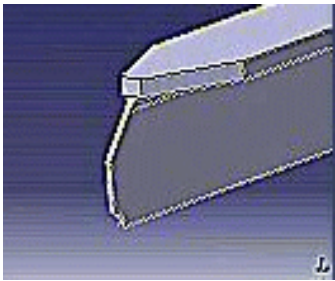


T-A49SH

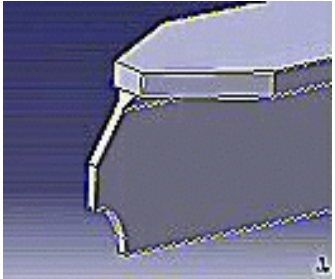


T-A49XH

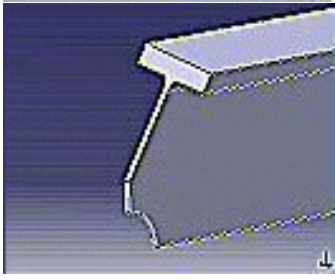


T-A58H

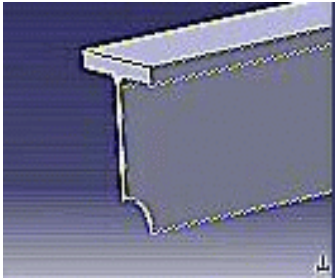

T-A70LSH

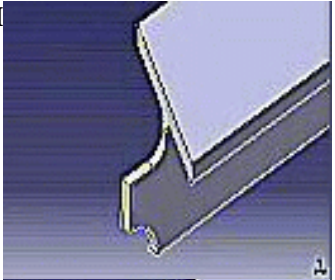


T-A70RSH

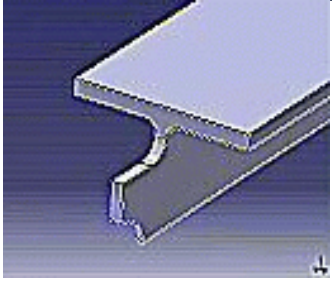


Name


T-E70LFH

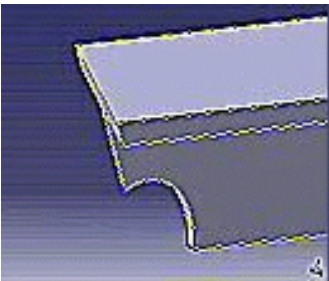


T-E70LSH

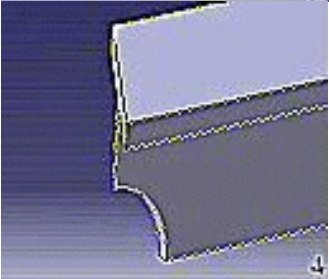


T-E70LWH

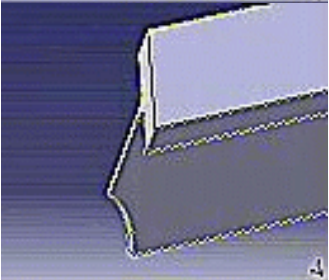


T-E70RFH

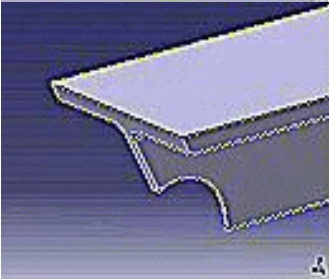


T-E70RSH

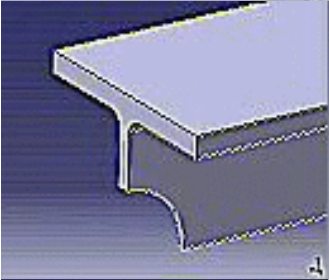


T-E70RWH

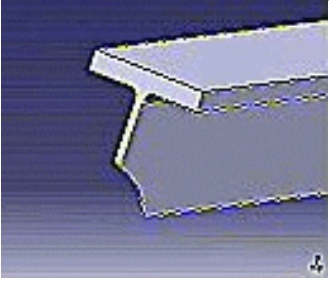

T-A9NSSH

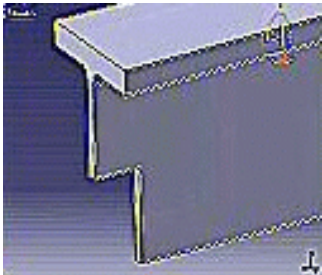


T-A9SWH

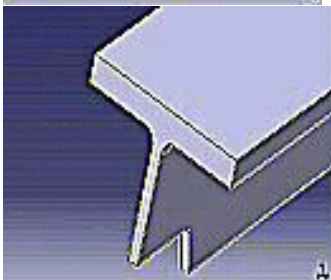


T-A9XSSH




T-B55DH

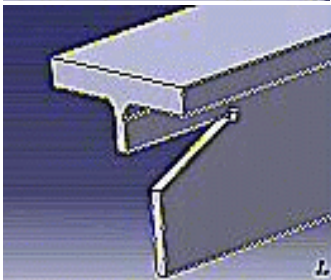


T-F70LWH

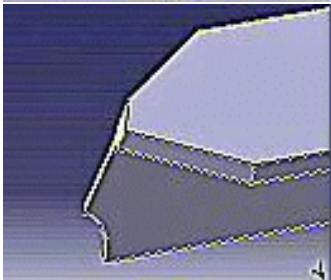


T-F70RFH

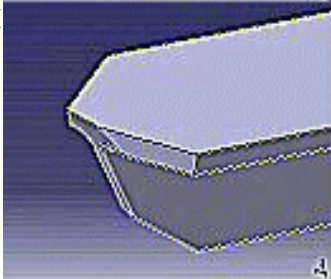


T-Endcut1

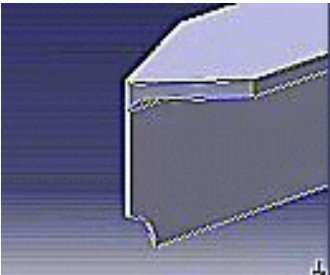


T-F70CH

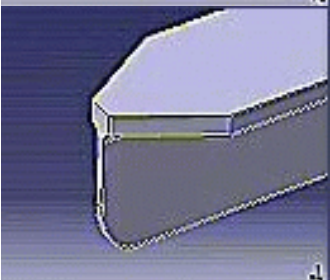


T-F70H

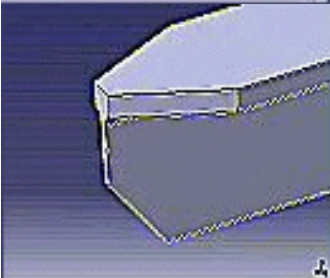


T-F70LFH

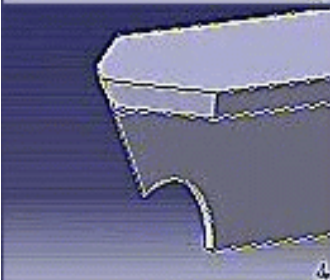

T-
F70RWH

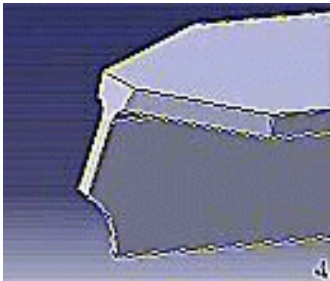


T-X70LSH

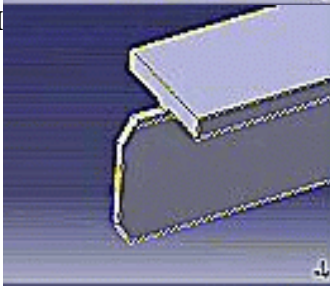


Parameters



Flange
angle
(P1)
Shoulder
width
(P2)
Web
length
(P3)
Web
height
(P4)
Snipe
radius/leg
(P5)

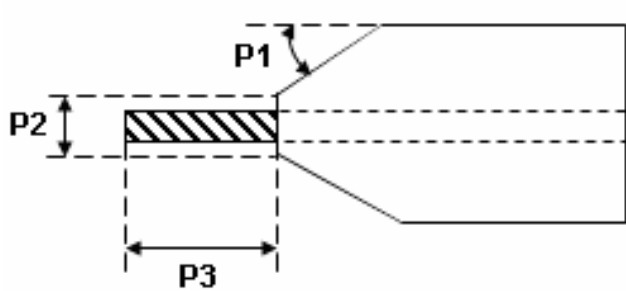

Web angle (P6)

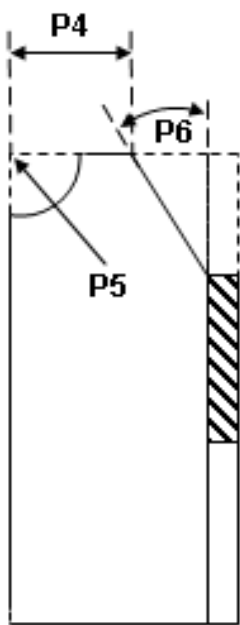

Flange
length 1
(P7)
Flange
length 2
(P8)
Cope
depth
(P9)
Cope
radius
(P10)

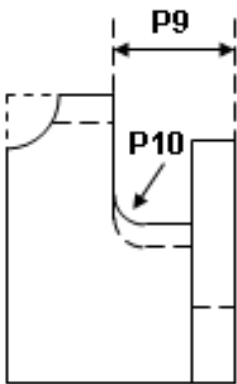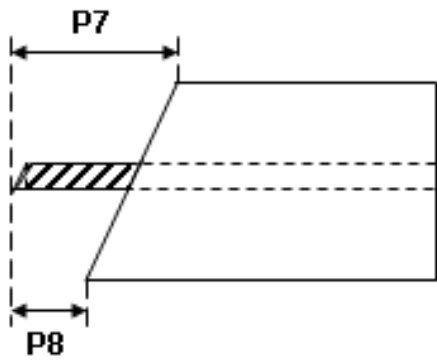


The diagram shows a rectangular structure. The top section is defined by a dashed line. The width of this top section is labeled P11, and its height is labeled P12. The bottom section is a solid rectangle. The top section is positioned above the bottom section, and its width P11 is less than the width of the bottom section.

P21


L-Shape Endcuts

Name


L-A49SH

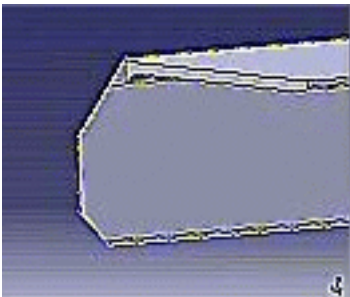


L-A58H

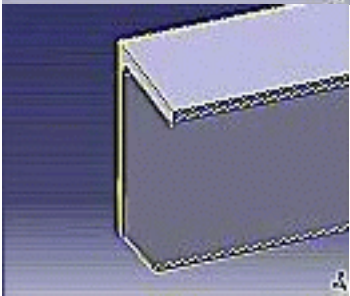


L-A58TH

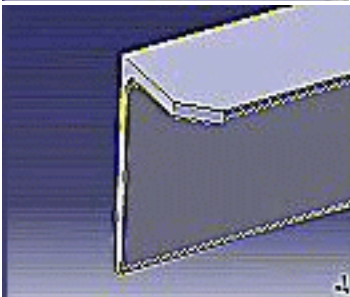

L-A70LSH

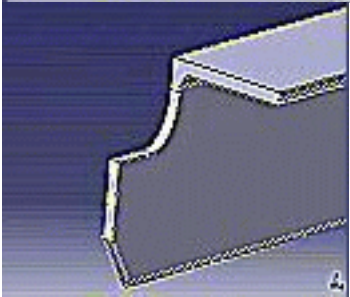


L-F70H

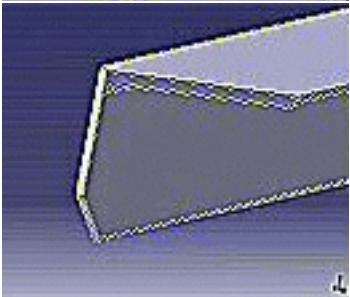


Parameters

Name


L-F70SFH

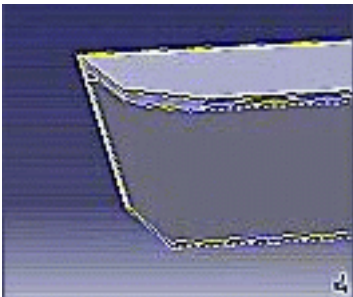


L-F70SWH

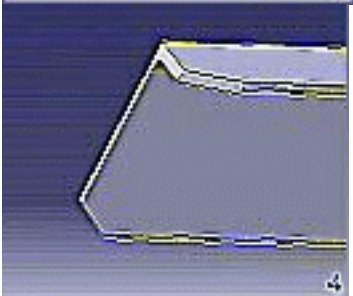



L-FCOPEH-1

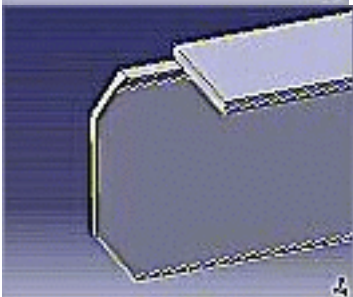


L-FCOPEH-2

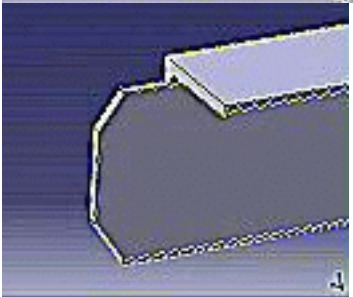



Flange
angle (P1)
Web angle
(P2)
Web length
(P3)
Snipe
radius/leg
(P4)

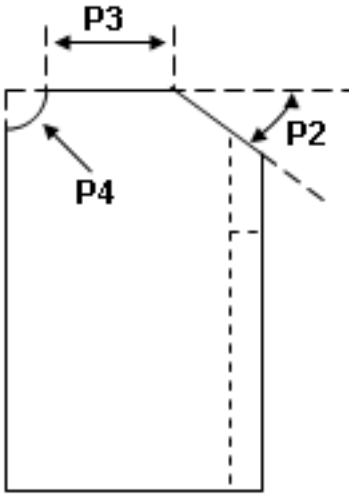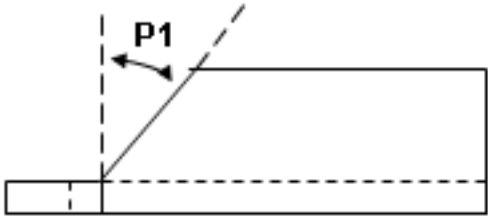


Flange
snipe length
(P5)
Flange
snipe width
(P6)

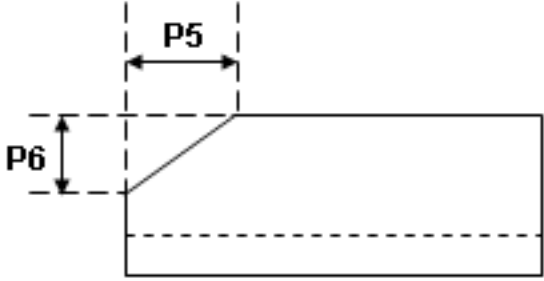

Cope depth
(P7)
Cope radius
(P8)
Cope length
(P9)

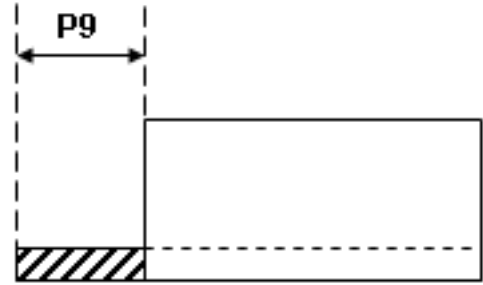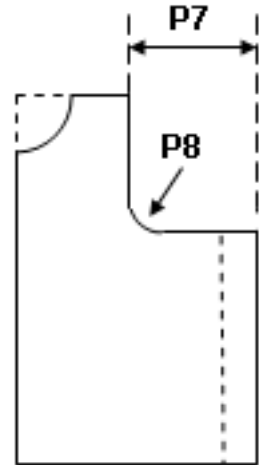


Angle (P10)

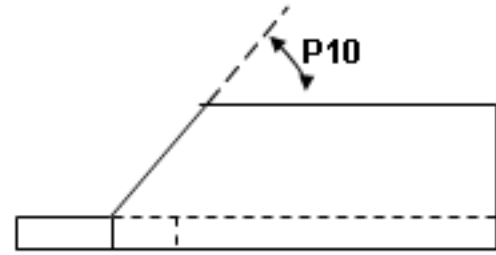


Bulb-Shaped Endcuts

Name


HP_P0

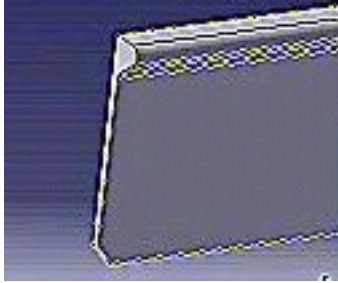


HP_P5

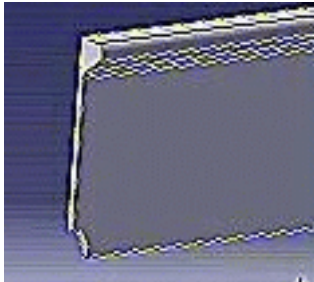

HP_P6

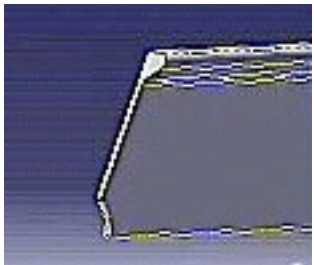

HP_P14

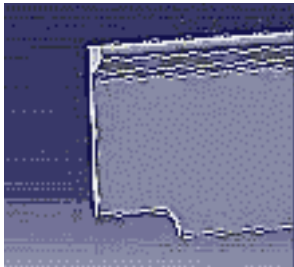


HP_P15




Name


HP_P24

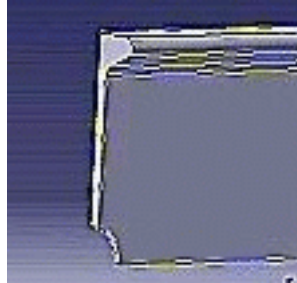


HP_P26

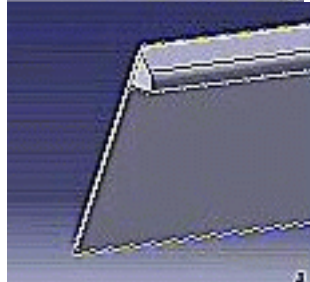


HP_P27

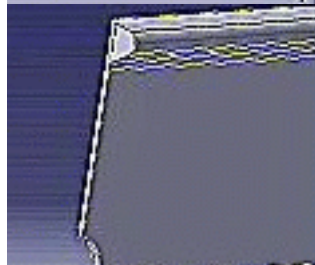


HP_P29

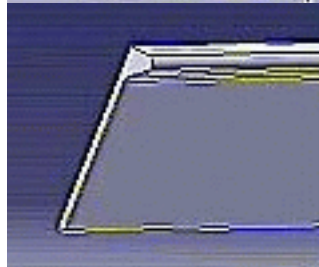


HP_P41

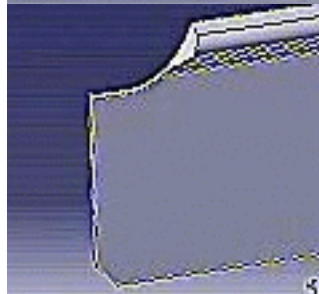


HP_P17

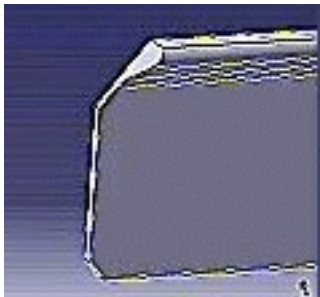


HP_P18

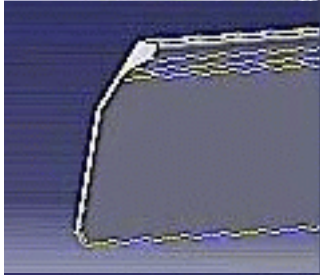


HP_P19

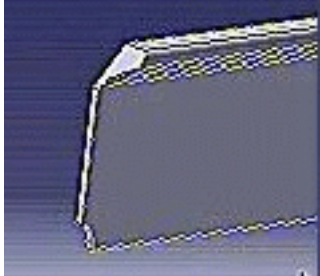


HP_P20

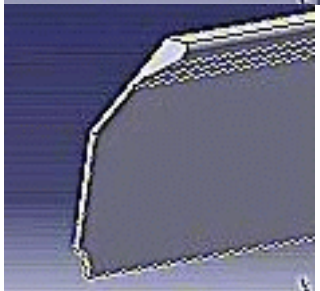


HP_P23

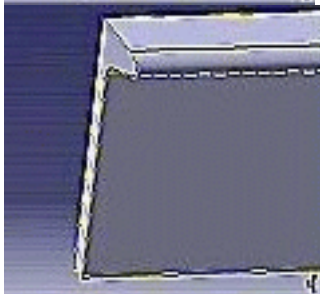

HP-
ANGLH

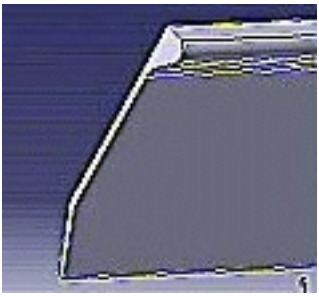


HP-
ANGSH

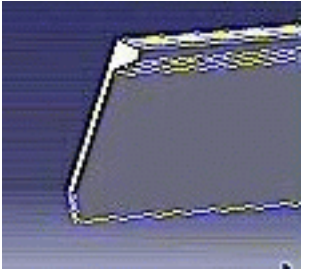



Parameters

Distance 1
(P1)
Offset 1
(P2)

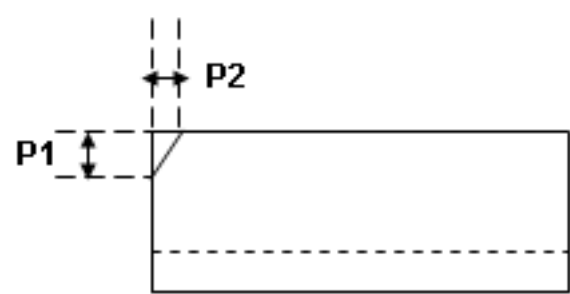


Radius
1 (P3)

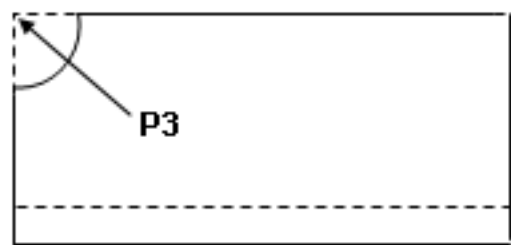


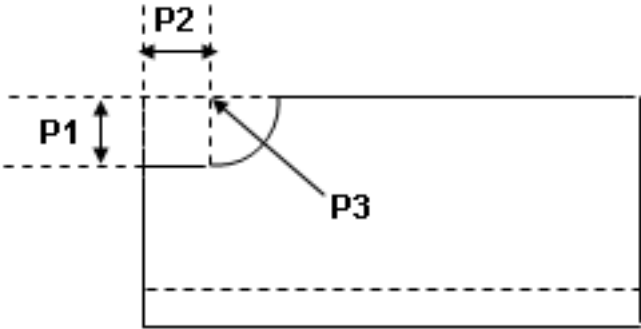


Computed
angle (P4)

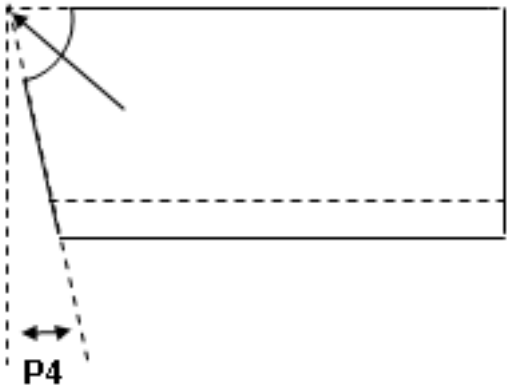

Distance 2
(P5)
Angle 2
(P6)

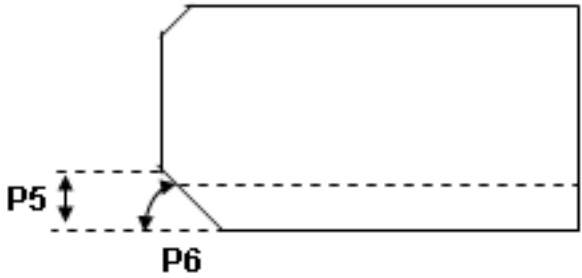

Distance
3 (P7)

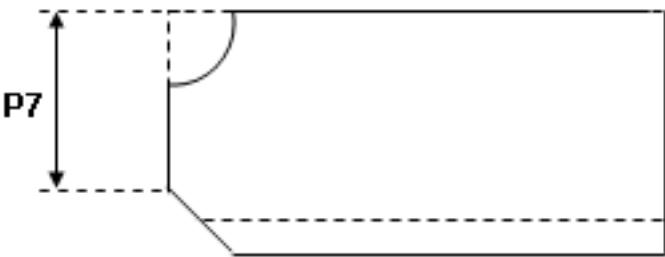


T-Shape Slots

NamePublished
Parameters


T-516None



T-520None

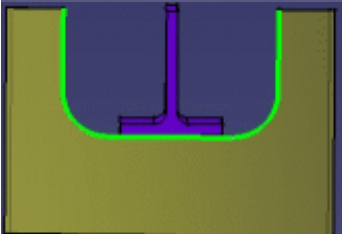

T-920None

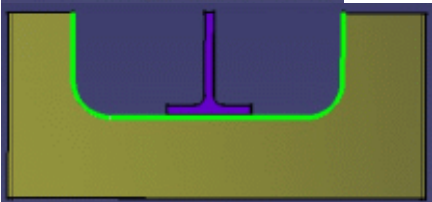


T-921None




T-932Snipe (P1)




T-933Snipe (P1)

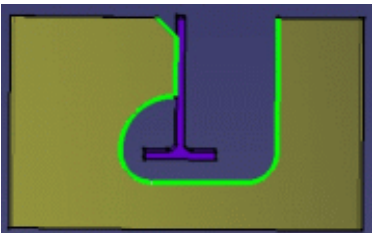


T-938None

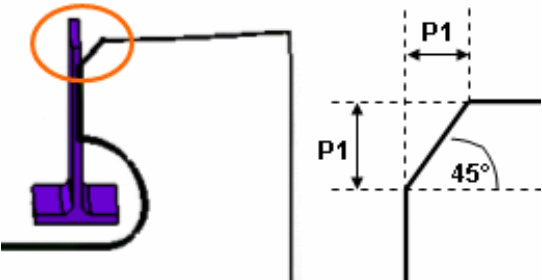


T-939 None

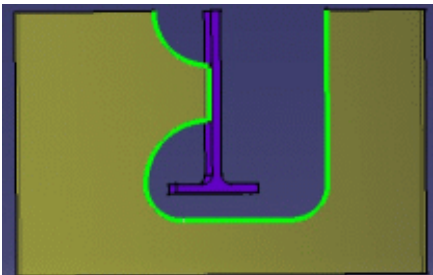



T-940 Snipe (P1)

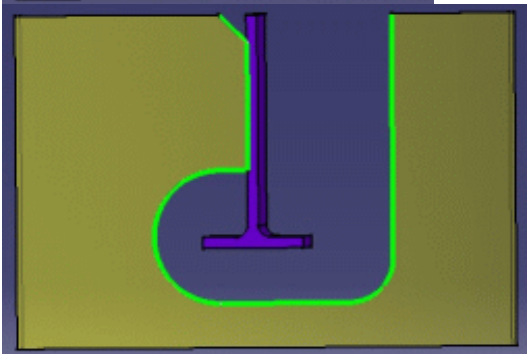



T-941 Snipe (P1)

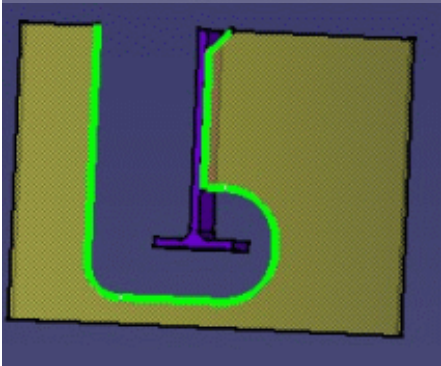



T-941b Side clearance 1 (P2)
Side clearance 2 (P3)
Flange clearance 1 (P4)
Flange clearance 2 (P5)
Radius 1 (P6)
Radius 2 (P7)
Radius 3 (P8)

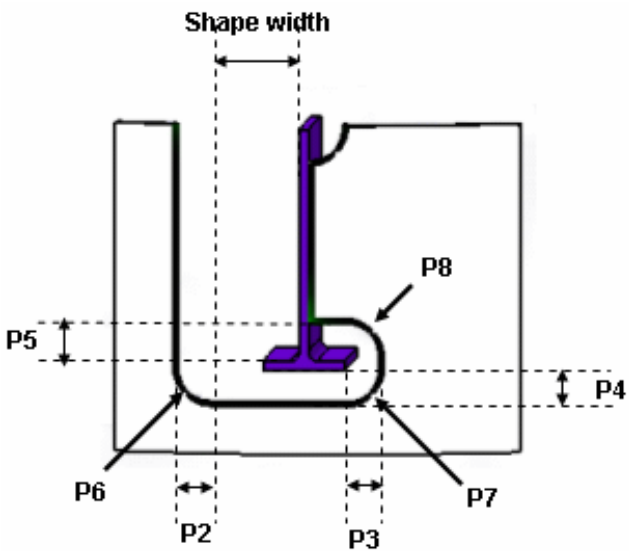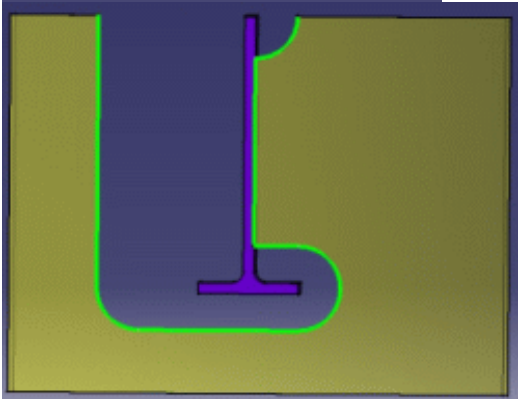



CC-10 Side clearance with angle (Sc)
Flange clearance (Fc)
Radius (R)
Angle (A)

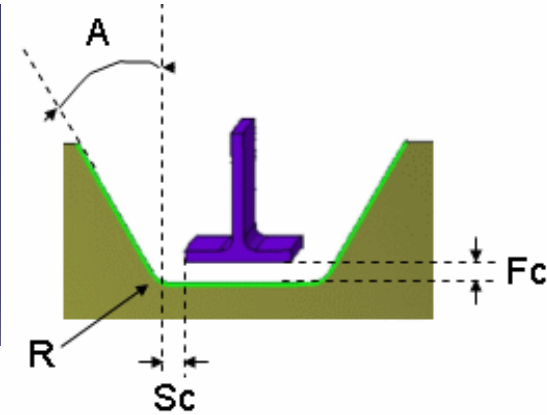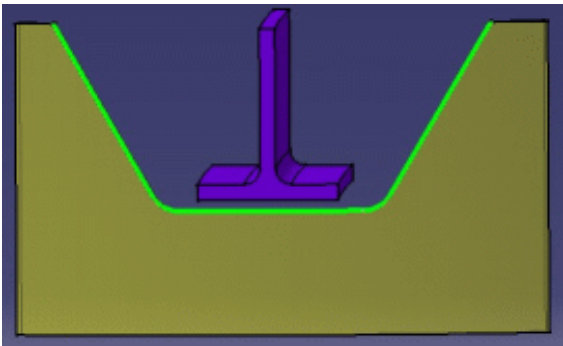

RS-5 Radius 1
(P12)
Radius 2
(P13)
Side clearance
1 (P9)
Side clearance
2 (P10)
Side clearance
3 (P11)

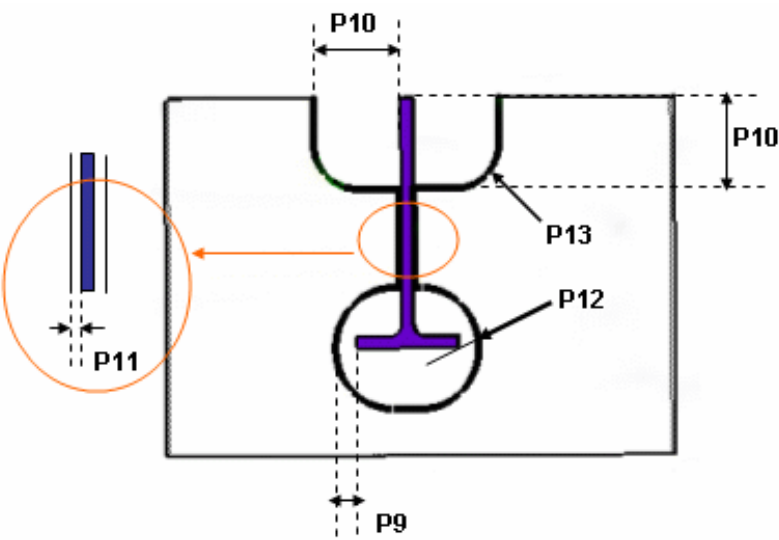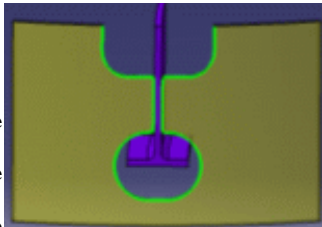



RS-6 Radius 1
(P14)
Radius 2
(P15)
Side clearance
(P16)

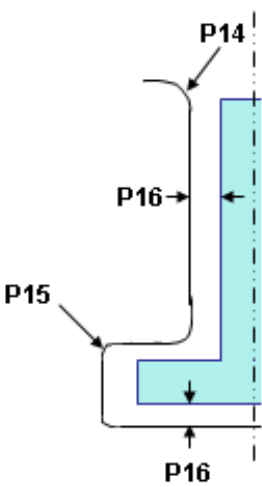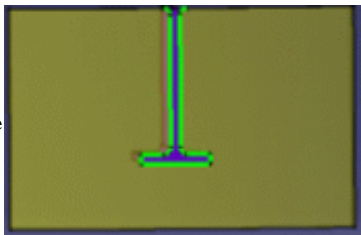



L-Shape Slots

Name Published
Parameters


CC-4 Snipe (P1)
Flange
clearance (P2)
Radius (P3)
Side clearance
(P4)
Angle (P5)

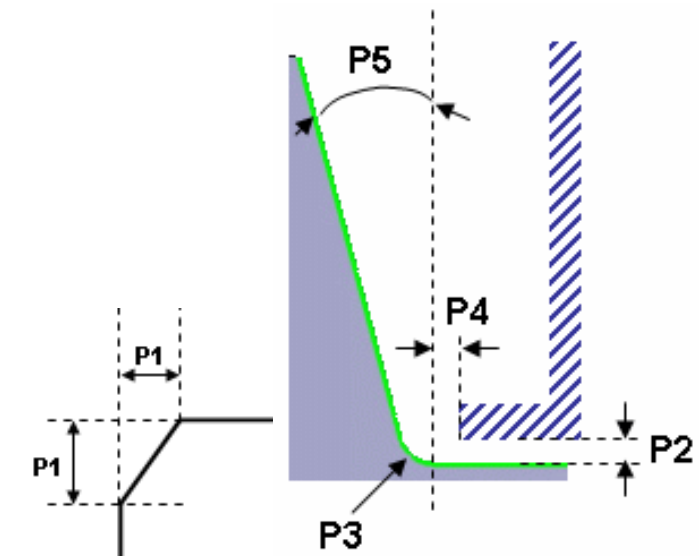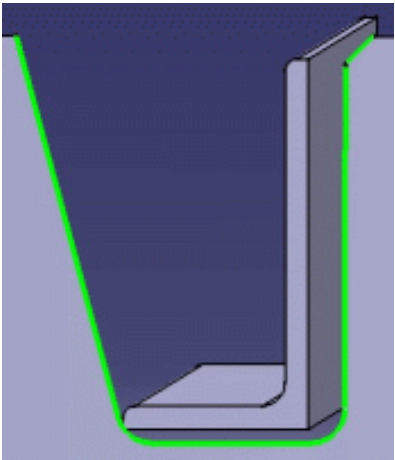



CC-5 Flange
clearance (P2)
Side clearance
1 (P6)
Side clearance
2 (P7)
Radius (P3)
Angle (P5)

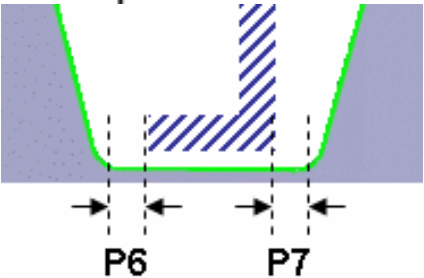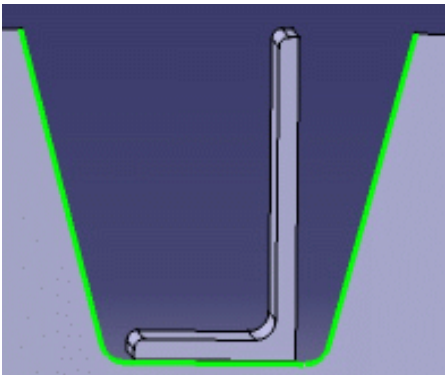


CC-6 None

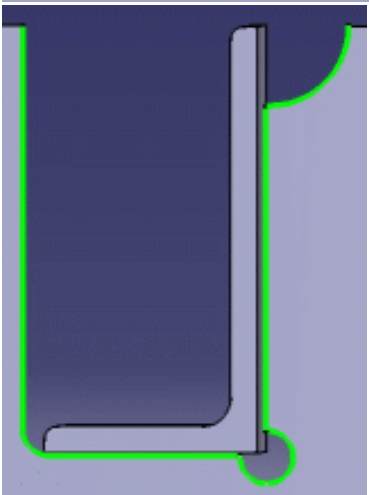


CC-7 Snipe width (P8)
Snipe height (P9)
Side clearance (P4)
Flange clearance (P2)
Radius 1 (P10)
Radius 2 (P11)

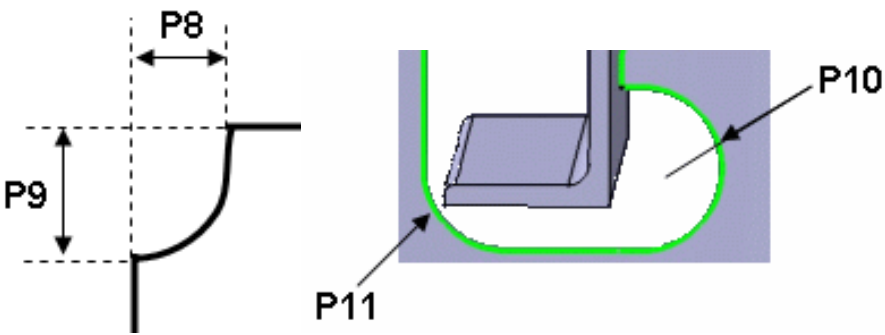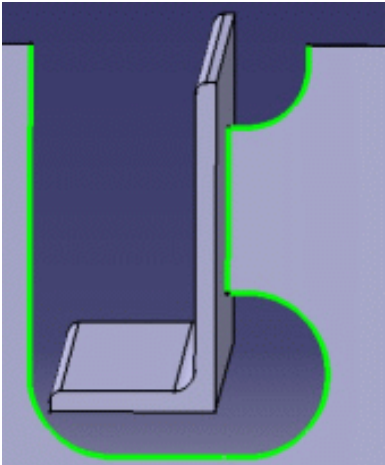



CC-8 None

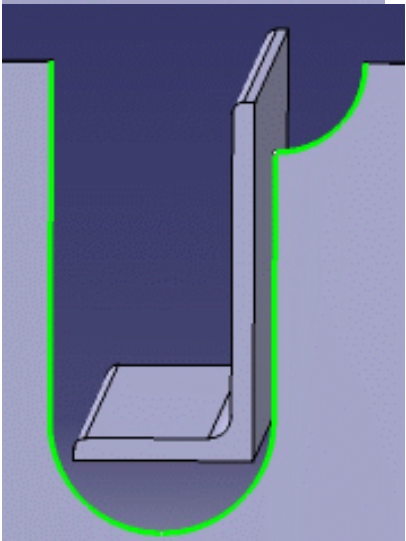



CC-9 None

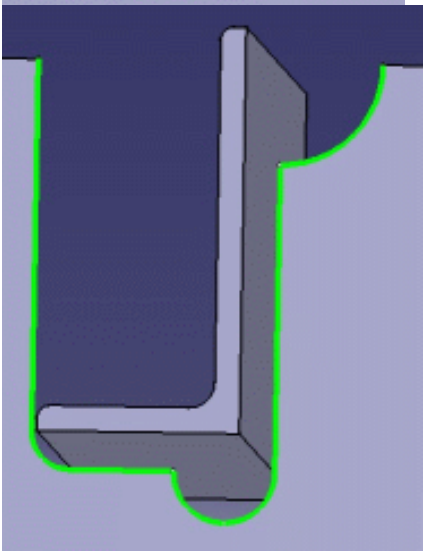

RS-3 Clearance
(P12)
Radius (P13)
Snipe (P1)

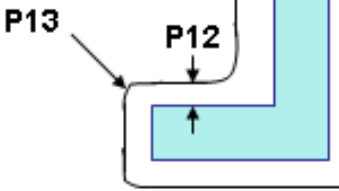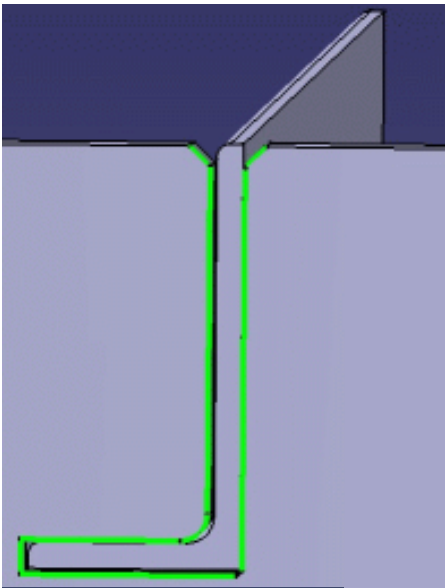



RS-4 Side clearance
1 (P14)
Side clearance
2 (P15)
Side clearance
3 (P16)
Radius 1
(P17)
Radius 2
(P18)

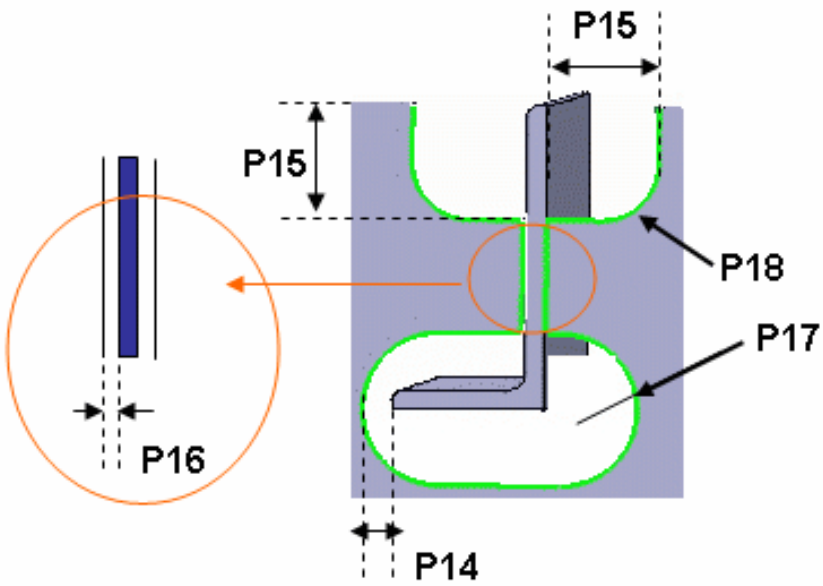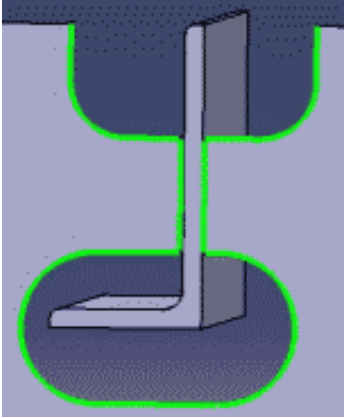

Bulb-Shape Slots


Name Published
Parameters

HP_1230 Assembly
clearance (P1)

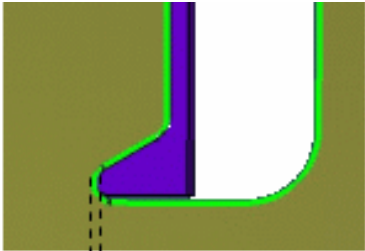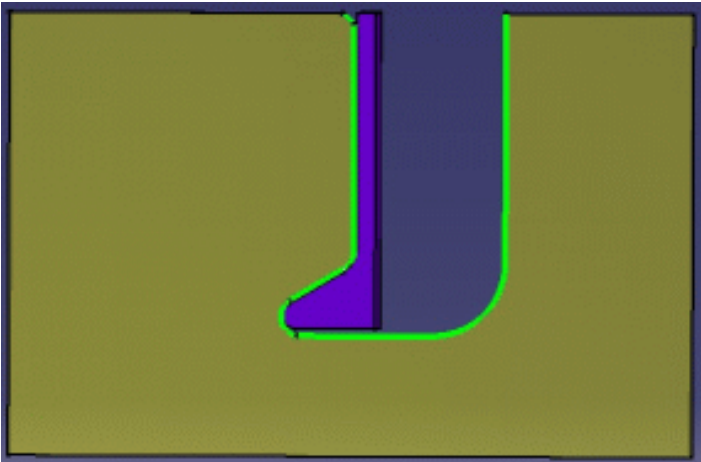


P1 → ←


HP_1232 Assembly
clearance (P1)

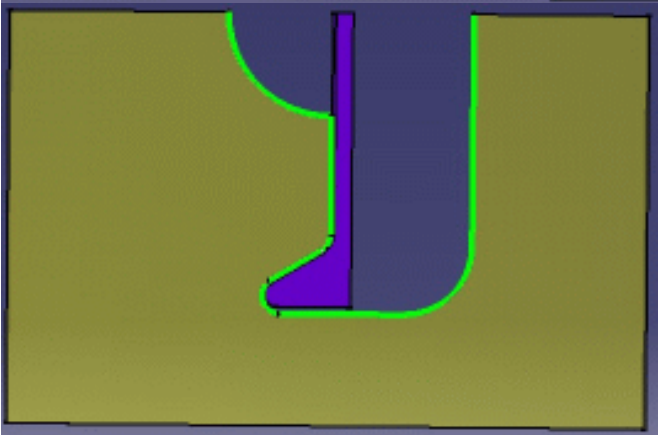


HP_NR_900_ANone

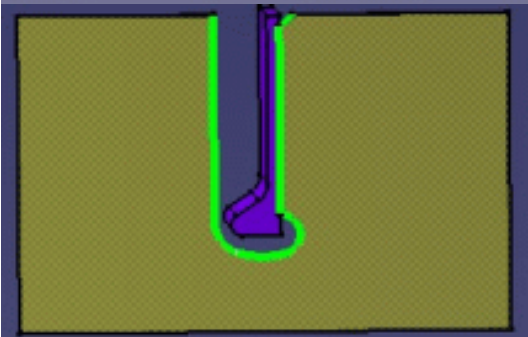



HP_NR_900_BNone

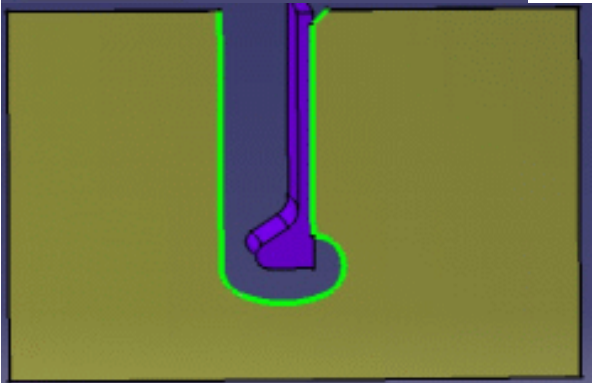

HP_NR_900_CNone

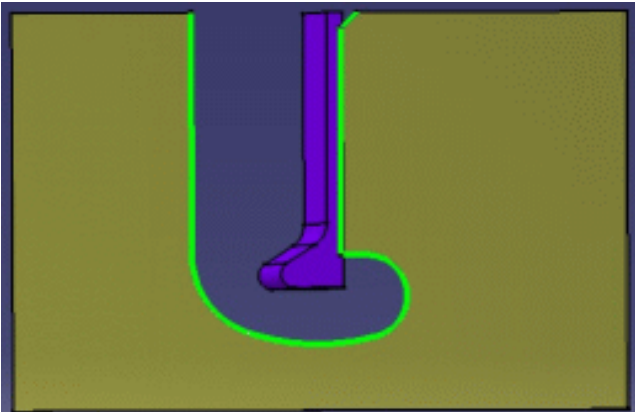

HP_NR_900_DRadius (P2)

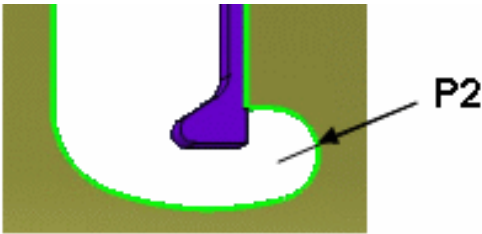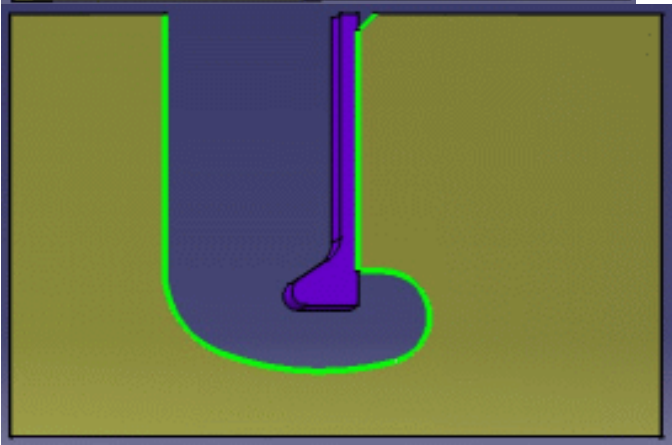

Glossary

[A](#) [B](#) [C](#) [D](#) [E](#) [F](#) [I](#) [M](#) [P](#) [S](#) [T](#)



A

attribute Characteristics of an object such as thickness, material, throw orientation. Also referred to as properties.



B

beaming system A functional system defined by two intersecting planes and two limits.


block scheme Determines the basic block definition of the ship.



C

connecting system Establishes functional connectivity between structural elements. Typical examples are plate to plate connections, plate to stiffener connections and stiffener to stiffener connections. Physically implemented downstream by means of joints and piece parts (chocks, transitions, brackets, etc.).

cutout The removal of a portion of a plating part, usually along one of its edges. Typical cutouts are rat holes and snipes. See also structural openings.

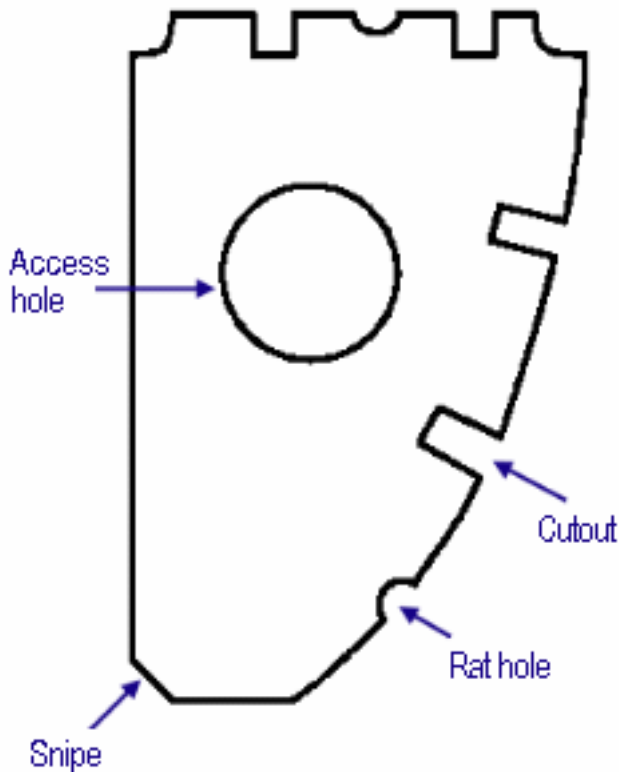

D


detail design block A section of the ship generated by applying a block scheme block to the functional design. A block is a 3-D entity.

detail design view The design view that documents a ship's structure in the 'as built' or 'as assembled' stage.



E

endcut A cutting detail.

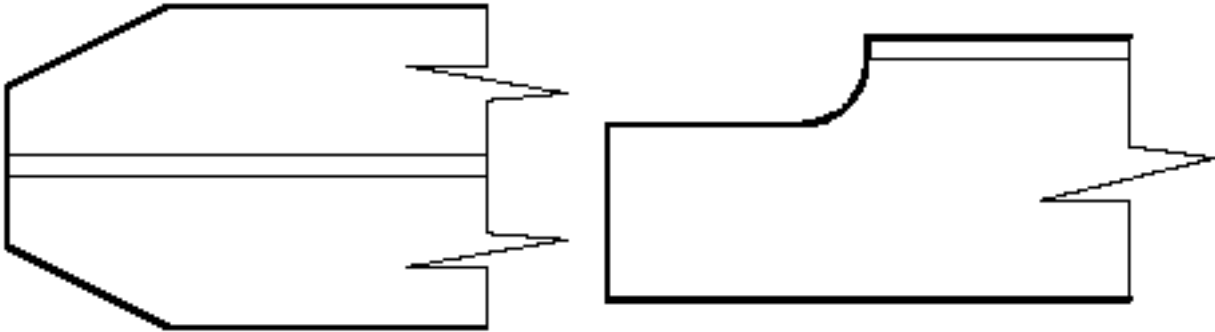

F

feature dictionary The document in which object classes are managed.

free-edge stiffener A structural shape used to stiffen the free edge of plating parts (i.e. part boundaries that do not connect to any other part). Typical examples are faces on free edges and coamings.

functional molded form A functional surface derived from a conceptual surface. You can define more than one functional molded form from a conceptual surface.



I

inserting system A special type of plating system.



M

molded convention A set of rules that give default orientations when placing structural elements, thereby ensuring structural continuity. These conventions are described in an XML file reference in the Project Resource Management (PRM) file.



P

paneling system The top level structure detail design object. This object contains a molded form and is created automatically when you create a plating system. It groups all plating and stiffening systems having the same molded form.

piece part Typically, chocks, transitions, brackets, etc.

plate A plate part is a part cut from flat raw material stock, which may later be rolled or bent to a non-planar shape.

plating system A functional system having a molded surface as support and defined by selecting limits, or limits and a free edge.

project resource Resources, like the feature dictionary, managed by system administrators in the Project Resource Management file.

property Characteristics of an object such as thickness, material, throw orientation. Also referred to as attributes.



S

| | |
|----------------------------|--|
| section | Describes the shape representation of a stiffening part. |
| slot | A hole allowing penetration of another part. |
| standard part | Connections and joints. Typical examples are brackets. |
| stiffener | A structural shape used to stiffen plating parts. Shapes are usually welded to parts they stiffen. Cross-sections can be selected from a catalog. |
| stiffening system | A functional system defined by a web support and limits. |
| structural openings | An opening in a host part to reduce weight, provide accessibility or allow penetration of another part. Typical openings are lightening holes, access holes and penetration holes. |



T

| | |
|--------------------------|---|
| throw orientation | See molded convention . |
| trace | Defines the path of a structural shape. |

Index






9 A B C D E F G H I K M N O P R S T U W

Numerics

- 2D Grid command 
- 2D Merge command 
- 3D Grid command 
- 3D Merge command 












A

- analyzing
 - object relations 
- applying
 - block scheme 
- attribute 
- Automatic Connection command 
- automatic connectivity 


































B












- Beaming command 
- beaming system 
- Block command 
- block scheme 
 - applying 
 - building 
- Block Scheme command 
- building
 - block scheme 









C

- catalog
- endcut
- slot
- small assembly
- command
- 2D Grid
- 2D Merge
- 3D Grid
- 3D Merge
- Automatic Connection
- Beaming
- Block
- Block Scheme
- Connection Body
- Contextual Endcut
- Contextual Slot
- Cutback
- Cutout
- Design Assistant
- Endcut
- Generating Plates and Shapes
- Inserting
- Manual Connection
- Merge
- Mitering
- Name Section Characteristics
- Opening
- Plate
- Plating










Plating with Free Edge 
Shape 
Small Assemblies 
Split 
Split by Block 
Standard Slot 
Stiffening 
Stiffening on Free Edge 
Straking 
System Split 
connecting system 
Connection Body command 
connectivity
automatic 
connection body 
manual 
modifying 
contextual endcut 
Contextual Endcut command 
contextual slot 
Contextual Slot command 
coping 
creating
catalog 
catalog endcut 
catalog slot 
catalog small assembly 

opening 
plate 
plating system 
plating with free edge 
shape 




- small assembly 
- stiffening on free edge 
- stiffening system 
- customizing
 - standard views 
- Cutback command 
- cutout  
- modifying 
- placing 
- removing 
- Cutout command 



- ## D
- Design Assistant command 
 - detail design block  
 - detail design from scratch 
 - detail design view 
 - document templates
 - small assemblies 












- ## E
- editing
 - plating system  
 - plating with free edge 
 - stiffening system 
 - endcut 
 - catalog 
 - contextual 
 - standard 
 - Endcut command 

ENOVIA LCA integration 
recommended methodology 
workpackage 



F

feature
contextual endcut 
contextual slot 
cutout 
standard endcut 
standard slot 
feature dictionary 
free-edge stiffener 
functional molded form 







G

Generating Plates and Shapes command 





I

Inserting command 
inserting system 
interoperability with ENOVIA LCA 

















K

keyboard shortcuts 
knowledge expert 





M

- Manual Connection command 
- manual connectivity 
- Merge command 
- merging
 - plate 
 - shape 
- Mitering command 
- modifying
 - connectivity 
 - cutout 
 - merge plates and shapes 
 - split plates and shapes 
 - standard slot 
 - trim shape 
- molded convention 
- molded conventions 







N

- Name Section Characteristics command 
- naming rules 



O

- object naming rules 
- object relations 
- opening
 - catalog 
 - creating 

- parametric contours
- positioning strategies
- Opening command
- opening system
- openings catalog
- Options settings





P

- paneling system
- physical plates and shapes
 - generating
- piece part
- placing
 - contextual endcut
 - contextual slot
 - cutout
 - standard endcut
 - standard slot
- plate
 - merging
 - modifying and deleting cutouts
 - modifying and deleting slots
 - splitting
- Plate command
- Plating command
- plating system
 - creating
 - editing
- plating with free edge
 - creating
 - editing

Plating with Free Edge command 


project parameters 

project resource 

project resource management 

Access field 

file 

Location field 

selecting project 

Type field 


Visible 

property 


publication based connections in PRM 




R

related objects 

removing

cutout 

standard slot 



S

section 

characteristics 


shape 

merging 


modifying and deleting cutouts 



modifying and deleting slots 


splitting 


trim to plane 


Shape command 


slot 


catalog  


contextual 


standard 


Small Assemblies command 

small assembly 


catalog 


creating 


Split by Block command 


Split command 

splitting


plate 


shape 


standard endcut 


standard part 


standard slot


modifying 


placing 

removing 


Standard Slot command 


start from scratch 


stiffener 


Stiffening command 


stiffening on free edge


creating 


Stiffening on Free Edge command 


stiffening system 


creating 


editing 











mitering 


straking 

merging grid cells 

Straking command 




structural openings 
system

- beaming 
- generating plates and shapes 
- inserting 
- opening 
- plating 
- plating with free edge 
- split 
- stiffening 
- stiffening on free edge 
- straking 

System Split command 










T

- throw orientation 
- trace 
- trim to plane 



U

user features

- catalog 
- CurveOrientation.CATPart 
- endcuts 
- parametric contours for openings 
- positioning strategies for openings 
- slots 
- SurfaceOrientation.CATPart 



W

workpackage

